

AGON PRO



OLED Monitor User Manual AG276QZD

Based on the characteristics of the OLED product, screen maintenance according to the requirements of the user instructions is recommended, so as to reduce the risk of generating image retention.

AOC

www.aoc.com
©2023 AOC. All Rights Reserved

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

Safety	1
National Conventions	1
Power	2
Installation	3
Cleaning	4
Other	5
Setup	6
Contents in Box	6
Setup Stand & Base	7
Adjusting the monitor	9
Connecting the Monitor	10
Wall Mounting	11
G-SYNC Compatible function(Available for selective models)	12
Adaptive-Sync function (Available for selective models)	13
HDR	14
Screen Maintenance	15
Adjusting	17
Hotkeys	17
OSD Key Guide (Menu)	18
OSD Setting	20
Game Setting	21
Luminance	23
PIP Setting	24
Color Setup	25
Audio	26
Light FX	27
Extra	28
OSD Setup	30
LED Indicator	31
Troubleshoot	32
Specification	33
General Specification	33
Preset Display Modes	35
Pin Assignments	36
Plug and Play	37

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

 The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

 The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

 Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

 Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

 To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240V AC, Min. 5A.

 The wall socket shall be installed near the equipment and shall be easily accessible.

 For use only with the attached power adapter

Manufacturers: DELTA ELECTRONICS, INC. Model: ADP-120VH D

Installation

! Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

! Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

! Do not place the front of the product on the floor.


! If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

! Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

! To avoid potential damage, for example the panel peeling from the bezel, ensure that the monitor does not tilt downward by more than -5 degrees. If the -5 degree downward tilt angle maximum is exceeded, the monitor damage will not be covered under warranty.

See below the recommended ventilation areas around the monitor when the monitor is installed -on the stand:

Installed with stand

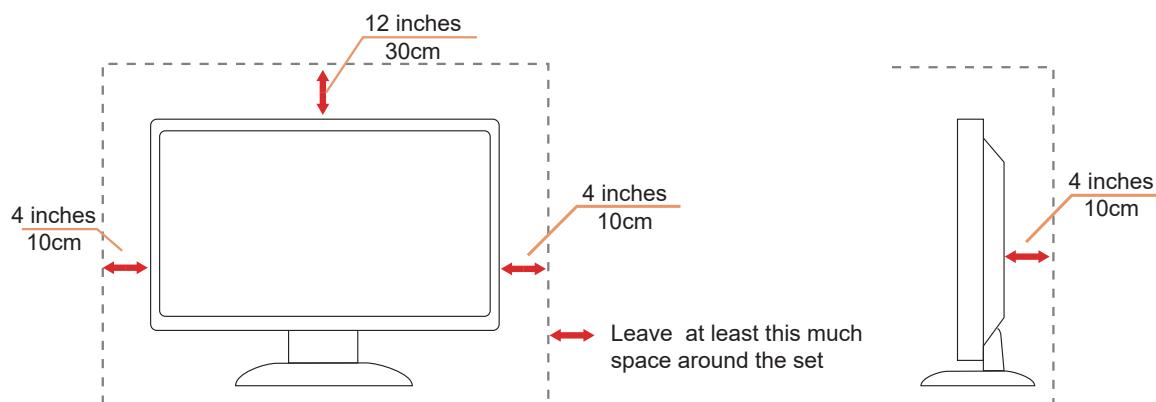

Cleaning

 Clean the cabinet regularly with a water-dampened, soft cloth.

 When cleaning use a soft cotton or microfiber cloth. The cloth should be damp and almost dry, do not allow liquid into the case.

 Please disconnect the power cord before cleaning the product.



Other

 If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

 Make sure that the ventilating openings are not blocked by a table or curtain.


 Do not engage the OLED monitor in severe vibration or high impact conditions during operation.

 Do not knock or drop the monitor during operation or transportation.


 Based on the characteristics of the OLED products, it is not recommended to continuously use this product for more than four hours. This product uses many technologies to eliminate possible image retention. For details, refer to instructions on "Screen Maintenance."

Setup


Contents in Box

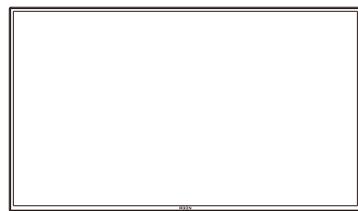


*

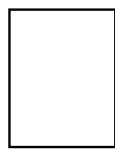


Quick Start

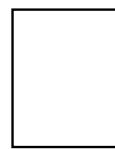


Warranty card

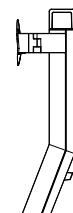

Stand

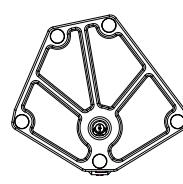

Base

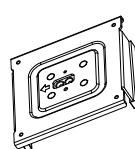

Wall Mount
Bracket



Stand
Screws



Screwdriver



Power Cable



Adaptor



DP Cable



HDMI Cable




USB Cable

*Not all signal cables will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


Setup Stand & Base

Please setup or remove the base following the steps as below.


Setup:

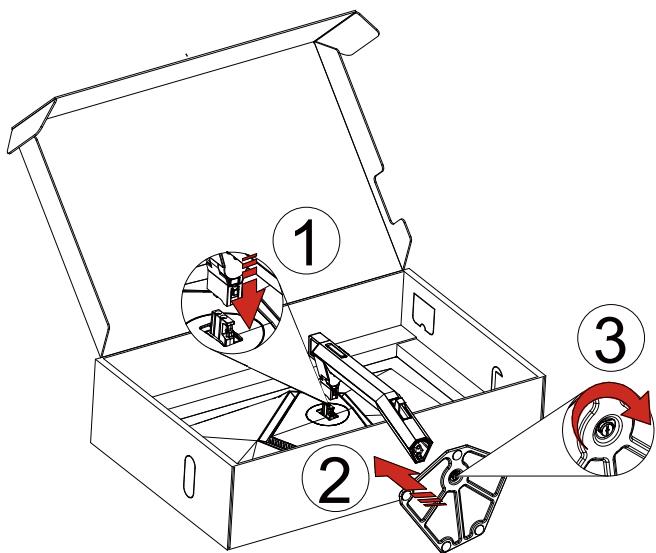


Remove:

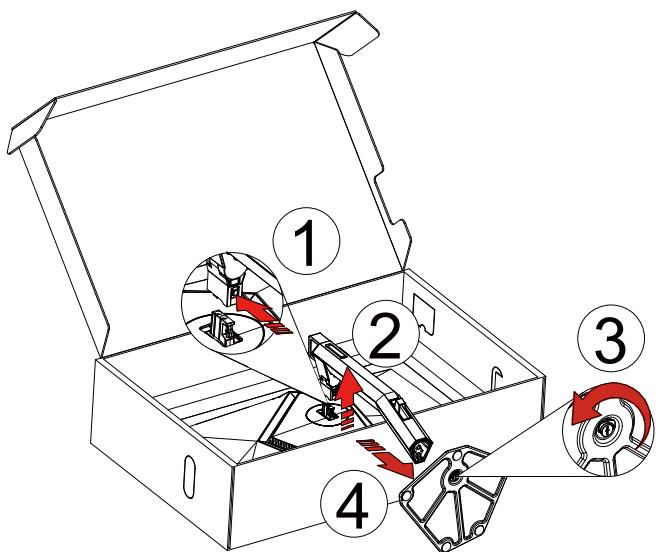


Wall mounted iron parts:

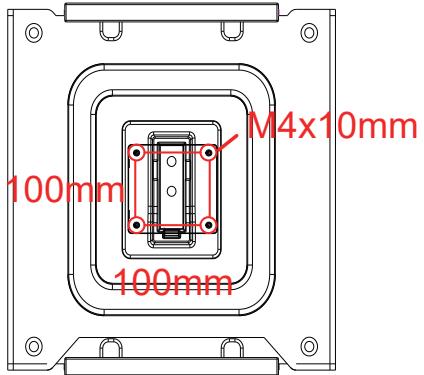

Specification of screws for wall mounted iron parts: M4*10mm

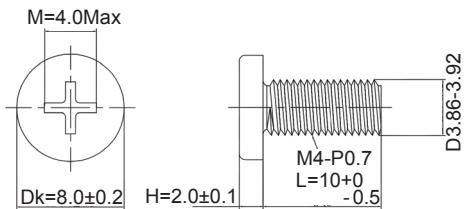

Specification for base screw: M6*13 mm (effective thread 5.5 mm)

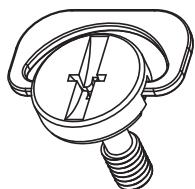


Adjusting the monitor

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor as below:

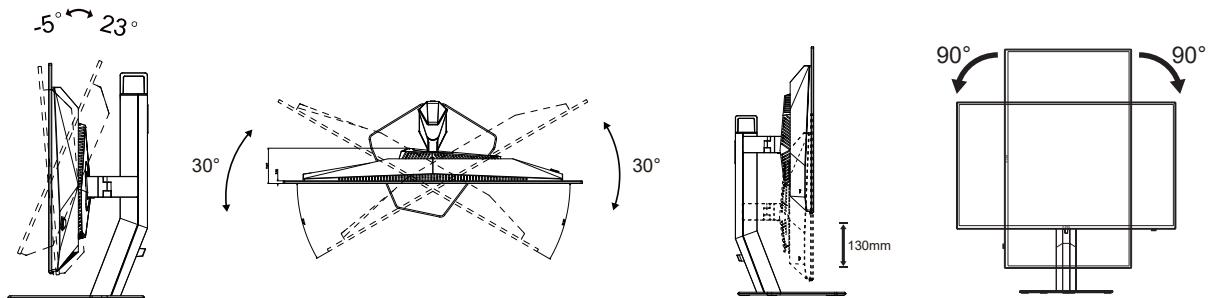


NOTE: Do not touch the OLED screen when you change the angle. Touching the LCD screen may cause damage.

Warning:

1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
2. Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

Connecting the Monitor

Cable Connections In Back of Monitor and Computer:

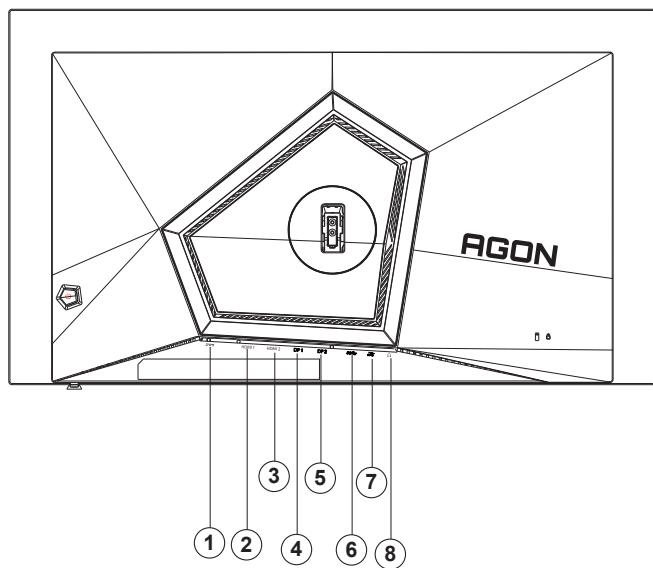

1. Power
2. HDMI1
3. HDMI2
4. DP1
5. DP2
6. USB3.2 Gen1 upstream
7. USB3.2 Gen1 downstream + fast charging
USB3.2 Gen1 downstream x1
8. Earphone

Connect to PC


1. Connect the power cord to the back of the display firmly.
2. Turn off your computer and unplug its power cable.
3. Connect the display signal cable to the video connector on the back of your computer.
4. Plug the power cord of your computer and your display into a nearby outlet.
5. Turn on your computer and display.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

To protect equipment, always turn off the PC and OLED monitor before connecting.

Wall Mounting


Preparing to Install An Optional Wall Mounting Arm.

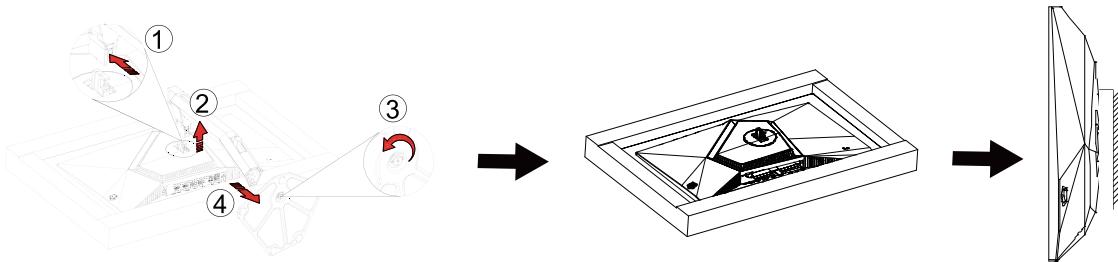

This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

1. Remove the base.
2. Follow the manufacturer's instructions to assemble the wall mounting arm.
3. Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
4. Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted: VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

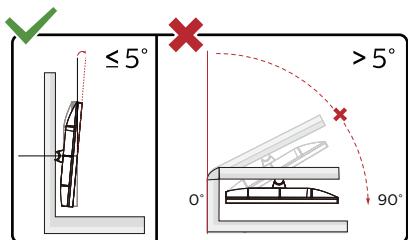

Display design may differ from those illustrated.

Warning:

1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
2. Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

G-SYNC Compatible function(Available for selective models)

1. G-SYNC Compatible function is working with DP/HDMI
2. To enjoy the perfect gaming experience with G-SYNC, you need to purchase a Separate NVIDIA GPU card that supports G-SYNC.

G-sync system requirements

Desktop computer connected to G-SYNC monitor:

Graphics cards supported: G-SYNC features require NVIDIA GeForce® GTX 650 Ti BOOST or higher graphics cards.

Driver: R340.52 or later

Operating system:

Windows 10

Windows 8.1

Windows 7

System requirements: DisplayPort 1.2 of the GPU must be supported.

Notebook computer connected to G-SYNC monitor:

Supported graphics cards: NVIDIA GeForce® GTX 980M, GTX 970M, GTX 965M GPU or higher graphics cards

Driver: R340.52 or higher

Operating system:

Windows 10

Windows 8.1

Windows 7

System requirements: DisplayPort 1.2 driven directly from the GPU must be supported.

For more information about NVIDIA G-SYNC, please visit: <https://www.nvidia.cn/>

Adaptive-Sync function (Available for selective models)

1. Adaptive-Sync function is working with DP/HDMI
2. Compatible Graphics Card: Recommend list is as the below, also could be checked by visiting www.AMD.com

Graphics Cards

- Radeon™ RX Vega series
- Radeon™ RX 500 series
- Radeon™ RX 400 series
- Radeon™ R9/R7 300 series (R9 370/X, R7 370/X, R7 265 except)
- Radeon™ Pro Duo (2016)
- Radeon™ R9 Nano series
- Radeon™ R9 Fury series
- Radeon™ R9/R7 200 series (R9 270/X, R9 280/X except)

Processors

- AMD Ryzen™ 7 2700U
- AMD Ryzen™ 5 2500U
- AMD Ryzen™ 5 2400G
- AMD Ryzen™ 3 2300U
- AMD Ryzen™ 3 2200G
- AMD PRO A12-9800
- AMD PRO A12-9800E
- AMD PRO A10-9700
- AMD PRO A10-9700E
- AMD PRO A8-9600
- AMD PRO A6-9500
- AMD PRO A6-9500E
- AMD PRO A12-8870
- AMD PRO A12-8870E
- AMD PRO A10-8770
- AMD PRO A10-8770E
- AMD PRO A10-8750B
- AMD PRO A8-8650B
- AMD PRO A6-8570
- AMD PRO A6-8570E
- AMD PRO A4-8350B
- AMD A10-7890K
- AMD A10-7870K
- AMD A10-7850K
- AMD A10-7800
- AMD A10-7700K
- AMD A8-7670K
- AMD A8-7650K
- AMD A8-7600
- AMD A6-7400K

HDR

It is compatible with input signals in HDR10 format.


The display may automatically activate the HDR function if the player and content are compatible. Please contact the device manufacturer and the content provider for information on the compatibility of your device and content. Please select "OFF" for the HDR function when you have no need for automatical activation function.

Note:

3840x2160@50Hz/60Hz used on devices such as UHD players or Xbox/PS.

Display Settings:

- The display resolution is set to 3840x2160, and HDR is preset to ON. Under these conditions, the screen may slightly dim, indicating HDR has been activated.
- After entering an application, the best HDR effect can be achieved when the resolution is changed to 3840x2160 (if available).

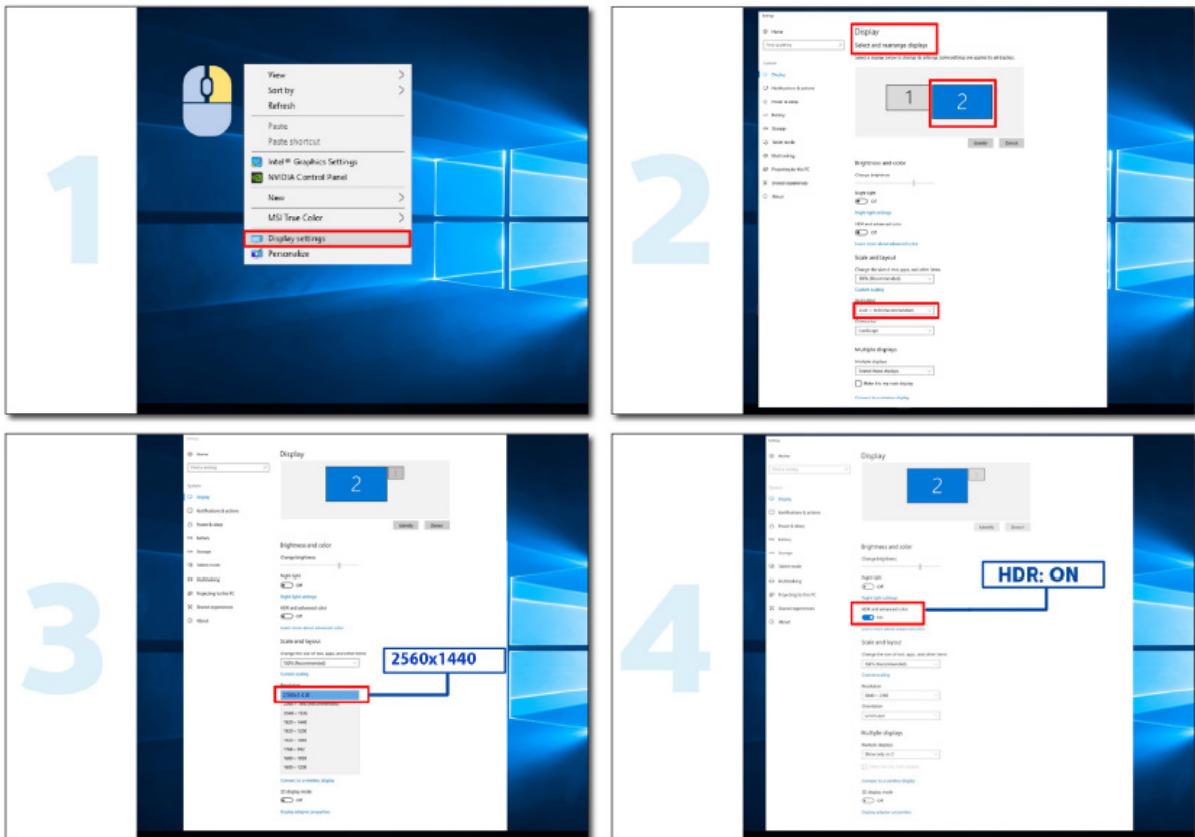

Screen Maintenance

Based on the characteristics of the OLED product, screen maintenance should be carried out according to the following requirements, so as to reduce the risk of generating image retention.

The warranty does not cover any damage resulting from non-compliance to the following instructions.

- **Displaying a still image should be avoided as much as possible.**

A still image refers to an image which remains on the screen for a long time.

A still image may result in permanent damage to the OLED screen, image residue appears, which is the feature of OLED screen.

The following suggestions on use should be abided by:

1. Do not display any still image in full screen or part of the screen for a long time, because this will lead to screen image residue. To avoid this problem, please reduce the brightness and contrast of the screen appropriately when displaying still image.
2. When watching a 4:3 program for a long time, different marks will be left on the left and right sides of the screen and the edge of the image, so please do not use this mode for a long time.
3. Whenever possible, watch a video in full screen, rather than in a small window on the screen (such as a video on an Internet browser page).
4. Do not put labels or stickers on the screen to reduce the possibility of screen damage or image residue.

- **It is not recommended to continuously use this product for more than four hours.**

This product uses many technologies to eliminate possible image retention..It is highly recommended that you use the preset values and keep the functions “on” to avoid image residue on the OLED screen and maintain the best use of the OLED display.

- **LEA (Logo Extraction Algorithm) (Prevention of local image retention)**

To reduce the risk of generating image retention, it is recommended to enable the LEA function.

After this function is enabled, the screen will be automatically narrowed to fix the brightness of the display area, so as to reduce possible image retention.

This function is “On” by default, and can be set in the OSD menu.

- **TPC (Temporal Peak Luminance Control)**

To reduce the risk of generating image retention, the luminance of the screen automatically lowers greatly when a still image is displayed for a long time so as to avoid possible image retention.

This function is “On” by default, and cannot be disabled.

- **Orbit (Image shift)**

To reduce the risk of generating image retention, it is recommended to enable the Orbit function.

After this function is turned on, image pixels circularly move as a whole once a second in a trajectory shaped like a Chinese character “日.” The movement amplitude is based on the settings. The moved character may be side cut. When “Strongest” is selected, image retention is most unlikely generated, but possible side cut may be most notable. When “Off” is selected, the image will go back to the optimal position.

This function is “On” (Weak) by default, and can be set in the OSD menu.

- **CPC (Convex Power Control)**

To reduce the risk of generating image retention, this function can automatically adjust power gain for different images. Power control follows a convex mathematic model which is high in the middle and low on two sides, so as to reduce possible image retention.

This function is “On” by default, and cannot be disabled.

- **LBC (Local Brightness Control)**

To reduce the risk of generating retention, the brightness of an area will be automatically lowered if the accumulative mean brightness of this area is overly high to prevent decline of the bright effect of this area, thereby avoiding possible image retention.

This function is "On" by default, and cannot be disabled.

- **JB(Screen compensation and correction) /OFF RS (Off Real slow) (Elimination of image retention)**

Based on the characteristics of the OLED panel, image retention tends to appear when a still image divided by different colors or brightness is displayed for a long time.

In order to eliminate the image residue that may have been generated, it is suggested to run the screen compensation correction and image residue elimination functions regularly or from time to time to achieve the ideal image viewing effect.

You can run this function in any of the following ways:

- In the OSD menu, manually turn on the image residue elimination, and select "Yes" according to the menu prompt.
- A warning message will automatically pop up every 4 hours of cumulative operation of the monitor to prompt the user to maintain the screen, and it is suggested to select "Yes". If "No" is selected, the prompt will be repeated every hour after the monitor has been running for 24 hours until the user selects "Yes".
- After every 4 hours of cumulative operation of the monitor, the screen compensation correction and image residue elimination will automatically run after the button is turned off or enters the standby state for 2 hours.


The monitor will automatically run the screen compensation correction first, and then run the image residue elimination. When running the screen compensation correction, please keep the power on, do not operate the button, and the power indicator will flash white (on for 3 seconds/off for 3 seconds), which takes about 30 seconds. After that, the monitor will continue to run image residue elimination.

The whole process of the image residue elimination function takes about 10 minutes. Please keep the power on, do not operate the button, and the power indicator will flash white (on for 1 second/off for 1 second). When finished, the power indicator will be off or orange, and the monitor will enter the shutdown or standby state.

During operation, if the user presses the power button to turn on the monitor, the operation process will be interrupted and the display screen will be restored, which will take about 5 more seconds. The monitor automatically runs the functions of screen compensation correction and image residue elimination in the standby state, which will not be interrupted. Under the "Other" section in the OSD menu, you can check the number of times the image residue elimination function has been run.

Adjusting

Hotkeys

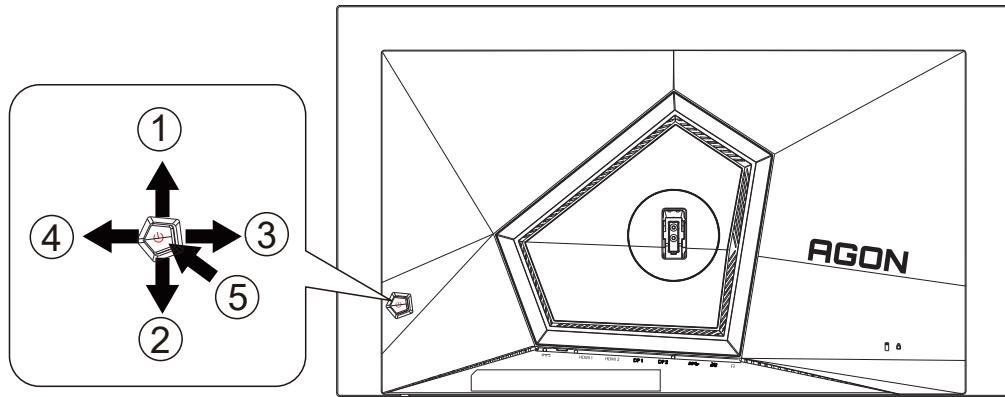

1	Source/Up
2	Dial Point/Down
3	Game Mode/Left
4	Light FX /Right
5	Power/ Menu/Enter

Power/Menu/Enter

Press the Power button to turn on the monitor.

When there is no OSD, Press to display the OSD or confirm the selection. Press about 2 seconds to turn off the monitor.

Dial Point/Down

When there is no OSD, press Dial Point button to show / hide Dial Point.

Game Mode/Left

When there is no OSD, press "Left" key to open game mode function, then press "Left" or "Right" key to select game mode (FPS, RTS, Racing, Gamer 1, Gamer 2 or Gamer 3) basing on the different game types.

Light FX/Right

When there is no OSD, press "Right" key to active Light FX function.


Source/Up

When the OSD is closed, press Source/Auto/Up button will be Source hot key function.


OSD Key Guide (Menu)



Enter : Use Enter key to enter the next OSD level
Move : Use Left / Up / Down key to move OSD selection
Exit : Use Right key to exit OSD

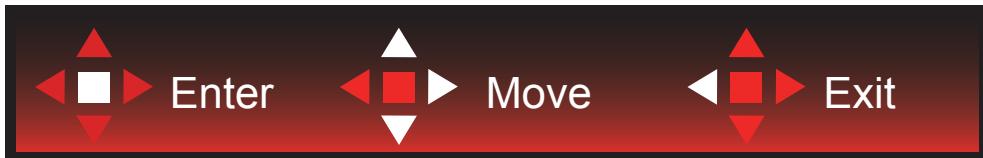

Enter : Use Enter key to enter the next OSD level
Move : Use Right / Up / Down key to move OSD selection
Exit : Use Left key to exit OSD

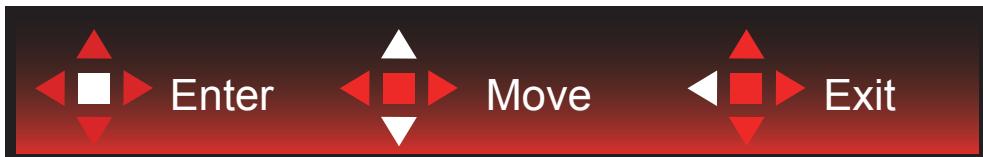

Enter : Use Enter key to enter the next OSD level
Move : Use Up / Down key to move OSD selection
Exit : Use Left key to exit OSD



Move : Use Left / Right / Up / Down Key to move OSD selection



Exit : Use Left key to exit OSD to previous OSD level
Enter : Use Right key to enter next OSD level
Select : Use Up / Down key to move OSD selection



Enter : Use Enter key to apply the OSD setting and back to previous OSD level
Select : Use Down key to adjust OSD setting



Select : Use Up / Down key to adjust OSD setting




Enter : Use Enter key to exit OSD to previous OSD level

Select : Use Left / Right key to adjust OSD setting

OSD Setting

Basic and simple instruction on the control keys.

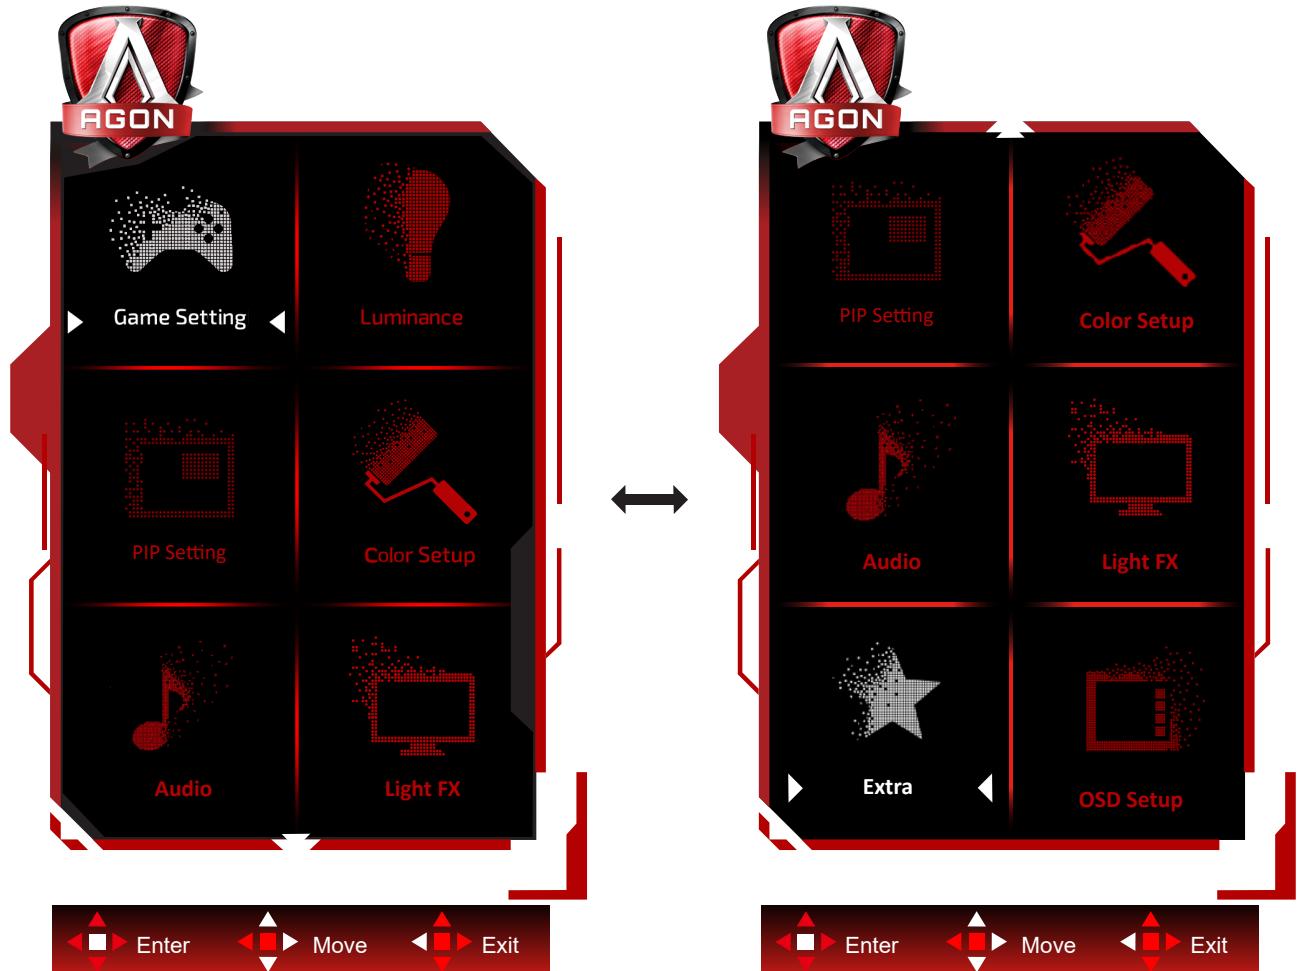


- 1). Press the MENU-button to activate the OSD window.
- 2). Follow Key Guide to move or select (adjust) OSD settings
- 3). OSD Lock/Unlock Function: To lock or unlock the OSD, press and hold the Down-button for 10s while OSD function is not active.

Notes:

- 1). If the product has only one signal input, the item of "Input Select" is disable to adjust.
- 2). ECO modes (except Standard mode), DCR and DCB mode , for these three states that only one state can exist.

Game Setting

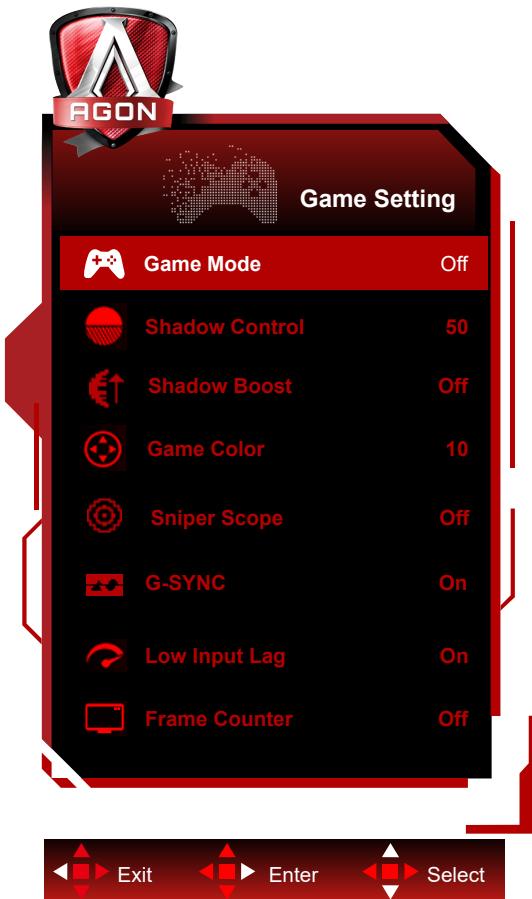

	Game Mode	Off	No optimization by Smart image game
		FPS	For playing FPS (First Person Shooters) games. Improves dark theme black level details.
		RTS	For playing RTS (Real Time Strategy). Improves the image quality.
		Racing	For playing Racing games, Provides fastest response time and high color saturation.
		Gamer 1	User's preference settings saved as Gamer 1.
		Gamer 2	User's preference settings saved as Gamer 2.
		Gamer 3	User's preference settings saved as Gamer 3.
	Shadow Control	0-100	<p>Shadow Control Default is 50, then end-user can adjust from 50 to 100 or 0 to increase contrast for clear picture.</p> <ol style="list-style-type: none"> If picture is too dark to be saw the detail clearly, adjusting from 50 to 100 for clear picture. If picture is too white to be saw the detail clearly, adjusting from 50 to 0 for clear picture
	Shadow Boost	Off /Level 1 /Level 2 /Level 3	Enhance the details of the image in dark or bright areas, and adjust the saturation of bright areas.
	Game Color	0-20	Game Color will provide 0-20 level for adjusting saturation to get better picture.
	Sniper Scope	Off /1.0 /1.5 /2.0	Enlarge the window locally, making it easier to aim at the target during sniping.
	G-SYNC	On / Off	Disable or Enable G-SYNC.


	Low Input lag	On / Off	Shutting down the frame buffer can reduce input delay. Note: Low input delay is disabled by default and unadjustable when the field frequency is less than 120 Hz; and it is enabled by default and unadjustable when the field frequency is equal to 120 Hz and in the Adaptive-Sync state.
	Frame Counter	Off / Right-Up / Right-Down / Left-Down / Left-Up	Display V frequency on the corner selected (Frame counter feature only works with AMD graphic card.)

Note:

When “HDR Mode” or “HDR” under “Luminance” is set to non-off, “Game Mode”, “Shadow Control” and “Game Color” can’t be adjusted.

When the “Color Space” under “Color Settings” is set to “sRGB” or “DCI-P3”, the “Game Mode”, “Dark Field Control”, and “Game Tone” items cannot be adjusted.

Luminance

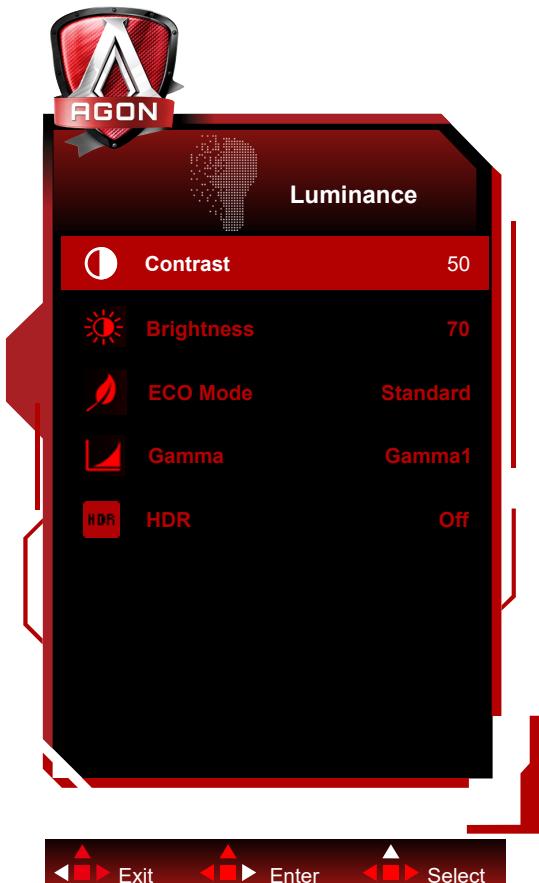

	Contrast	0-100	Contrast from Digital-register.
	Brightness	0-100	Backlight Adjustment
	Eco mode	Standard	Standard Mode
		Text	Text Mode
		Internet	Internet Mode
		Game	Game Mode
		Movie	Movie Mode
		Sports	Sports Mode
		Reading	Reading Mode
	Gamma	Gamma1	Adjust to Gamma 1
		Gamma2	Adjust to Gamma 2
		Gamma3	Adjust to Gamma 3
	HDR	Off	Set the HDR profile according to your usage requirements. Note: When HDR is detected, the HDR option is displayed for adjustment.
		DisplayHDR	
		HDR Picture	
		HDR Movie	
		HDR Game	
	HDR Mode	Off	Optimized for the color and contrast of the picture, which will simulate showing the HDR effect. Note: When HDR is not detected, the HDR Mode option is displayed for adjustment.
		HDR Picture	
		HDR Movie	
		HDR Game	


Note:


When "HDR Mode" under "Luminance" is set to non-off, "Contrast", "Eco Mode" and "Gamma" can't be adjusted.

When "HDR" under "Luminance" is set to non-off, all items under "Luminance" can't be adjusted.

When the "Color Space" under "Color Settings" is set to "sRGB" or "DCI-P3", the "Contrast", "Brightness Profile", "Gamma", "HDR"/"HDR Mode" items cannot be adjusted.

PIP Setting

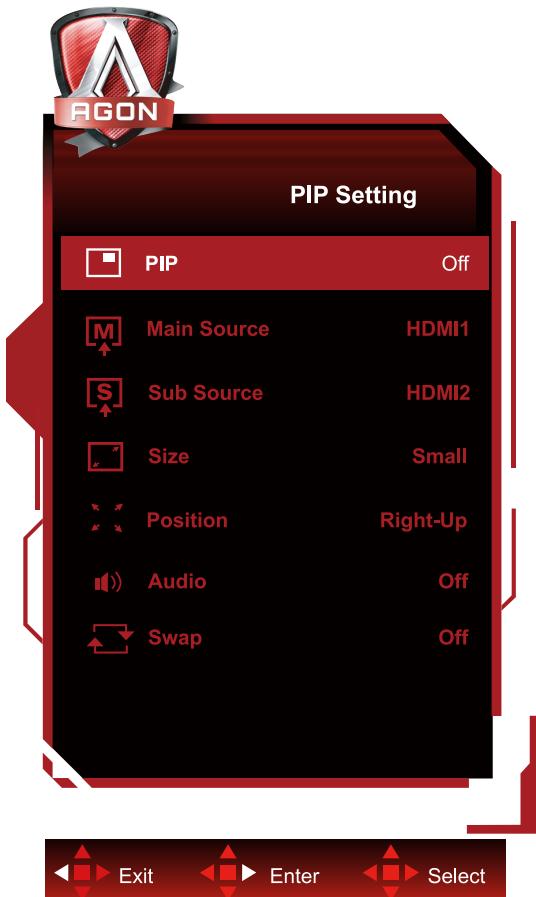

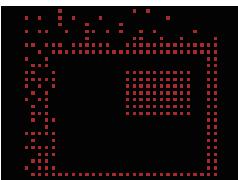
	PIP Setting	Off / PIP / PBP	Disable or Enable PIP or PBP.
	Main Source		Select main screen source.
	Sub Source		Select sub screen source.
	Size	Small / Middle / Large	Select screen size.
	Position	Right-up	Set the screen location.
		Right-down	
		Left-up	
		Left-down	
	Audio	On: PIP Audio	Disable or Enable Audio Setup.
		Off: Main Audio	
	Swap	On: Swap	Swap the screen source.
		Off: non action	

Note:

- 1) When "HDR" under "Brightness" is set to non-off state, all items under "PIP Setting" cannot be adjusted.
- 2) Under PBP, set the input signal resolution to 1280X1440@60Hz To achieve the desired display effect.
- 3) When turning on PBP/PIP, the compatibility of the main/secondary screen input sources is shown in the table below:

PBP/PIP		Main source			
		HDMI1	HDMI2	DP1	DP2
Sub source	HDMI1	V	V	V	V
	HDMI2	V	V	V	V
	DP1	V	V	V	V
	DP2	V	V	V	V

Color Setup

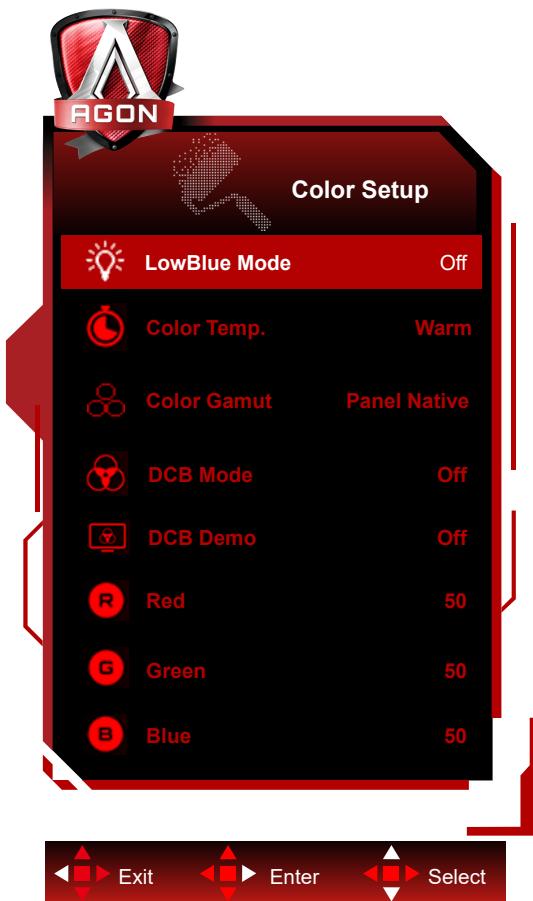


	LowBlue Mode	Off / Multimedia / Internet / Office / Reading	Decrease blue light wave by controlling color temperature.
	Color Temp.	Warm	Recall Warm Color Temperature from EEPROM.
	Normal		Recall Normal Color Temperature from EEPROM.
	Cool		Recall Cool Color Temperature from EEPROM.
	User		Restore user color temperature from EEPROM.
	Color Gamut	Panel Native	Standard color space panel.
		sRGB	Recall sRGB Color Temperature from EEPROM.
		DCI-P3	DCI-P3 color space.
	DCB Mode	Off	Disable DCB Mode.
		Full Enhance	Enable Full Enhance Mode.
		Nature Skin	Enable Nature Skin Mode.
		Green Field	Enable Green Field Mode.
		Sky-blue	Enable Sky-blue Mode.
		Auto Detect	Enable AutoDetect Mode.
	DCB Demo	On or Off	Disable or Enable Demo.
	Red	0-100	Red gain from Digital-register.
	Green	0-100	Green gain from Digital-register.
	Blue	0-100	Blue gain from Digital-register.

Note:


When "HDR Mode" or "HDR" under "Luminance" is set to non-off, all items under "Color Setup" can't be adjusted.
When Color Space is set to sRGB or DCI-P3, all other items under Color Settings cannot be adjusted.

Audio

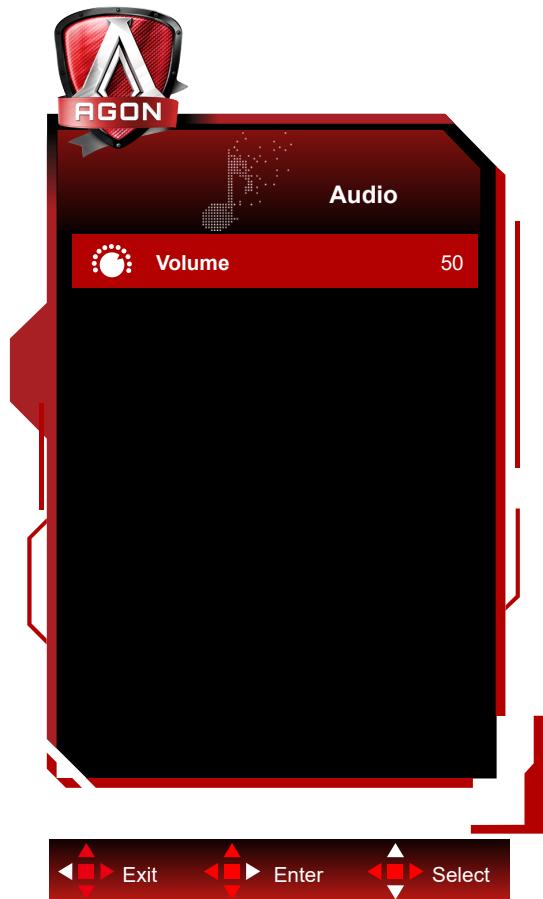


	Volume	0-100	Adjust volume setting
---	--------	-------	-----------------------

Light FX

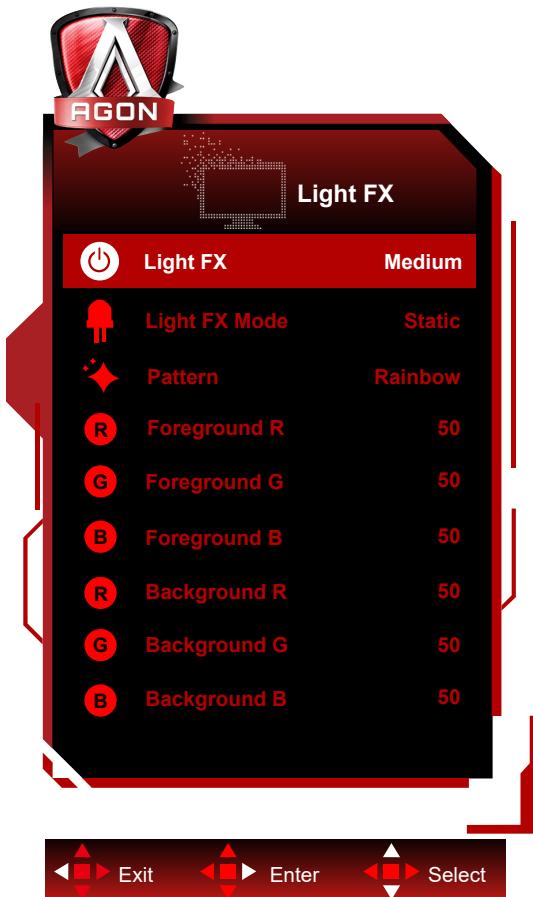

	Light FX	Off / Low / Medium / Strong	Select the intensity of Light FX.
	Light FX Mode	Audio1 / Audio2 / Static / Dark Point Sweep / Gradient Shift / Spread Fill / Drip Fill / Spreading Drip Fill / Breathing / Light Point Sweep / Zoom / Rainbow / Wave / Flashing / Demo	Select Light FX Mode
	Pattern	Red / Green / Blue / Rainbow / User Define	Select Light FX Pattern
	Foreground R	0-100	User can adjust Light FX foreground color, when Pattern setting to user define
	Foreground G		
	Foreground B		
	Background R	0-100	User can adjust Light FX background color, when Pattern setting to user define
	Background G		
	Background B		

Extra

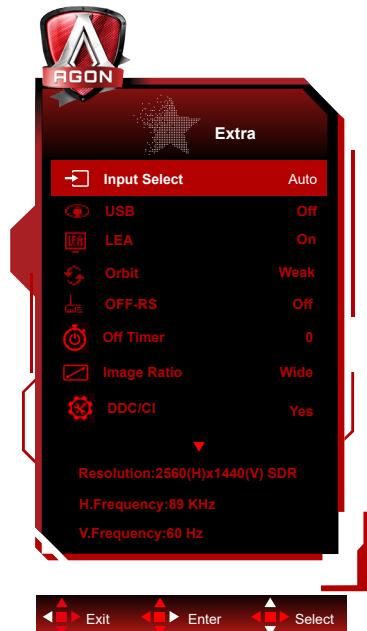


	Input Select	Auto/ HDMI1 / HDMI2 / DP1 / DP2	Select Input Signal Source
	USB	On/ Off	Turn on/Turn off the USB function.
	LEA (Prevention of local image retention)	On/ Off	<p>It is used to turn on the LEA function to reduce the risk of generating image retention. Recommended function settings: "On."</p> <p>After this function is enabled, the screen will be automatically narrowed to fix the brightness of the display area, so as to reduce possible image retention.</p>
	Orbit (Image shift)	Off / Weak / Medium /Strong / Strongest	<p>It is used to turn the Orbit function on to reduce the risk of generating image retention. Recommended function setting: "On."</p> <p>After this function is enabled, image pixels will circularly move as a whole. The movement amplitude is based on the settings. The moved character may be side cut. When "Strongest" is selected, image retention is most unlikely generated, but possible side cut may be most notable.</p>
	Off-RS (Elimination of image retention)	On/ Off	<p>It is used to enable and run the OFF-RS function to eliminate image retention which has been generated.</p> <p>After startup, select "Yes" according to menu prompts, and then the display will automatically shut down the screen. Keep power on, and do not operate any keys. The power indicator will flash white (white a second/off a second). This process lasts for about 10 min. The power indicator turns off at the end, and the display enters standby state.</p>



	Off Timer	0-24hrs	Select DC off time
	Image Ratio	Wide / 4:3 /1:1 /17"(4:3) / 19"(4:3) / 19"(5:4) / 19"W(16:10) / 21.5"W(16:9) / 22"W(16:10) / 23"W(16:9) / 23.6"W(16:9) /24"W(16:9) /	Select image ratio for display.
	DDC/CI	Yes or No	Turn On/Off DDC/CI Support
	Reset	Yes or No	Reset the menu to default
	Time after Off-RS (Time after elimination of image retention)		It refers to the time that the screen lights up after the last Off RS operation is executed, in units of hours. A prompt of executing Off RS will be automatically sent to the user every four hours.
	Off-RS Counts (Number of times of eliminating image retention)		It is used to record the number of times of executing Off-RS.

OSD Setup

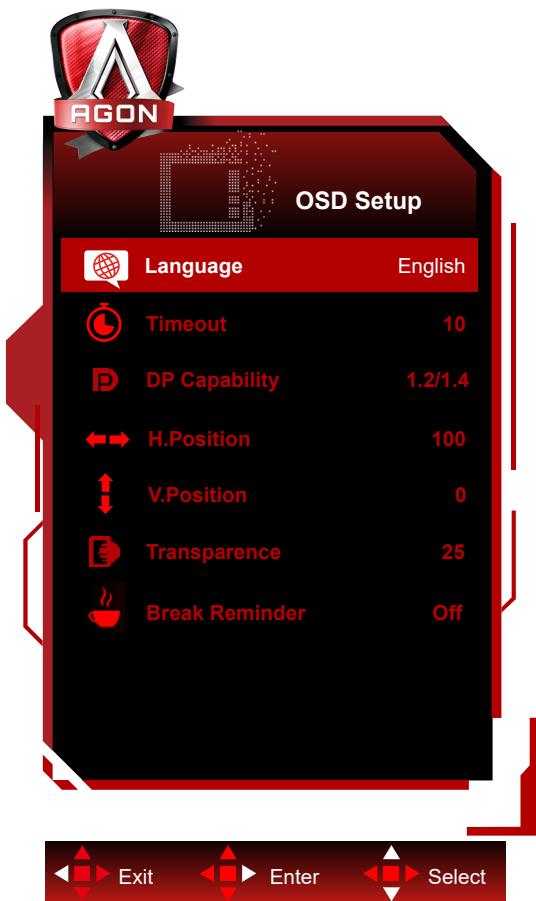

	Language		Select the OSD language
	Timeout	5-120	Adjust the OSD Timeout
	DP Capability	1.1/1.2/1.4	Please be noted that only DP1.2/DP1.4 support Adaptive-Sync function
	H. Position	0-100	Adjust the horizontal position of OSD
	V. Position	0-100	Adjust the vertical position of OSD
	Transparency	0-100	Adjust the transparency of OSD
	Break Reminder	On /Off	Break reminder if the user continuously work for more than 1hrs

LED Indicator

Status	LED Color
Full Power Mode	White
Active-off Mode	Orange
Off RS under process	White indicator flashes (on a second and off a second alternatively)
JB under process	White indicator flashes (on for 3 seconds and off for 3 seconds alternatively)
OLED panel malfunction	Orange indicator flashes (on a second and off a second alternatively)
Shutdown mode	The indicator is not lit.


Troubleshoot

Problems	Possible solutions
The power indicator is not lit.	<ul style="list-style-type: none"> Check if the power is turned on. Check if the power cord is connected.
The power indicator is lit, but there is no image display.	<ul style="list-style-type: none"> Check if the computer power is turned on. Check if the graphics card of the computer is well plugged. Check that the signal wire of the display has been correctly connected to the computer. Check the plug of the signal wire of the display, and make sure all pins are not bent. Observe the indicator through the Caps Lock key on the keypad of the computer to confirm if the computer is working.
There is no image, but the power indicator flashes orange.	<ul style="list-style-type: none"> The OLED panel malfunctions and fails to work properly. Seek advice from AOC after-sales service persons.
Failure to realize plug-to-use.	<ul style="list-style-type: none"> Check if it supports plug-to-use. Check if the adapter supports plug-to-use.
Dim image.	<ul style="list-style-type: none"> Adjust luminance and contrast ratio.
The image is bouncing or rippled.	<ul style="list-style-type: none"> There may be electrical appliances and devices at the periphery that may cause electronic interference.
The screen displays "the signal wire is not available" or "no signal."	<ul style="list-style-type: none"> Check if the signal wire is correctly connected. Check if the pin of the signal wire plug is damaged. The OFF-RS function can be enabled and run in the display menu to eliminate image retention which has been generated. Running this function for several times can obtain a desirable image display effect. For other instructions regarding screen maintenance, refer to the User Instructions in the official website.
The screen displays "invalid input".	<ul style="list-style-type: none"> Check if your computer is set in an improper display mode. Please re-set your computer in the display mode listed in the detailed user instructions.
Image retention.	<ul style="list-style-type: none"> Based on the characteristics of the OLED panel, the OFF-RS function can be enabled and run in the display menu to eliminate image retention which has been generated. It is recommended to run this function for several times to obtain a desirable image display effect. For other instructions regarding screen maintenance, please refer to the User Instructions in the official website.
Regulation & Service	Please refer to Regulation & Service Information which is in the CD manual or www.aoc.com (to find the model you purchase in your country and to find Regulation & Service Information in Support page).

Specification

General Specification

Panel	Model Name	AG276QZD	
	Driving System	OLED	
	Viewable Image Size	67.3 cm Diagonal	
	Pixel Pitch	0.2292mm(H) x 0.2292mm(V)	
	Display Color	1.07B Colors	
Others	Horizontal Scan Range	30k~230kHz(HDMI) 30k~255kHz(DP)	
	Horizontal scan Size(Maximum)	586.75 mm	
	Vertical Scan Range	48~144Hz (HDMI) 48~240Hz (DP)	
	Vertical Scan Size(Maximum)	330.05 mm	
	Optimal Preset Resolution	2560 x 1440@60Hz	
	Max Resolution	2560 x 1440@144Hz (HDMI) 2560 x 1440@240Hz (DP)	
	Plug & Play	VESA DDC2B/CI	
	Connector	HDMIX2/DPX2/USBx2/USB upstream/Earphone	
	Power Source	20V --- 6.0A	
	Power Consumption	Typical(Default Brightness And Contrast)	51 W
		Max. (Brightness = 100, Contrast =100)	≤129W
		Standby Mode	≤ 0.5 W
Environmental	Temperature	Operating	0°C~ 40°C
		Non-Operating	-25°C~ 55°C
		Perform JB Function to Recommend Temperature	0°C~ 40°C
	Humidity	Operating	10% ~ 85% (Non-Condensing)
		Non-Operating	5% ~ 93% (Non-Condensing)
	Altitude	Operating	0~ 5000 m (0~ 16404ft)
		Non-Operating	0~ 12192m (0~ 40000ft)

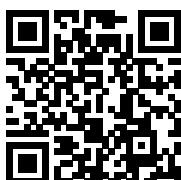

Note:

1)The maximum number of display colors supported by this product is 1.07 billion, and the setting conditions are as follows (there may be differences due to the output limitation of some graphics cards):

Color Bit State	HDMI2.0		DisplayPort1.4	
	YCbCr422 YCbCr420	YCbCr444 RGB	YCbCr422 YCbCr420	YCbCr444 RGB
QHD 240Hz 10bpc	\	\	OK	OK
QHD 240Hz 8bpc	\	\	OK	OK
QHD 200Hz 10bpc	\	\	OK	OK
QHD 200Hz 8bpc	\	\	OK	OK
QHD 165Hz 10bpc	\	\	OK	OK
QHD 165Hz 8bpc	\	\	OK	OK
QHD 144Hz 10bpc	OK	\	OK	OK
QHD 144Hz 8bpc	OK	OK	OK	OK
QHD 120Hz 10bpc	OK	\	OK	OK
QHD 120Hz 8bpc	OK	OK	OK	OK
QHD 100Hz 8bpc	OK	OK	OK	OK
QHD 60Hz 10bpc	OK	OK	OK	OK
QHD 60Hz 8bpc	OK	OK	OK	OK
更低解析度 10bpc	OK	OK	OK	OK
更低解析度 8bpc	OK	OK	OK	OK


2). Under DP1.4 (HBR3) signal input, in order to achieve QHD 240Hz 1.07 billion color numbers (RGB/YCbCr 4:4:4 format), a graphics card that supports DSC must be used. Please consult the graphics card manufacturer for DSC support.

Preset Display Modes

STANDARD	RESOLUTION(±1Hz)	HORIZONTAL FREQUENCY(kHz)	VERTICAL FREQUENCY(Hz)
VGA	640×480@60Hz	31.469	59.940
	640×480@72Hz	37.861	72.809
	640×480@75Hz	37.500	75.000
	640×480@100Hz	51.080	99.769
	640×480@120Hz	60.938	119.720
SVGA	800×600@56Hz	35.156	56.250
	800×600@60Hz	37.879	60.317
	800×600@72Hz	48.077	72.188
	800×600@75Hz	46.875	75.000
	800×600@100Hz	62.760	99.778
	800×600@120Hz	76.302	119.972
XGA	1024×768@60Hz	48.363	60.004
	1024×768@70Hz	56.476	70.069
	1024×768@75Hz	60.023	75.029
	1024×768@100Hz	80.450	99.811
	1024×768@120Hz	97.550	119.989
SXGA	1280×1024@60Hz	63.981	60.020
	1280×1024@75Hz	79.976	75.025
FHD	1920×1080@60Hz	67.500	60.000
	1920×1080@100Hz	112.500	100.000
	1920×1080@120Hz	137.260	119.982
	1920×1080@240Hz	278.400	240.000
QHD	2560×1440@60Hz	96.180	60.000
	2560×1440@120Hz	192.360	120.000
	2560×1440@144Hz	222.056	143.912
	2560×1440@165Hz	242.543	164.995
	2560×1440@240Hz	384.722	240.001
PBP	1280×1440@60Hz	89.450	59.913
	1280×1440@75Hz	111.972	74.998
	1280×1440@100Hz	149.300	100.000
	1280×1440@120Hz	179.157	119.998
	1280×1440@144Hz	214.994	144.002
	1280×1440@240Hz	358.320	240.000
IBM MODES			
DOS	720×400@70Hz	31.469	70.087
MAC MODES			
VGA	640×480@67Hz	35.000	66.667
SVGA	832×624@75Hz	49.725	74.551


Note: According to the VESA standard, different operating systems and graphics cards may have certain errors (+/-1Hz) on resolution. Actual please refer to the actual product.

Pin Assignments

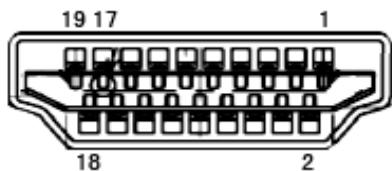

19-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1.	TMDS Data 2+	9.	TMDS Data 0-	17.	DDC/CEC Ground
2.	TMDS Data 2 Shield	10.	TMDS Clock +	18.	+5V Power
3.	TMDS Data 2-	11.	TMDS Clock Shield	19.	Hot Plug Detect
4.	TMDS Data 1+	12.	TMDS Clock-		
5.	TMDS Data 1Shield	13.	CEC		
6.	TMDS Data 1-	14.	Reserved (N.C. on device)		
7.	TMDS Data 0+	15.	SCL		
8.	TMDS Data 0 Shield	16.	SDA		

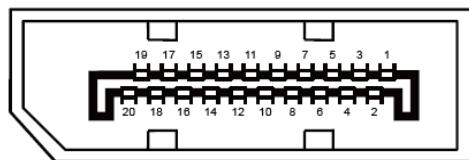

20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

