

Jet Bot

User manual

VR50T95**** Series

- Before operating this unit, please read the instructions carefully.
- For indoor use only



SAMSUNG

Contents

PREPARATION

Safety information	3
--------------------	---

INSTALLATION

Installing a Clean Station	15
----------------------------	----

OPERATION

Charging the Jet Bot	17
----------------------	----

Using the Jet Bot	20
-------------------	----

Basic use	20
-----------	----

Operation status on the LED Status Indicator	21
--	----

Cleaning Functions	22
--------------------	----

Additional functions	24
----------------------	----

Attaching Boundary Markers	25
----------------------------	----

Parts diagram	26
---------------	----

Jet Bot	26
---------	----

Clean Station	26
---------------	----

MAINTENANCE

Cleaning the Jet Bot	27
----------------------	----

Emptying and cleaning the Dustbin	27
-----------------------------------	----

Cleaning the Driving Wheel	28
----------------------------	----

Cleaning the brush	29
--------------------	----

Cleaning the Sensor Window	30
----------------------------	----

Cleaning the Fine dust Filter	30
-------------------------------	----

Cleaning the Clean Station	31
----------------------------	----

Replacing the Dust Bag	31
------------------------	----

Cleaning the Fine dust Filter	31
-------------------------------	----

Cleaning the bottom cover	32
---------------------------	----

APPENDIX

SmartThings App	33
-----------------	----

Setting up the wireless router	33
--------------------------------	----

Downloading the SmartThings App	34
---------------------------------	----

Setting up a SAMSUNG account	34
------------------------------	----

Registering a device to the SmartThings App	34
---	----

Software Update	35
-----------------	----

Functions of the SmartThings App	36
----------------------------------	----

Notes and cautions	38
--------------------	----

Installation	38
--------------	----

Charging	38
----------	----

Using	39
-------	----

Cleaning and maintenance	40
--------------------------	----

Battery usage	41
---------------	----

Corrective measures before reporting a problem	42
--	----

Troubleshooting	44
-----------------	----



Open Source Announcement	49
--------------------------	----

How to reset to the factory default	49
-------------------------------------	----

Product Specification	50
-----------------------	----

Accessories

Accessories may differ depending on the models.

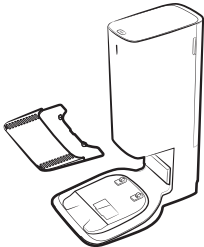	 Power cord	 Dust Bag: 2 units (Inside the product: 1 unit, Spare: 1 unit)	 Pre-motor Filter: 2 units (Inside the product: 1 unit, Spare: 1 unit)
	 Boundary Markers	 User Manual	

* If you want to purchase an additional Dust Bag, check the Dust Bag's model name (VCA-RDB95) and SAMSUNG logo (**SAMSUNG**) first, then contact your nearest SAMSUNG Electronics retailer or SAMSUNG service center.

Safety information

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.
- Because the following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

Caution/Warning symbols used

WARNING

Indicates that a danger of death or serious injury exists.

CAUTION

Indicates that a risk of personal injury or material damage exists.

Other symbols used

NOTE

Indicates that the following text contains additional important information.

State of California Proposition 65 Warning (US only)

WARNING

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



**For battery recycling go to call2recycle.org
or call 1-800-822-8837**

Failure to meet these requirements could cause damage to the internal parts of the vacuum and void your warranty.

General

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual.
- Do not operate the Jet Bot or the Clean Station if it has been damaged in any way.
- If the vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped in water, return it to a customer care center.
- Do not handle the Clean Station or the Jet Bot if your hands are wet.
- Use only on dry, indoor surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should not clean or perform maintenance on the vacuum without adult supervision.
- Move the cords of other appliances so they are not in the area that is to be cleaned.
- Do not operate the vacuum in a room where an infant or child is sleeping.

- Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor.
- Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
- Do not allow children to sit on the vacuum.
- Do not use the vacuum on a wet surface.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Clean Station

- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Do not use outdoors or on wet surfaces.
- Unplug the Clean Station from the outlet when not in use and before servicing.
- Use only the Clean Station supplied by the manufacturer to recharge.
- Do not use with a damaged cord or a plug or a loose power outlet.
- Do not pull or carry by the cord, use the cord as a handle, close the door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not mutilate or incinerate batteries as they will explode at high temperatures.
- Do not attempt to open the Clean Station. Repairs should only be carried out by a qualified customer care center.
- Do not expose the Clean Station to high temperatures or allow moisture or humidity of any kind to come into contact with the Clean Station.
- Do not charge the non-rechargeable batteries with the Clean Station.

Jet Bot

- Do not pick up hard or sharp objects such as glass, nails, screws, coins, and etc.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit accidentally turns on.
- Do not put any objects into openings. Do not use with any openings blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Do not pick up toxic materials (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Also do not use in:
 - Locations with candles or desk lamps on the floor.
 - Locations with unattended fires (fire or embers).
 - Locations with distilled alcohol, thinner, ashtrays with burning cigarettes, etc.
- Do not use the Jet Bot in an enclosed space filled with vapors given off by oil based paint, paint thinner, moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid gets on the skin, wash quickly with water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.

Power related

WARNING

- Please prevent any risk of electric shock or fire.
 - Do not damage the power cord.
 - Do not pull the power cord too hard or touch the power plug with wet hands.
 - Do not use a power source other than 120 V~ 60 Hz and also do not use a multi-outlet to supply power to a number of devices at the same time. (Do not leave the cord carelessly on the floor.)
 - Do not use a damaged power plug, a power cord or a loose power outlet.
- Clean dust or any foreign matter on the pin and the contact part of the power plug.
 - There is a risk of electric shock or malfunction.

Before use

WARNING

- Do not use the Jet Bot near a heater or combustible materials.
 - Do not use the Jet Bot near fire or flame such as a movable heater, a candlelight, a desk lamp, a fireplace, etc. or in a place where combustible materials such as gasoline, alcohol, thinner, etc. exist.
- Make sure there are no dangerous objects around the Jet Bot's cleaning area to prevent collision and unplug any electric heaters or fans.
 - The Jet Bot can be damaged or malfunction.
- The Jet Bot is intended for household use therefore do not use it in an attic, basement, storage, an industrial building, out of indoor space, places with moisture (such as a bathroom, a laundry room), on the table or shelves.
 - The Jet Bot can be damaged or malfunction.
- Attach the Boundary Markers to a place where the Jet Bot may fall such as a stair or a banister to prevent product damage and injury.
 - Please keep the Cliff Sensor clean all the time for safety.

- Be sure the Jet Bot does not suck in or touch any kind of liquids (water, beverage, filth, etc.).
 - The Jet Bot can be severely damaged and it may contaminate other areas if the wheels pass through liquid.
- Do not spill any liquids on the Clean Station.
 - There is a risk of fire or electric shock.
- Do not use the Clean Station for anything other than its intended purposes.
 - There is a risk of fire or severe damage to the Clean Station.
- Always keep the Cliff Sensor clean for your safety.
- As this wireless installation may cause radio interference, it cannot provide a service related with human safety.

CAUTION

- Insert the Dustbin before using the Jet Bot.
- When installing the Clean Station, do not leave the cord carelessly on the floor since the Jet Bot may get tangled by it.
- To clean all areas of your house, open all rooms and set the No-go Zones with the SmartThings App or attach the Boundary Markers to the places where the Jet Bot may get damaged such as a front door, a veranda, a bathroom, and stairs for safety.
- Follow these recommendations for proper automatic recharging.
 - Always turn on the power of the Clean Station.
 - Install the Clean Station where the Jet Bot can easily find.
 - Do not leave any objects in front of the Clean Station.
- Do not use the Jet Bot on black colored floors.
 - The Jet Bot may not be able to operate normally.
- Do not place any objects within 0.5 m of either side of the Clean Station or within 1 m of the front of the Clean Station.
- Make sure the Clean Station's charging contact is not damaged or have any foreign matter on it.

- For the very low areas where the Jet Bot may get stuck, set the No-go Zones with the SmartThings App or attach the Boundary Markers to prevent the Jet Bot from getting in.
- Do not install the Clean Station in an area with a dark floor.
 - If the floor around the Clean Station is dark, recharging is hindered.
- Move any obstacles that may disturb the Jet Bot's movement (such as children's indoor swing or slides) before cleaning.
- Do not use the Jet Bot in a place which is narrower than its turning radius 0.5 m or less.
- Before operating the Jet Bot, remove the objects which could break such as glass, a frame, a mirror, and porcelain items so that the Jet Bot works without interruption.
- If a brush or a brush cover is not assembled correctly, scratches may occur on the floor, or product malfunction may occur.
- Use both hands to carry the product.
- Do not place the Clean Station in a place where people pass by frequently, in entrance way or narrow passage.
 - People may trip over it and be injured, or product damage may occur.
- Do not push the Clean Station.

In use

WARNING

- If any abnormal sounds, smells or smoke come from the Jet Bot, immediately shut off the power switch of the Jet Bot and contact a service center.

CAUTION

- Using the Jet Bot on a thick carpet may damage both the Jet Bot and the carpet.
 - The Jet Bot cannot pass over a carpet with fiber longer than 2 cm.
- Do not use the Jet Bot on tables or other high surfaces.
 - There is a risk of damage if it falls.
- The Jet Bot may bump into chairs or desk legs, therefore move them away for faster and efficient cleaning.
- When the Jet Bot is operating, do not lift it up or carry it to another area.
- Do not hold by Driving Wheels of the Jet Bot when carrying it to another area.
- Do not put any objects on top of the Jet Bot since it may cause malfunction of the LiDAR sensor or the Jet Bot.
- Remove any large papers or plastic bags immediately when using the Jet Bot since they may block the intake.
- Do not lie down around the Jet Bot that is running.
 - Your hair may be caught in the brush, resulting in physical injury.
- Do not allow children to play with the Jet Bot.
- Make sure hair, fingers, clothes do not get caught in a spin brush or Driving Wheels.
- Do not allow children to sit on the Jet Bot and do not place an object on the Jet Bot.
- Leave over 3 cm space from the inner doorstep placed in the entrance. Otherwise, the robot vacuum can ride on it and go outside.

Cleaning and maintenance

WARNING

- When the power cord is damaged, contact a service center to get it replaced by a certified repairman.
 - There is a risk of fire or electric shock.
- Please check with a SAMSUNG Electronics service center when replacing batteries.
 - Using batteries from other products can cause malfunction.
- Be careful not to put your finger into the revolving LiDAR sensor. Otherwise, your finger may get injured.

CAUTION

- Prevent any damage to the Jet Bot by complying with the following.
 - Do not clean the Jet Bot by spraying water directly onto it or use a volatile substance such as benzene, thinner, or alcohol to clean it.
- Do not disassemble or repair the Jet Bot. This should only be done by a certified repairman.
- Always keep the Obstacle Sensor Window and the Cliff Sensor Window clear.
 - If foreign matter accumulates, sensors may malfunction.
- Do not store the Jet Bot in a car.
- Be careful that the LiDAR sensor is not exposed to a direct light such as sun light, infrared light, etc.
 - The direct light can affect the performance of the LiDAR sensor.
- When carrying the Jet Bot, be careful not to let it drop.
 - The impact from the drop can affect the operation or performance of the LiDAR sensor.
- Do not look at the transmitting part (a laser) of the revolving LiDAR sensor horizontally.
- Be careful not to insert a tool such as a chopstick into the revolving LiDAR sensor. Otherwise, the LiDAR sensor may work abnormally or malfunction.

-
- Before cleaning, remove objects such as a thin electric wire (1 cm or less), socks, etc. on the floor as they can be caught in the Jet Bot's brush or Driving Wheels.
 - If oil such as cooking oil is on the floor, the Jet Bot may become stationary because the floor is slippery. Remove the oil first before cleaning with the Jet Bot.

REGULATORY NOTICE

1. FCC Notice

WARNING

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of FCC Rules. Operation is Subject to following two conditions:

1 This device may not cause harmful interference, and

2 This device must accept any interference received including interference that cause undesired operation.

- For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

FCC STATEMENT:

- This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a different circuit from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT:

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

2. IC Notice

- The term “IC” before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- This Class B digital apparatus complies with Canadian ICES-003.
- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.



IC RADIATION EXPOSURE STATEMENT:

- This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.


Open Source License Notice

- This device uses open source software. Open Source Licenses are available on the product menu.
- Tap “Settings > Network > Software Update > Legal Information” on the device for more details.


Installing a Clean Station

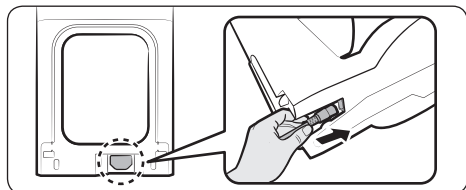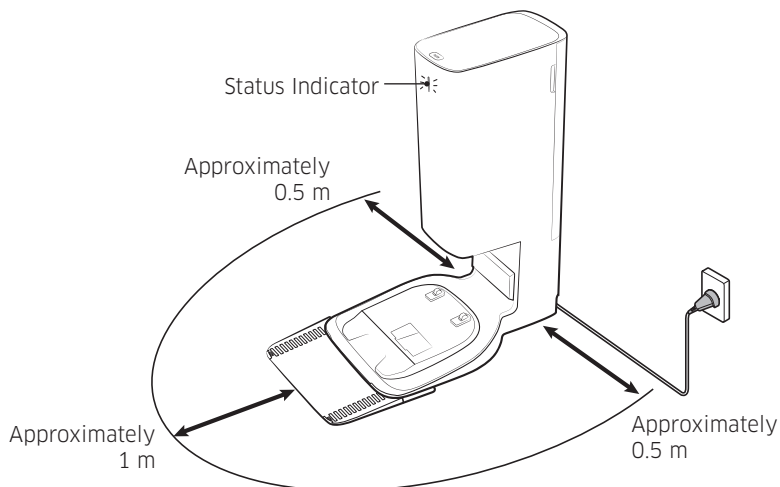


- 1 Connect the provided power cord to the bottom of the Clean Station.

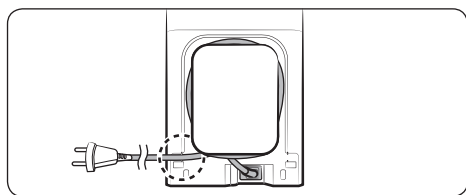


- 2 Position the power cord into the fixing groove at the rear of the Clean Station.

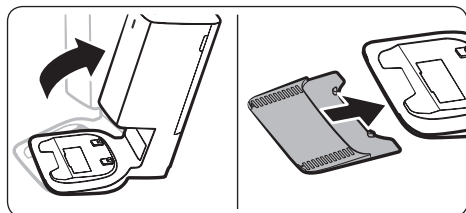

- 3 Raise the front of the Clean Station.
- 4 Put the Extra Plate under the Clean Station.

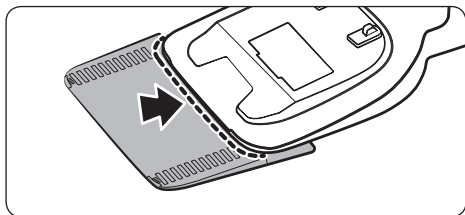

5 Fit the front part of the Clean Station to the reference line on the Extra Plate.

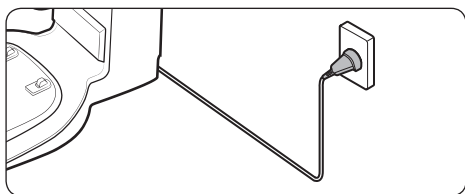

6 Place the Clean Station on an even floor and near an electrical outlet and plug it in.

* When the Clean Station is plugged in, the Status Indicator at the top of the Clean Station turns white for a short time.




NOTE

- Install the Clean Station in a place where the floor and wall are level.
- If the power cord is too long for the installation environment, coil the power cord around the cable management post, then put it in the fixing groove at the rear of the Clean Station.
- If you reinstall the Clean Station to a new position of 45 degrees or 1 m or more from the previous installed place, recreate the map using the SmartThings App. (If you use the existing map, some places may not be cleaned.)


Charging the Jet Bot

Before using the Jet Bot for the first time, charge it completely. (For the charging time and cleaning time, refer to the 'Product specification'.)

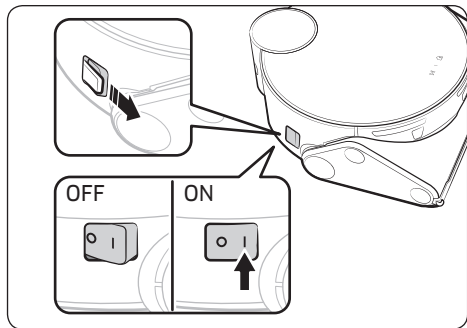


1 Remove the yellow gasket attached to the power switch at the side of the Jet Bot and press the power switch to turn the Jet Bot on.

- During booting, the Jet Bot's Status Indicator turns on with a melody which stops when the booting is complete.
- When you turn the Jet Bot on for the first time after purchase, check the SmartThings App connection (refer to p.33-37) and installation of the Clean Station following the voice guide of the Jet Bot.

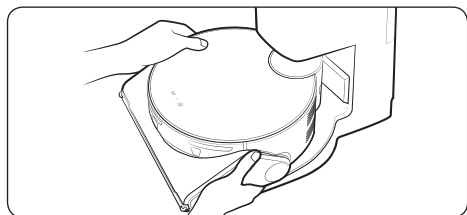


2 Place the Jet Bot on the Clean Station manually to start charging.

- Make sure the charging terminals on the Jet Bot and the Clean Station are aligned.
- When the Jet Bot starts charging, the Status Indicator of the Clean Station turns white and after 1 minute, the Status Indicator turns off automatically.

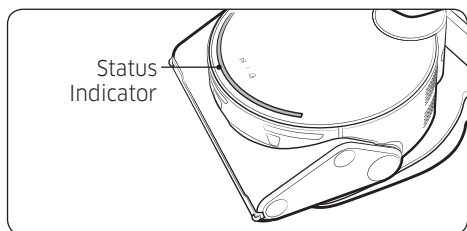


3 Check the charging status.

- When charging starts, the Status Indicator of the Jet Bot turns on (red, orange, or yellow depending on charging progress), it rises gradually, and changes to green when the charging is complete.

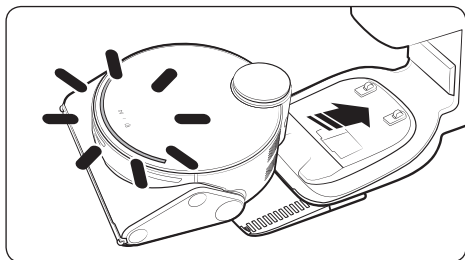

Auto charging

The Jet Bot automatically returns to the Clean Station when it completes cleaning or when the battery is low to recharge.

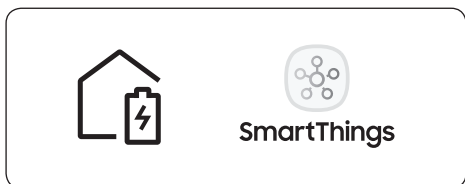


Docking (Recharging)

You can return the Jet Bot to the Clean Station while cleaning to recharge.

- Press the [] on the Jet Bot or use the SmartThings App to select the recharging function.

※ If the Jet Bot fails to return to the Clean Station for charging, it turns to the Sleep Mode. To cancel the Sleep Mode, press the []].

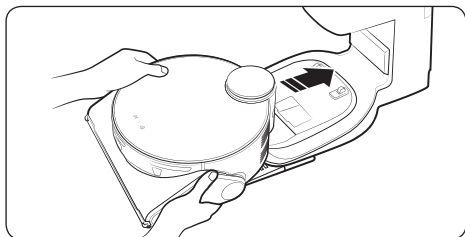

Discharged Jet Bot

Move the Jet Bot manually onto the Clean Station to recharge.

Checking if the docking (recharging) does not work

Check the Clean Station's installation status

- Check whether the Clean Station has been installed in a place where the Clean Station cannot guide the Jet Bot to return.
- Check whether the distance between the Clean Station and the Jet Bot is over 5 m.
 - It may take a longer time for the Jet Bot to return to the Clean Station.

Charge the Jet Bot manually for the following conditions.

- When the Clean Station is installed in a corner
- When the battery is completely discharged
- When the Jet Bot is stuck in an obstacle (e.g., furniture)
- When the Jet Bot cannot climb a threshold near the Clean Station. (It should be less than 1.5 cm.)
- When the Jet Bot's Status Indicator turns red and stays red with the Jet Bot not working

NOTE



- If the power switch of the Jet Bot is off, the Jet Bot will not charge even if it is docked on the Clean Station.
 - Keep the Clean Station on at all times.
 - If power is not supplied to the Clean Station, the Jet Bot cannot find the Clean Station and cannot automatically recharge.
- If the Jet Bot is left detached from the Clean Station, the battery drains naturally.
- When the Dustbin is full, the Jet Bot automatically returns to the Clean Station for recharging.

Using the Jet Bot

Before using the Jet Bot, press the power switch at the side of the Jet Bot to turn the Jet Bot on.

- * For the normal use of the Jet Bot's functions, the SmartThings connection is required.
 - For downloading and installing the SmartThings App, refer to the 'SmartThings App(P.33-37)'.

Basic use

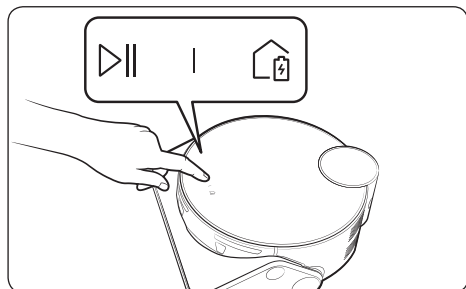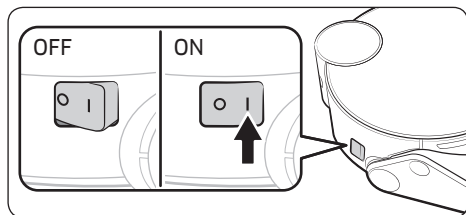

Power on / off

Press the power switch at the side of the Jet Bot to turn the Jet Bot on.

- During booting, the Jet Bot's Status Indicator turns on with a melody which stops when the booting is complete.

Starting cleaning

Press the [▶||] on the Jet Bot to start cleaning in Auto Clean.

Stopping cleaning

- Press the [▶||] on the Jet Bot to stop operation while cleaning.
 - When pressing the [🏠], the Jet Bot returns to the Clean Station and starts charging.
- * If the Jet Bot does not operate for 20 minutes after it stops operation, it automatically returns to the Clean Station to recharge.

Sleep Mode

- When the Jet Bot is not in operation, press and hold the [▶||] to set the Sleep Mode.
- In the Sleep Mode, press the [▶||] to cancel the Sleep Mode.

Operation status on the LED Status Indicator

Classification		Color		Meaning
Jet Bot	While operating	Red	Blinking without moving	An error occurs.
			Blinking while moving	Auto returning to the Clean Station due to low battery
			On	Operating stops due to low battery
	Blue		Monitoring	
	While charging	Red, orange, or yellow (depending on charging progress)		While charging
		Green		Charging is complete.
		Violet		Software is being updated.
Clean Station		White	On (5 seconds)	Clean Stations' power is on.
			On	Jet Bot's Empty Dust function is working, Jet Bot is docked (1 minute after the docking, it is off.).
		Red	Blinking	Clean Station's cover is open. The suction motor has a problem.
			On	Clean Station's Dust Bag is full.

- * If the Jet Bot starts charging from the depleted status, the Status Indicator turns red and slowly blinks for about 20 minutes.
- * During the 'DownTime', the Jet Bot's LED Status Indicator is turned off.
- * The Jet Bot's night mode (18:00~06:00) operates only when the Jet Bot is charging, and in the night mode, Jet Bot's LED brightness is adjusted to 20% within the set time when time synchronization is set through a mobile.

Cleaning Functions

Cleaning Functions	Operation
Cleaning Methods	• Auto Clean: Cleans automatically until the Jet Bot completes cleaning one time. • Room Clean: You can select a room you want to clean. • Around Furniture Clean: You can select the areas around furniture or an electronic appliance you want to clean. – Recognizable furniture: An air conditioner, a refrigerator, a television, a bed, a sofa, a table, and a bookshelf. * Around Furniture Clean function cleans 3 m (width) x 3 m (length) area of recognized furniture based on location coordinates, and some areas may not clean depending on the size and shape of furniture. • Spot Clean: You can set a specific area you want to clean.
Cleaning Mode	• You can select one out of three modes. * You can set the Cleaning Mode only when the Jet Bot is in Room Clean.
Suction Power	• You can select the suction power from Max, Smart or Normal. * When the Jet Bot is in 'Smart' suction power, the Corner Clean or the Intelligent Power Control Clean work.
Repeat Clean	• The Jet Bot cleans repeatedly until its battery is discharged. * After the Jet Bot completes cleaning one time and returns to the Clean Station due to battery shortage, it does not clean again after charging is complete.
Empty Dust	• You can select the Empty Dust conditions at the SmartThings App. • When the Jet Bot returns to the Clean Station, it automatically empties its Dustbin. (However, after the Around Furniture Clean, the Jet Bot does not empty its Dustbin automatically.) * If the Empty Dust function does not work, check whether the top cover of the Clean Station is open or the Dust Bag is full. * While the Jet Bot is docked onto the Clean Station, press the [] to start emptying its Dustbin.
Corner Clean	• If the Jet Bot detects a corner, it moves close to the corner and cleans it twice. (Suction Power: 'Smart' only)
Intelligent Power Control Clean	* When the Jet Bot detects a carpet during cleaning, it increases its suction power. (Suction Power: 'Smart' only)

-
- * You can set the Cleaning Functions, the Repeat Clean or the Cleaning Mode at the SmartThings App.
 - * When the Jet Bot does not have a saved map, it studies cleaning space through Auto Clean function which starts from the Clean Station. After studying the cleaning space, a map is saved. (The map creation is enabled through the SmartThings App only.)
 - * You can edit or delete the map at the SmartThings App.
 - * Room Clean, Around Furniture Clean or Spot Clean works regardless of choice sequences of the areas.
 - * As the Jet Bot may ride over the following sizes of a rug or a mat, set the No-go Zones with the SmartThings App for smooth cleaning in the following modes.
 - During zigzag cleaning, the size of a rug or a mat is larger than 150 cm x 32 cm.
 - During wall cleaning, the size of a rug or a mat is larger than 65 cm x 32 cm.

Additional functions

Additional functions	Operation
Energy-Saving Mode	- When charging is complete, the Jet Bot automatically enters the Sleep Mode. While the Jet Bot is docked on the Clean Station, press and hold the [▷] for 7 seconds to set it to the Sleep Mode. To cancel the Sleep Mode, start cleaning or press the [▷] for 7 seconds. ※ When the Jet Bot is in the Energy-Saving Mode, the power is turned off after charging is complete which means the Wi-Fi reception waiting is not enabled, therefore the Jet Bot cannot be controlled with the mobile app.
Downtime Mode	- You can set the Jet Bot not to clean within the Downtime at the Settings. ※ When Downtime comes, the Jet Bot returns to the Clean Station.
Scheduled Cleaning	- You can set the Jet Bot to clean at the Schedule. ※ If the Jet Bot is detached from the Clean Station at the scheduled time, the scheduled cleaning does not work.
Setting the No-go Zones	- When the Jet Bot has saved a map, you can set the Jet Bot not to enter a designated area. ※ If the Jet Bot does not start cleaning from the Clean Station or the installation place of the Clean Station has been changed, the Jet Bot may clean the set No-go Zones. ※ When setting the No-go Zones, you cannot include the Clean Station.

※ You can set the Downtime mode, the Scheduled Cleaning or the No-go Zones at the SmartThings App.

NOTE


- When a Check Notice occurs or when you carry the Jet Bot to another place and start cleaning, the Jet Bot spins left and right at a 30 degree angle to recognize its location before it starts cleaning.
- If the Jet Bot cannot recognize its current location, it does not start a set cleaning mode but starts in Auto Clean.
- The Jet Bot automatically performs a system check and restarts once a week.

Attaching Boundary Markers


If Boundary Markers are attached before using the Jet Bot, the Jet Bot can operate safely. You can purchase additional Boundary Markers at a service center.




To prevent the Jet Bot from entering the following areas, attach the Boundary Markers to the floor in a □ shape with 15 cm space distance.

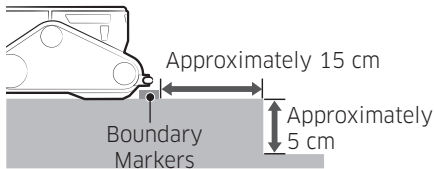


Where the raised spot is below 5 cm

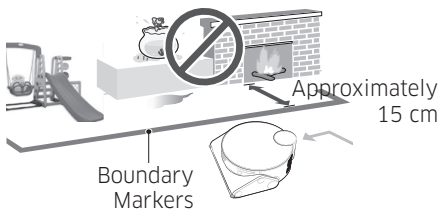

Where there is a slide, a swing, a flowerpot, a fireplace, any flammable substance or moisture.

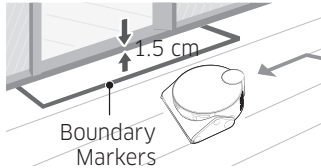




Where a threshold is above 1.5 cm

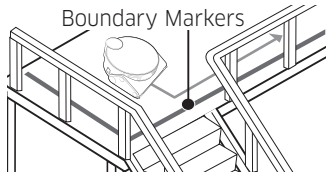

Where there is a risk of falling such as stairs, porches or guardrails.

Parts diagram

Jet Bot

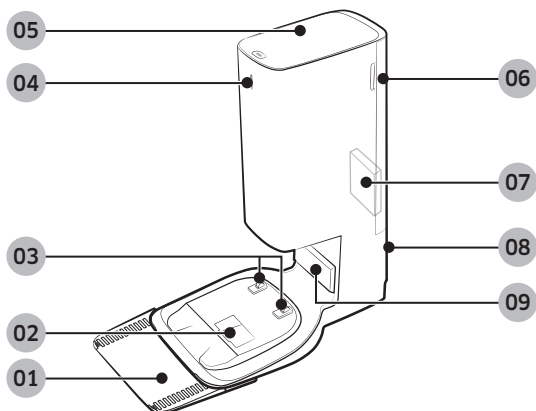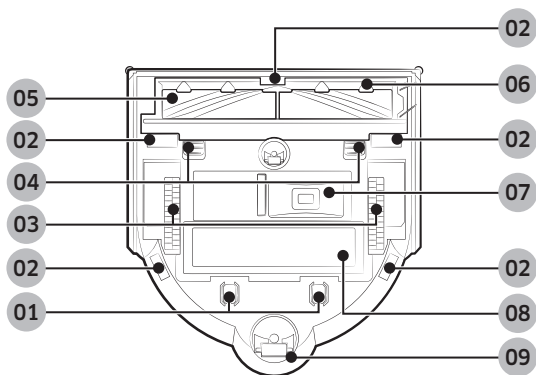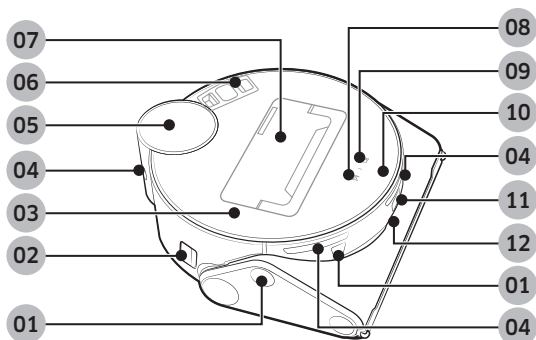

Top

- 01 Obstacle Sensor
- 02 Power switch
- 03 Upper Cover
- 04 Docking Sensor Window
- 05 LiDAR Sensor
- 06 Fine dust Filter
- 07 Dustbin
- 08 Start/stop button
- 09 Docking (Recharging) button
- 10 Status Indicator
- 11 Camera
- 12 3D Sensor

Bottom

- 01 Charging Pin
- 02 Cliff Sensor
- 03 Driving Wheel
- 04 Brush Cover Lock
- 05 Brush
- 06 Brush Cover
- 07 Empty dust Outlet
- 08 Battery Cover
- 09 Roller


Clean Station

- 01 Extra Plate
- 02 Dust Suction Port
- 03 Charging Terminal
- 04 Status Indicator
- 05 Cover
- 06 Fine dust Filter Cover
- 07 Fine dust Filter
- 08 Power cord groove
- 09 Charging Signal Transmitter

Cleaning the Jet Bot

Before maintenance work, you should turn off the power switch at the side of the Jet Bot.


Emptying and cleaning the Dustbin

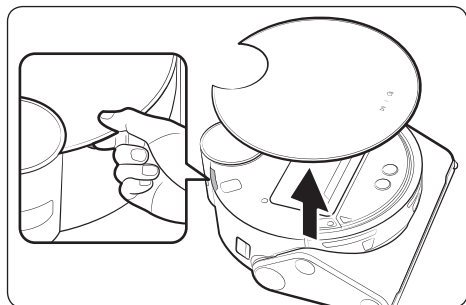


1 Detach the upper cover using the groove under the cover.




2 Hold the Dustbin handle and lift the Dustbin up.

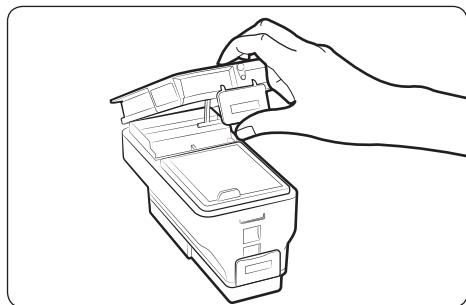


3 Unlock the transparent clip at the side of the Dustbin to open its Upper Cover.

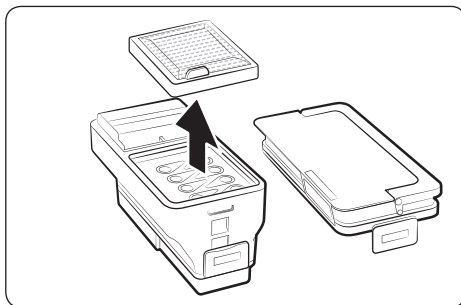


4 Pull the Pre-motor Filter from the Dustbin.

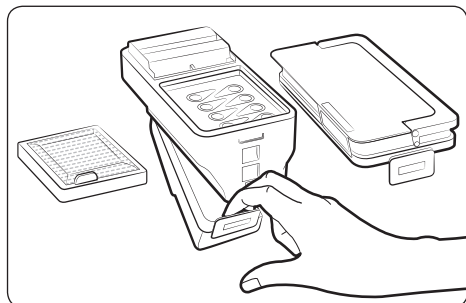


5 Unlock the transparent clip at the bottom of the Dustbin to open its Lower Cover.

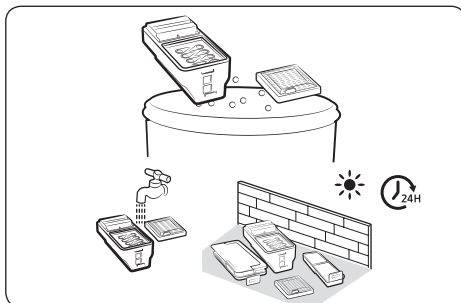


6 Remove the dust on the filter and Dustbin, clean them with water, and dry completely in the shade.

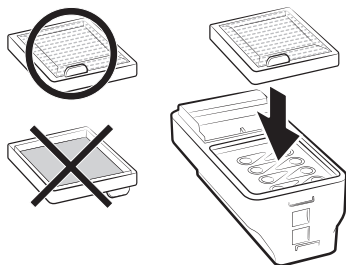

7 Attach the filter to the Dustbin.

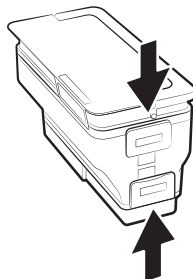


8 Attach the Upper Cover and the Lower Cover to the Dustbin. Make sure you can hear them click into position.

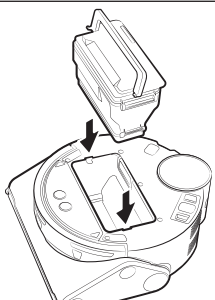


9 Attach the Dustbin to the Jet Bot. Grasp the handle and put the Dustbin into both grooves.

Cleaning the Driving Wheel

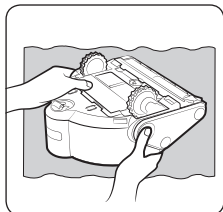


1 Place a soft cloth down first, turn the Jet Bot over, and place it gently on the cloth.

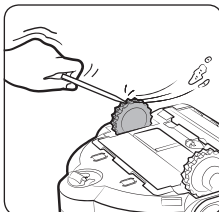


2 Remove foreign matter with a blunt rod or tweezers.


Cleaning the brush

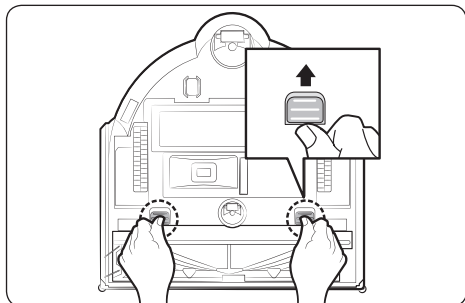


1 Push the Brush Cover Lock upward to unlock.

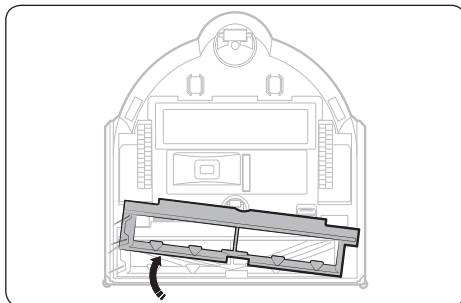


2 Detach the brush cover.

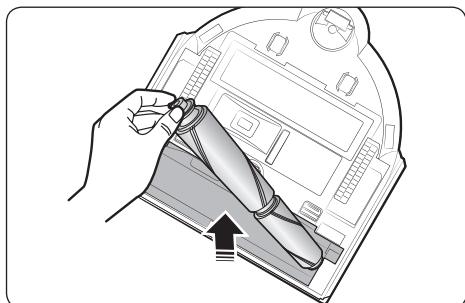


3 Lift up the left side of the brush first and then pull the brush from the groove on the right.

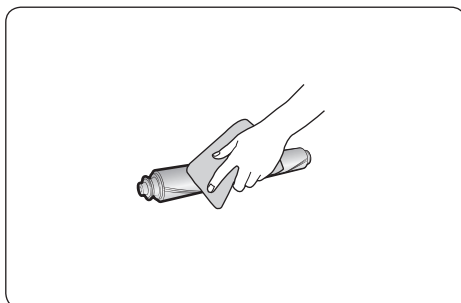

4 Clean the brush.

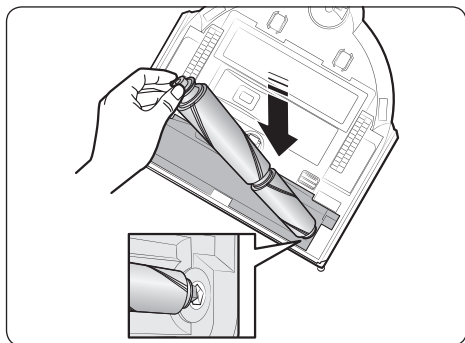


5 Attach the brush.

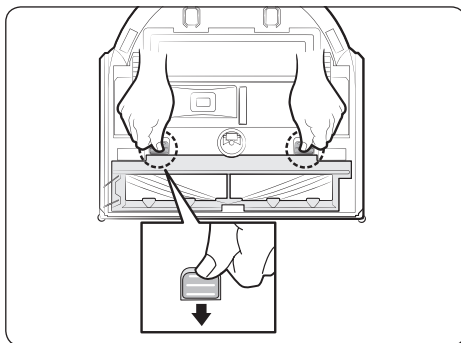


6 Attach the brush cover.

Cleaning the Sensor Window

Wipe the Sensor Window with a soft cloth.

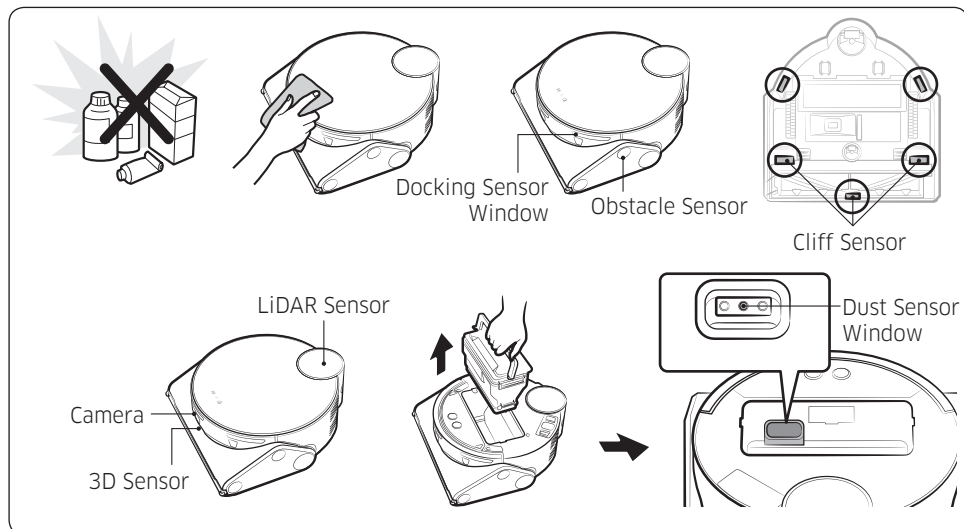

Cleaning the Fine dust Filter

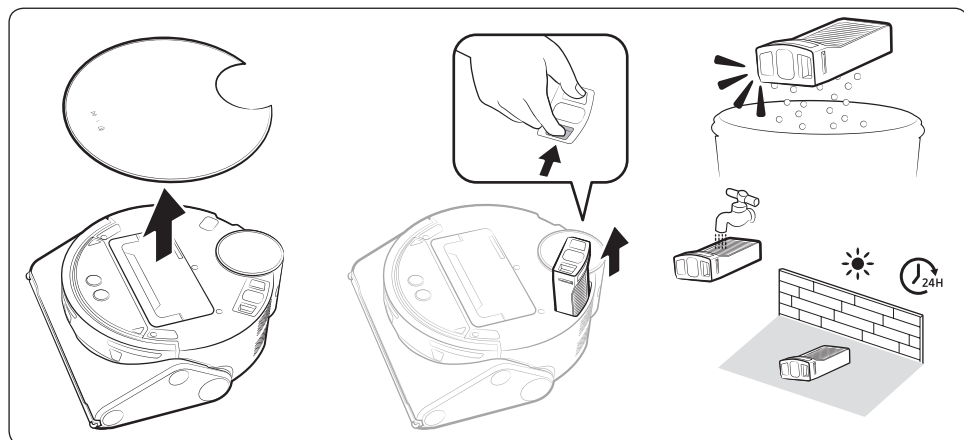


For detailed methods of use and cleaning, refer to the QR code.


Cleaning the Clean Station

Before cleaning the Clean Station, unplug the power cord from the electrical outlet.

Replacing the Dust Bag

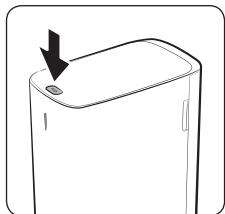


- 1 Press the [PUSH] button on the top of the Clean Station to open its cover.

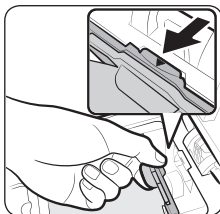

- 2 Pull the top of the Dust Bag holder gently.
 - If you do not pull the Dust Bag holder, you cannot replace the Dust Bag due to the safety device.




- 3 Remove the old Dust Bag and put a new Dust Bag into the Dust Bag holder by fitting into the grooves on the holder.
 - Push the Dust Bag to the end.

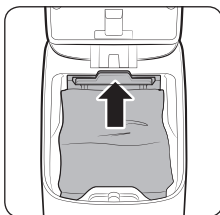


- 4 Push the top of the Dust Bag holder gently until you hear it click.
- 5 Close the Clean Station's cover.


Cleaning the Fine dust Filter

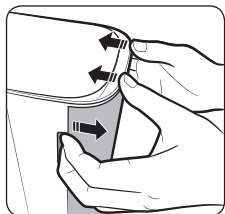


- 1 Grasp the grooves at the rear of the Clean Station and detach the Fine dust Filter cover.

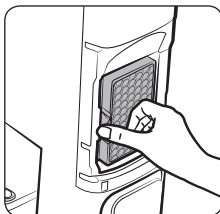

- 2 Detach the Fine dust Filter.

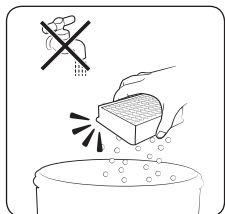


- 3 Clean the Fine dust Filter.
 - Do not clean the Fine dust Filter with water.

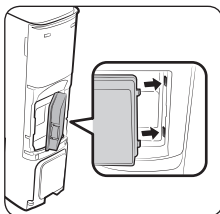


- 4 Attach the Fine dust Filter and the Fine dust Filter cover.


Cleaning the bottom cover

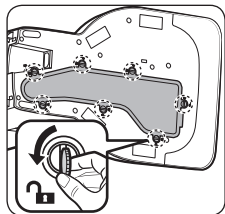


- 1 Lay the Clean Station on its side and turn the 7 fixed screws on the bottom cover in the unlock direction (🔓).

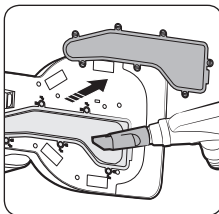


- 2 Detach the cover and remove dirt.

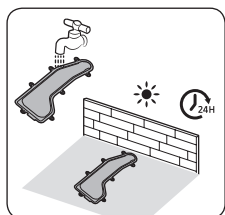

- 3 Clean the cover with water and dry it completely in the shade.

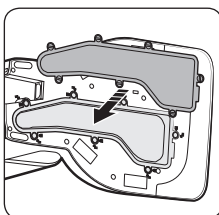

- 4 Attach the cover to the Clean Station.

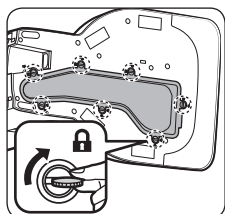

- 5 Turn the 7 fixed screws in the lock direction (🔒).

SmartThings App

The SmartThings App is only compatible with models that have a Wi-Fi function.
If you do not have a Wi-Fi router, you cannot use the SmartThings App.

Setting up the wireless router

- Please refer to the user manual of your wireless router for the settings of the wireless router.
- SAMSUNG Jet Bot supports only Wi-Fi 2.4 Ghz.
- SAMSUNG Jet Bot supports IEEE 802.11b/g/n and Soft-AP.
 - IEEE 802.11n is recommended.
- SAMSUNG Jet Bot supports only DHCP (Dynamic Host Configuration Protocol). Please make sure that the DHCP server option is activated on your wireless router.
- The Jet Bot supports the WEP-OPEN, WPA-PSK/TKIP, and WPA2-PSK/AES for the authentication and encryption protocols.
 - WPA2-PSK/AES is recommended.
 - Confirm that your router has a unique SSID and password.
- The quality of your wireless network connection may be influenced by the surrounding wireless environment.
- If your Internet service provider has permanently registered the MAC address (a unique identification number) of your PC or modem, your Jet Bot may not be able to connect to the Internet. Ask your Internet service provider about the procedure to connect an apparatus other than a PC to the Internet.
- If your internet service provider requires your ID or password to connect to the internet, your Jet Bot may not be able to connect. If this is the case, you must enter your ID or password when connecting to the Internet.
- The Jet Bot may not be able to connect to the Internet because of firewall issues. Contact your Internet service provider to resolve these issues.
- Some wireless routers may transmit an abnormal Domain Name Server (DNS) address even if the Internet is not connected. If this occurs, contact the manufacturer of your wireless router and your Internet service provider.
- If you still cannot connect to the Internet even after trying the procedure provided by your Internet service provider, please contact an authorized SAMSUNG service center.
- If your router is not a Wi-Fi certified product, The Jet Bot may not be able to connect to the Internet.

NOTE

- When pressing and holding the [▷||] button for 3 seconds, the network status is guided by voice.
- Setting Wi-Fi On/Off: Hold the [🏠] button down for 7 seconds to switch the Wi-Fi off or on to use again while the vacuum cleaner is on standby or charging.

Downloading the SmartThings App

- Download and install the SmartThings App from the markets (Google Play Store, Apple App Store, or SAMSUNG Galaxy Store). To find the app, use the keyword “SmartThings”.

NOTE

- SmartThings is incompatible with some tablets and some mobile devices.
- Some iPads and some mobile devices may not be supported.
- Visit Play Store or App Store to see if your mobile device is compatible with SmartThings.
- The supporting software version of the SmartThings app is subject to change according to the OS supporting policy the manufacturer provides. In addition, as for the SmartThings app or the functions that the app supports, the new application update policy on the existing OS version can be suspended due to usability or security reasons.
- The SmartThings app is subject to change without notice to improve usability or performance. As the mobile phone OS version is updated every year, the SmartThings is also updated continually according to the latest OS.
- If you have enquiries regarding the items mentioned above, please contact us on st.service@samsung.com.

Setting up a SAMSUNG account

- You must sign in to a SAMSUNG account before using the SmartThings App.
- To set up a SAMSUNG account, you can follow the directions provided by the SmartThings App.
- Or, if you have a SAMSUNG smartphone, you can add your SAMSUNG account in the setting app of your smartphone. Then, it will automatically sign in to your SAMSUNG account and you can use the SmartThings App.

Registering a device to the SmartThings App

- 1 **Connect your smartphone to your wireless router.**
 - If the smartphone is not connected, turn on the Wi-Fi in the Settings App and select a wireless router you want to connect to.
 - Set your smartphone to use Wi-Fi only and connect a device.
- 2 **Launch the SmartThings App on your smartphone.**
- 3 **If a pop-up saying that a new device has been found appears, tap ADD NOW.**
 - If the pop-up does not appear, add a device by selecting the ‘Home appliances’ category → ‘Robot cleaner’ and the Jet Bot to connect.
 - If you scan the SmartThings QR code attached on the Jet Bot, you can connect to the Jet Bot more easily.

4 [Android] The connection to your device will be progressed automatically.

- [iOS] Open the setting app, and select [vacuum]_E30AJT** in the Wi-Fi list.

5 Provide the authentication when you are directed to do so.

6 [Android] The connection to your wireless router will be progressed automatically.

- [iOS] Open the setting app, and select the wireless router in the Wi-Fi list.

7 When the product registration is complete, the Jet Bot device card is added.

NOTE

- When the Jet Bot cannot be registered to the SmartThings App
 - Refer to the SmartThings App guide or pop-up messages.
 - Confirm that the UPnP option of your wireless router is active, and then try the registration procedure again.
 - Confirm that your wireless router is operating in a wireless mode. If not, change it to the wireless mode and try again.
 - If you have two or more Jet Bots, turn off the other Jet Bots, and then try to register your Jet Bot again.
 - Change the name of the wireless router which has the same SSID to be distinguished from each other.
- If the Jet Bot and smartphone are not connected to the same wireless router, a response can be delayed depending on the network environment.
 - When the wireless router is changed, the connection between the Jet Bot and the SmartThings App is disconnected.
 - After changing the wireless router, register your Jet Bot again at the SmartThings App.

Software Update

- When the Jet Bot is charging on the Clean Station, the Jet Bot connects to the server and checks for software updates. If a new software is found, the Jet Bot will automatically download and update it.
- If the Status Indicator of the Jet Bot turns violet and stays violet while charging, it means that the Jet Bot is being updated. Please wait until rebooting is complete.

Functions of the SmartThings App

Classification	Functions	Explanation
Monitoring	Cleaning Report	- You can check the result of the last cleaning. - You can check the histories of last 50 cleanings.
	Home Monitoring	- The Home monitoring feature utilizes a camera on the front of the Jet Bot so you can view what is in front of the Jet Bot. - The Home monitoring function is turned on by default. If you do not want to use the function, press and hold the [▶] and the [⏏] at the same time. - The camera can be turned on via the SmartThings App when cleaning to get a stream of the activity.
	Child care	When your child arrives home, the robot vacuum will go to the specified location to welcome them home.
Control	Dock	You can stop cleaning and have the Jet Bot return to the Clean Station.
	Pause	You can stop cleaning or restart cleaning.
	Cleaning Mode	You can set the cleaning mode you want.
	Suction Power	You can set the suction power.
	Cleaning Functions	- You can set various cleaning functions. - For some functions, you need to create a map first. - For Room Clean, Around Furniture Clean and Spot Clean, you can choose only one of them, and the default setting is 'All' (All Rooms). ※ When the Jet Bot is in the Room Clean, the Around Furniture Clean or the Spot Clean, it may pass an unselected area to go to the cleaning place or to recharge.
	Room customization	Optimize cleaning for each room with customized options. [Suction power, detailed driving settings (safe driving, allowable height for entering under furniture)]
	Schedule	You can start designated cleaning at the scheduled time.

Classification	Functions	Explanation
Settings	Sound Mode	You can set the voice guide to [Voice], [Sound Effect], or [Mute].
	Language	The Jet Bot supports 14 languages.
	Volume	You can control the volume of the voice guide.
	Size of Obstacles to Avoid	You can control the sensitivity of detecting the size of obstacles.
	Wall Cleaning Options Settings	You can set whether the Jet Bot cleans close to a wall or not. (On: Cleaning close to a wall / Off: Cleaning a wall keeping 2 cm distance)
	Downtime	- At the designated time, the Jet Bot stops cleaning and returns to the Clean Station. - You may start cleaning during Downtime.
	Find Robot Vacuum	The Jet Bot makes a sound so that a user can find it.
	Calibration	The Jet Bot calibrates its 3D sensor to improve the accuracy of obstacle recognition.
	Child Lock	The Jet Bot locks its buttons so that they do not function. To unlock the buttons, turn the Jet Bot off and then on again.
	Empty Dust	You can select when to empty the dustbin of the Jet Bot.
Notice	Cleaning completed	When cleaning is complete, you can receive cleaning completion notice.
	Check Notice	If the Jet Bot needs to be checked, you can receive a notice.
Manage maps	No-go Zones	- You can set a zone where you do not want the Jet Bot to clean. - You can create maximum 15 zones.
	Edit Map	- You can divide or combine rooms on the created map. - You can change the name of a room.
	Edit Furniture and Appliances	- You can change the furniture or appliances the Jet Bot recognizes, or you can add new furniture or appliances to be cleaned around. - You can change or delete the name of an object.
	Reset Map	Reset the saved map.
	Add map	Up to 4 maps can be added.

Notes and cautions

Installation

NOTE

- Install the Clean Station in a place where the floor and wall are level.
- If the cleaning area is wooden floors, it is best to install the Clean Station along the grain of wooden floors.
- If the power switch is off, the Jet Bot will not charge even if it is docked on the Clean Station.
- Always keep the Clean Station on.
 - If power is not supplied to the Clean Station, the Jet Bot cannot find it and cannot automatically recharge.
 - If the Jet Bot is left detached from the Clean Station, the battery will drain naturally.
- Do not attach the Boundary Markers as (-----) shape.
 - The Jet Bot may not detect it and cross the boundary.

Charging

NOTE

- If the battery overheats during charging, it may take longer to charge.
- When auto charging is not working, do the following:
 - Turn the power switch (at the side the Jet Bot) off and on again.
 - Unplug the Clean Station's power plug and then plug it back on.
 - Unplug the Clean Station, and then check whether there is any foreign matter on the charging pins and clean charging pins of the Jet Bot and the Clean Station with a dry cloth or rag.
 - Check for any obstacles such as reflective objects, chairs, etc. near the Clean Station.

-
- If the Jet Bot is left detached from the Clean Station, the battery will drain naturally.
 - Try to keep the Jet Bot being charged on the Clean Station. (However, turn off the power switch and leave the Clean Station unplugged when planning to leave the house for long periods of time by going on a business trip or vacation, etc.)

Using

NOTE

- The Jet Bot may get caught on thresholds of entrance door or veranda, etc. during cleaning.
 - To restart operation, shut off the power switch, move the Jet Bot to an area where it can move easily, and then turn on the power again.
- In a dark area, the Jet Bot may not recognize an object.
 - Before cleaning, remove obstacles on the floor.
- The Jet Bot cannot completely clean areas which it cannot enter, such as small space between the corner, between the sofas or walls, etc.
 - Please use another cleaning tool to clean them regularly.
- The Jet Bot cannot vacuum clumps of dirt, so some may remain on the floor after cleaning.
 - Please use another cleaning tool to clean them regularly.
- After turning the Jet Bot off, wait for a while and then turn it on for a normal rebooting.
- When the Clean Station smells, replace a Dust Bag or clean filters.
- If there is a larva in the suctioned dust, it can multiply in the Dust Bag. Clean the Clean Station with a wet tissue and replace the Dust Bag.

Cleaning and maintenance

NOTE

- If you washed the Dustbin and filter with water
 - Dustbin: Completely wipe out the water.
 - Filter: Completely dry it in the shade before use.
- Do not use water to clean the Fine dust Filter, just shake it to clean.
- If suction power decreases continuously, or the Jet Bot overheats, clean the Fine dust Filter.

CAUTION

- Watch your fingers when attaching or detaching the filter, since they may get stuck in the Dustbin's intake.
- To avoid blockages by foreign matter, do not let the Jet Bot vacuum up toothpicks, cotton swabs, etc.
- If it is difficult to remove foreign matter from the brush, contact an authorized SAMSUNG service center.
- Since the brush sweeps dirt up from the floor during cleaning, foreign matter such as a thin and long thread, long hair, etc. may get caught in it. For the best cleaning results, check and clean it regularly.
- Only the Upper Cover, Lower Cover, and Pre-motor Filter can be detached from the Dustbin.
 - Be careful not to get injured when disassembling or revamping the Dustbin.
- Turn off the Jet Bot before cleaning or maintenance work.
- If a brush or a brush cover is not assembled correctly after the maintenance work, scratches may occur on the floor, or product malfunction may occur. Therefore, assemble them correctly by checking the maintenance method.

Battery usage

NOTE

- When you purchase a battery, check the SAMSUNG logo (**SAMSUNG**) attached on the battery and the model name, then contact a service center.
- This battery is exclusively for the SAMSUNG Electronics Jet Bot. Do not use it for any other products or purposes.
- Do not disassemble or modify the battery.
- Do not throw the battery out in fire or heat it.
- Do not connect any metallic object to the charging contacts (+, -).
- Store the battery indoors (at 0 °C~40 °C).
- If the battery malfunctions, do not disassemble it yourself. Contact your nearest SAMSUNG service center.
- As the battery is used over a length of time, the battery charging time and usage time decreases. In this case, contact a service center and replace it with a new battery.
- Do not disassemble the battery yourself and make sure short circuit of +, - poles does not occur.
- When battery leak occurs, make sure it does not touch your skin or eyes.

Corrective measures before reporting a problem

1 The Status Indicator turns red and blinks with a voice guide.

2 Turn off the power switch and check the instructions below and take appropriate actions.

3 When turning the Jet Bot on by pressing the power switch, the Status Indicator turns white.

Voice Guide	Checklist
It's difficult to move. Please move me somewhere else.	• The Jet Bot is caught, stuck or trapped while moving around. - Turn off the power switch and move the Jet Bot to another area.
Please remove the brush and take out whatever's stuck in there.	• Foreign matter caught in the brush - Turn off the power switch and remove the foreign matter from the brush.
Please check the left wheel to see if there's something stuck in it.	• Foreign matter caught in the left Driving Wheel - Turn off the power switch and remove the foreign matter from the left Driving Wheel.
Please check the right wheel to see if there's something stuck in it.	• Foreign matter caught in the right Driving Wheel - Turn off the power switch and remove the foreign matter from the right Driving Wheel.
Something's wrong with the front bump sensors. Please open the cover and check. The bumper might be jammed, or there might be something stuck in there.	• Bumper Sensor needs to be checked. - Turn off the power switch and turn it back on. - When the Status Indicator remains in red color and blinks, check if there's any small foreign matter between the bumper and the main body. If there is, remove the foreign matter.
Can't see anything. Please clean the front with a soft cloth.	• Foreign matter accumulated on the Obstacle Sensor Window. - Turn off the power switch and clean the Obstacle Sensor Window at the front with a soft cloth.
Something's wrong with the cliff sensor. Please clean the 5 small black windows underneath with a soft cloth.	• Foreign matter accumulated on the Cliff Sensor - Turn off the power switch and clean 5 Cliff Sensor Windows at the bottom with a soft cloth.
Please insert the bin so cleaning can start.	• Dustbin is not inserted. - Detach the Dustbin and insert it again.

Voice Guide	Checklist
The LiDAR sensor needs to be reset. Turn the power off, then on again. If that doesn't fix it, contact Customer Service.	- There is a problem with the LiDAR sensor. - Turn the power off, then on again. If the notice remains, contact Customer Service.
The 3D sensor needs to be reset. Turn the power off, then on again. If that doesn't fix it, contact Customer Service.	- There is a problem with the 3D sensor. - Turn the power off, then on again. If the notice remains, contact Customer Service.
The object recognition sensor needs to be reset. Turn the power off, then on again. If that doesn't fix it, contact Customer Service.	- There is a problem with the Object Recognition sensor. - Turn the power off, then on again. If the notice remains, contact Customer Service.
The monitoring camera needs to be reset. Turn the power off, then on again. If that doesn't fix it, contact Customer Service.	- There is a problem with the monitoring camera. - Turn the power off, then on again. If the notice remains, contact Customer Service.
The AI processor isn't working properly. Turn the power off, then on again. If that doesn't fix it, contact Customer Service.	- There is a problem with the AI system. - Turn the power off, then on again. If the notice remains, contact Customer Service.
Something's wrong with the main system. Turn the power off, then on again. If that doesn't fix it, contact Customer Service.	- There is a problem with the main system. - Turn the power off, then on again. If the notice remains, contact Customer Service.
Something's wrong with the LiDAR bump sensor. The LiDAR cap might be jammed, or there might be something stuck in there.	- Bumper Sensor needs to be checked. - Turn off the power switch and turn it back on. - When the Status Indicator remains in red color, check if there's any foreign matter between the LiDAR sensor and the main body. If there is, remove the foreign matter.
Can't move in this no-go zone. Please move me somewhere else.	- The result of the location recognition indicates that the Jet Bot is placed within the No-go Zones. - Check the No-go Zones of the mobile App.

* You can find details of the check at the SmartThings App.

* When the Jet Bot is turned off and on again, it starts newly in the Auto Clean mode.

Troubleshooting

Symptom	Checklist
The Jet Bot is not working at all.	• Check if the power switch is on. • Check if the Status Indicator is on. • Check if the Jet Bot's battery is depleted. – When the Jet Bot's Status Indicator turns red and stays red, place the Jet Bot manually on the Clean Station to charge it. • When you manually charge the Jet Bot due to complete discharge of its battery, the buttons on the Jet Bot do not work. When charging is partially complete (about 10-20 minutes later), the Status Indicator is on and the buttons work again.
The Jet Bot has stopped during cleaning.	• When the Jet Bot's Status Indicator turns red and stays red, place the Jet Bot manually on the Clean Station to charge it. • When the Jet Bot is immobilized by an obstacle such as a cord, obstacles, threshold, a raised spot, etc., pick it up and move it away from the obstacle. – If any fabric or string is caught in a Driving Wheel, turn off the power switch and remove the fabric or string before using it again. • Check whether the No-go Zones are set.
Suction power is weak.	• When there's too much dust in the Dustbin, suction power may get weakened. Turn off the power switch and empty the Dustbin. • If the brush at the bottom of the Jet Bot is blocked by foreign matter, turn off the power switch and remove foreign matter from the brush. • When noise suddenly increases, turn off the power switch and empty the Dustbin.
The Jet Bot cannot find the Clean Station.	• Check if there's a power failure or whether the power plug is unplugged. • Remove any obstacles around the Clean Station that may prevent the Jet Bot from returning to the Clean Station. • When there's foreign matter on the charging terminals, charging can be affected. Clean the foreign matter off the terminals.
The Jet Bot does not detect the Boundary Marker and crosses the boundary.	• Make sure the Boundary Markers are attached as () shape at 15 cm before the locations where the Jet Bot should not cross.

Symptom	Checklist
The Jet Bot suddenly cleans diagonally.	• Check if the Clean Station is installed along the grain of wooden floors or tiles. • The Jet Bot may clean in a diagonal direction if it is moving to another area using the shortest route. It may also move at a diagonal if it did not make contact with an obstacle at a right angle, if it was charged in a skewed direction at the Clean Station, or If the floor material is wooden or tile.
Jet Bot does not clean some places.	• Check whether the Clean Station is installed in a narrow passage or near a room door and move it to another place. – If the Clean Station is installed in a narrow passage or near a room door, the Jet Bot cannot pass through the passage or the door. • Check whether the places the Jet Bot does not clean are set as No-go Zones.
The Jet Bot cannot find a room.	• If the Jet Bot does not start cleaning from the Clean Station, or if the Clean Station is reinstalled to a new position of 45 degree or 1 m or more from the previous installed place, the Jet Bot cleans all areas, which is not based on the created map. – Start cleaning from the Clean Station. – When the Jet Bot creates a map and the Jet Bot starts cleaning, make sure the Jet Bot starts operating parallel to the wall. – Remove obstacles within 0.5 m of the left and right side and 1 m of the front side of the Clean Station.
The map which the Jet Bot has created is different from the saved map and the map is also drawn askew.	
Empty Dust function does not work.	• If the battery is too low, the Empty Dust function does not work. Charge the Jet Bot sufficiently, and run the function again. • Check whether the Clean Station's cover is open or the Dust Bag is full. • Check the time to empty Dustbin at the SmartThings App. If it is set as "When the robot vacuum's dustbin is full", the Empty Dust function does not work until the Dustbin is full. • If the Empty Dust function does not work properly, press the  button on the body of the Jet Bot while it is charging, you can empty the Dustbin of the Jet Bot manually. • If you press the  button during dust emptying, the dust emptying stops.

Symptom	Checklist
The Jet Bot does not detect and crosses No-go Zones.	• If the Jet Bot does not start cleaning from the Clean Station, the set No-go Zones function does not work. Therefore, start cleaning from the Clean Station to use the function.
The Intelligent Power Control function works on a normal floor.	• Check whether the floor is not even and then the Jet Bot works with its body a bit lifted up. • Check whether there are any foreign matter on the Cliff Sensor which is at the bottom of the Jet Bot. • Check whether the floor color is dark.
The Intelligent Power Control function does not work.	• When the Jet Bot cleans a carpet with short fiber and bright color, it may recognize the carpet as a floor and then the Intelligent Power Control function may not work.
The Corner Clean function does not work.	• When the Jet Bot cannot recognize the wall, the Corner Clean function may not work. – When an obstacle made of a reflective material is in front of the wall – When the wall itself is made of a reflective material – When the wall is a dark color
The Corner Clean function works though there is no wall or corner.	• Check whether small obstacles are arranged in a narrow space. • When the Jet Bot recognizes the front obstacle as a wall, the Corner Clean function may work.
The Corner Clean function works though the Jet Bot has not approached a wall or corner.	• When the degree of the angle of a corner which the Jet Bot detects is large, the Corner Clean function may work without approaching the corner.
The Jet Bot bumps into furniture or a wall.	• The Jet Bot may contact a wall or furniture during cleaning, and it is designed to give high performance cleaning to corner areas. The contact is certified as a soft touch to a product, a wall or furniture so there is no concern about damage when in use.
SmartThings App cannot be installed.	• To check the compatibility of the SmartThings App with your smartphone, visit 'Play Store' or 'App Store'. • The supporting OS version for the SmartThings App may change later. • For rooted smart devices, standard installation and use will not be guaranteed.
I have installed the SmartThings App, but the Jet Bot fails to be connected.	• Connect the Jet Bot to a wireless router by referring to the 'SmartThings App' of the user manual.

Symptom	Checklist
I fail to log into the SAMSUNG account.	Check your ID and password on the screen of the SAMSUNG account.
During product registration, the wireless router I want to connect cannot be searched.	Cancel the product registration, run the SmartThings App again, and try the product registration again.
During product registration, the password of the connecting wireless router is not input correctly.	- Cancel the product registration, run the SmartThings App again, and try the product registration again. - Press and hold the wireless router you want to connect on the network list, and delete the network to initialize the password.
During product registration, [] button is pressed and held as instructed but the next step does not appear.	- Press the [] button until you hear it beep. - If the next step does not appear within several seconds, press the [] button one more time. - In the case of iOS, hold down the [] button on the Jet Bot for at least 3 seconds and then select the 'Next' button on the screen.
A message of the product registration failure appears.	- Try the product registration procedure again by referring to the pop-up messages. - Please refer to the "Setting up the wireless router" in the user manual. - Please refer to the steps for completing the product registration in the user manual section "Adding a device to the SmartThings App". - When the product registration fails repeatedly, restart the SmartThings App and try the product registration. - All users should use the SAMSUNG account issued by the country which launches the product.
(Applicable to iOS only) During product registration, the AP password 111122222 is not input correctly.	Press and hold the "[vacuum]_E30AJT**" on the network list and delete the network to initialize the password.
The Jet Bot is not connected to Wi-Fi.	Check the setting status of the wireless router.
Even though the Jet Bot is connected to a smartphone without a problem, the Jet Bot does not work with the smartphone.	Turn off the SmartThings App and then run it again, or disconnect the smartphone from the wireless router and then connect it again, or turn off the power supply of the Jet Bot, turn it on, wait for a minute or longer, and then run the SmartThings App again.
The Jet Bot on the SmartThings App fails to start.	- Check if the Jet Bot is offline status on the SmartThings App. - Connect the wireless router to Jet Bot again by referring to the 'SmartThings App' on the manual.

Symptom	Checklist
The 'Offline' message of the Jet Bot appears on the SmartThings App though the Jet Bot's registration has completed without a problem.	• Close the SmartThings App and then run it again. • Check whether there is an internet connection problem of the wireless router. Especially, a firewall may interrupt standard operation.
The 'Offline' message of the Jet Bot appears on the SmartThings App during normal operation of the App.	• If the Jet Bot is distant from a wireless router, connection cut may occur. • Close the SmartThings App and restart the App. • If the connection cut occurs repeatedly, try the product registration again. • When the SSID/password of a wireless router is changed, try the product registration again. • Check whether the Jet Bot is in the Sleep Mode. Press the [▷] to cancel the Sleep Mode.
A map cannot be saved.	• To create a map, you need to register the device first and then start creating a map with the SmartThings App. • When the Jet Bot starts cleaning from the Clean Station and completes cleaning one time in Auto Clean, a map is saved.
When controlling with a smartphone, a response is delayed.	• If the Jet Bot and the smartphone are not connected to the same wireless router, a response can be delayed depending on the network environment.
The Jet Bot does not drive straight but turns to avoid an obstacle that is not there.	• 3D sensor calibration is required. As to the calibration, please refer to the calibration procedures in the SmartThings App. • If the problem is still not solved with the procedures in the 'Calibration' section, contact a Samsung service center.
The Jet Bot does not avoid small obstacles but bumps into them frequently.	
The Jet Bot returns to the Clean Station though cleaning is not complete.	
The Jet Bot takes an unusual and complicated trajectory.	
The Jet Bot does not recognize pet waste but sucks it up.	• If the pet waste is in the blind spot of the Object Recognition sensor's view angle, it may not be recognized. If the size of pet waste is smaller in diameter than about 2 cm x 3 cm wide, the Jet Bot may not recognize it as pet waste but something it has to clean and then it may suck it up.

Open Source Announcement

The software included in this product contains open source software.

To obtain the source code covered under licenses which have the obligation of publishing source code (e.g. GPL, LGPL... etc), please visit <http://opensource.samsung.com/> and search by model name.

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/VR9500_0/seq/0 leads to open source license information as related to this product. This offer is valid to anyone in receipt of this information.




How to reset to the factory default

- Turn the Jet Bot on and press and hold the [▷||] + [⏮] for 7 seconds. Then the status indicator turns white and blinks, and the Jet Bot starts factory default setting.
- When the factory default setting is complete, the Jet Bot automatically restarts.
- After the factory default setting, the device status on the SmartThings App changes to offline status.
 - Press and hold the 'Delete device' on the SmartThings App and delete the product.
 - After that, register the product with a mobile device.


Product Specification

Classification	Items	VR50T95**** series
Mechanical specifications	Weight	4.4 kg
	Size	W 305 mm x D 320 mm x H 120* mm (*Including LiDAR sensor: 136.5 mm)
	Cleaning method	LiDAR location recognition
	Button method of the Jet Bot	Touch type
Electrical specifications	Power consumption of the Jet Bot	170 W (Spot Clean)
	Battery specification	Lithium-ion 21.6 V / 82.08 Wh
Cleaning part	Charging type	Auto charging / Manual charging
	Cleaning Methods	Auto Clean, Room Clean, Around Furniture Clean, Spot Clean
	Additional functions	Energy-Saving Mode, Downtime Mode, Scheduled Cleaning, No-go Zones, Object Recognition
	Charging time	About 210 minutes
	Cleaning time (Based on a wooden floor)	Max About 60 minutes
		Smart About 60-90 minutes
		Normal About 90 minutes
Wi-Fi	Frequency range	2412-2472 MHz
	Transmitter power(Max)	20 dBm

- * Charging and cleaning time may differ depending on the conditions of use.
- * You can set the Downtime, the Scheduled Cleaning, the No-go Zones or the Cleaning Mode at the SmartThings App.

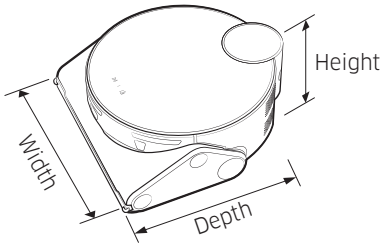

Name		Clean Station
Rated voltage		120 V~ 60 Hz
Rated output current		25.85 V, 2.5 A
Power consumption	Charging	80 W
	Operation	1000 W (When using suction power)
Weight		5.1 kg
Size		W 272 mm x D 416 mm x H 544 mm
Operating time		About 18 seconds

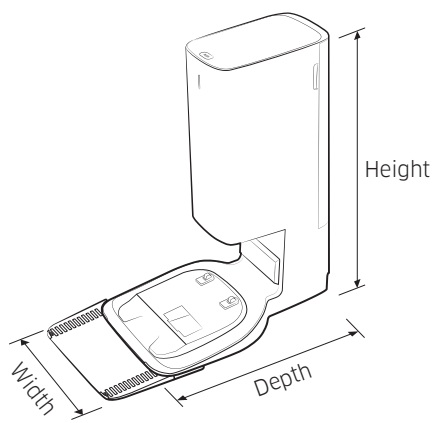

If you have any questions or comments relating to SAMSUNG products,
please contact the SAMSUNG customer care center.

Country	Customer Care Center	Web Site
CANADA	1-800-SAMSUNG (726-7864) 1-844-SAM-PAYS (726-7297)	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/support (French)
U.S.A	1-800-SAMSUNG (726-7864) 1-844-SAM-PAYS (726-7297)	www.samsung.com/us/support

