



VENOM™

Patent Pending



THE BEGINNING

As far back as I can remember, I have always had a passion for sports, fitness and science. From my own experience as an athlete, I studied the science of the body and learned that maintaining a healthy body is essential to an athlete's performance. Several years ago, I set out to create a brand whose products would improve athletic performance by enhancing recovery and preventing injury. In order to develop products of this caliber, I collaborated with some of the world's best athletes and trainers so that the products would meet their standards. Together, our goal was to create a series of products that would be a set of tools athletes could use to recover faster from training and competition, and prevent injury by keeping the body in proper balance. I would go on to name the brand after our first product- the HYPERICE: The most advanced portable ice compression device on the market.

I believe this cutting-edge and multipurpose fitness device will be even more innovative than our first device, and I believe it will be undoubtedly one of the most widely used recovery, movement enhancement and injury prevention devices in sports and fitness today; the HYPERSPHERE by HYPERICE.

A handwritten signature in black ink, appearing to read 'Anthony Katz', with a stylized, flowing script.

Anthony Katz | Founder

OUR OTHER PRODUCTS



ICT
Ice Compression Devices



VYPER
Vibrating Fitness Roller



HYPERSPHERE
Vibrating Fitness Ball



RAPTOR
High-Intensity Percussion



FUEL
Synthetic Reusable Ice



HYPERSOOTHE
Essential Oil Soothing Cream

THE VENOM



A wearable back device with state- of-the-art technology.

The Venom uses **Heat + Vibration** to warm up, loosen, and relax sore / stiff muscles. Manufactured using the industry's best technology the digital touchscreen control allows you to customize your temperature, vibration pattern, and timer for the optimal massage.



CORDLESS / RECHARGEABLE

16.8 V Lithium-Ion Battery



DIGITAL TOUCHSCREEN CONTROL

Nanotechnology Heat + Vibration Pods

TECHNOLOGY

1 Digital Touchscreen Control

2 Adjustable Contour-Fitted Waistband (One Size Fits All)



3 Detachable Lithium-Ion Battery Pack

5 Vibration Pods
x4



4 Premium Plush™
Neoprene Wrap

6 Nanotechnology
Heat

OPERATING INSTRUCTIONS

PLEASE READ PRIOR TO USE

CHARGING

- Fully charge battery for up to six hours before first use either placed on or off the unit.
- To charge, connect adapter to the battery's charging port and plug into wall charger.
- LED lights flash to show battery level and indicate active charging .
- Full charge is indicated when all LED lights stop flashing and remain fully illuminated.
- Pressing power button on battery activates battery and will display battery level.
- Battery may be recharged at any time and at any battery level.
- It is not recommended to fully deplete the battery to the red LED level.
- The average run-time is over one hour at level three heat, and longer at lower levels.

OPERATING

- Wrap unit around lower back area and attach strap with a snug but comfortable fit so the four vibration pods are centered on the back.
- Ensure battery is charged and properly attached and clipped to the unit.
- Turn battery on by pressing the battery power ON button.
- LCD screen will illuminate to show Venom is activated.
- Press desired heat and vibration option then press START on screen.
- Pressing only the START button activates QUICK START for Level 2 functions.
- Display will dim and lock after 5 seconds.
- Pressing the Controller UNLOCK button will unlock the unit for inputs on display.
- Heat and vibration functions may be changed only when the display is unlocked.
- On start, countdown timer sets to 10 minutes, however touching timer bars anytime during active function will restart the 10 minute countdown timer.
- The unit will auto turn off after 10 minutes of use without further input. To continue use, simply UNLOCK and press the START button again and set to the desired level.

WARNINGS AND CAUTION

- Do not immerse unit in water. Keep liquids away from unit. Clean only with a damp cloth. Do not attempt to disassemble.
- Turn off immediately and remove from body at first indication of any discomfort
- Do not operate continuously for more than one hour. After one hour use, allow unit to rest for 30 minutes before re-using.
- Unplug the charger from battery after charging or prior to use. Venom will not function while charger is plugged into battery.
- For storage or travel, remove battery and store in supplied carton box.

PLEASE DO NOT USE THE VENOM, OR ANY VIBRATION DEVICE WITHOUT FIRST OBTAINING APPROVAL FROM YOUR DOCTOR IF ANY OF THE FOLLOWING APPLY:

Pregnancy, diabetes with complications such as neuropathy or retinal damage, wear of pace-makers, recent surgery, epilepsy or migraines, herniated disks, spondylolisthesis, spondylolysis, or spondylosis, recent joint replacements or IUD's, metal pins or plates or any concerns about your physical health. Frail individuals and children should be accompanied by an adult when using any vibration device.

These contra indications do not mean that you are not able to use a vibration or exercise device but we do advise you to consult a doctor first.


Ongoing research is being done to the effects of vibration exercise for specific medical disorders. This will likely result in the shortening of the list of contra indications as shown above. Practical experience has shown that integration of vibration exercise into a treatment plan is advisory in a number of cases. This must be done on the advise of and in accompaniment with a doctor, specialist or physiotherapist.

USAGE INSTRUCTIONS

The VENOM is a cutting-edge massage device that uses heat and vibration to improve the body's overall performance. The VENOM is manufactured using industry best components providing just the right amount of heat and vibration.

The VENOM offers people of all ages and levels the combined benefits of heat and vibration to improve the body's overall performance, enhance recovery, flexibility, range of motion, comfort and thus improve overall well-being.

- 1 Battery power ON button
- 2 Controller UNLOCK button
- 3 Battery level indicator LED (green, red)
- 4 Controller display screen
- 5 Vibration pods (4)
- 6 AC wall charger (16.8VDC-1A)

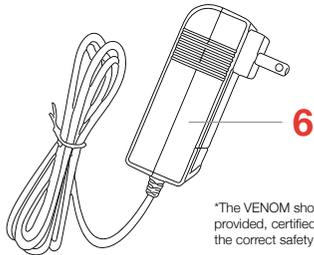

*The VENOM should only be used with the provided, certified, VENOM charger with the correct safety sensor so it will function properly.



Front View



Back View

SPECIFICATIONS

- AC Charger: 110-240V 50/60Hz - .5A - 16.8VDC-1A
- Heat (approx) Level 1 130F (55C) / Level 2 145F (63C) / Level 3 160F (72C)
- Vibration Frequency 88 Hz
- Weight 3 lbs / 1.6 kg (including charger)
- Designed in California / Made in China

1-YEAR WARRANTY

If within one year from the date of purchase, this product fails due to a defect in material or workmanship, Hyperice, Inc. will repair or replace the product, or necessary components, free of charge.

THIS WARRANTY EXCLUDES:

- (a) damage caused by accident, abuse, mishandling, or transport;
- (b) units subjected to unauthorized repair;
- (c) units not used in accordance with Hyperice care instructions;
- (d) damage exceeding the cost of the product;
- (e) deterioration of the delivered product resulting from abnormal storage and/or safeguarding conditions on the client's premises, and
- (f) failure to provide the dated proof of purchase.

Some states and countries do not allow a limitation of damages, so the foregoing limitation may not apply to you. This warranty guarantees specific legal rights, and but other rights may vary from country to country and from state to state. This warranty service is available through the operating policies and procedures of Hyperice Inc., Hyperice SAS, and all Hyperice international distributors. If you are a client, please contact the appropriate Hyperice business entity, dealer or retailer, from whom you directly purchased the product for warranty and return authorization procedures. This warranty is initiated and executed by Hyperice Inc. and Hyperice SAS.

CONTACT

15440 Laguna Canyon Road / Suite 230
Irvine, California 92618
(855) HYPERICE / (714) 524-3742
info@hyperice.com



HYPERICE

HYPERICE USA

15440 Laguna Canyon Road, Suite 230
Irvine, California 92618

FOLLOW US

