

POLAR®

POLAR OH1



USER MANUAL

Contents

Contents	2
Polar OH1 User Manual	8
Introduction	8
Get connected to the Polar ecosystem and get the most out of your OH1 ...	9
Setting up your OH1	10
Choose one option for setup	10
Option A: Set up with your computer via FlowSync	11
Option B: Set up with your mobile device via Flow app	11
Button functions and LEDs	12
Button Functions	13
LED Guide	13
During charging	13
After setting power on	13
When used as a sensor	13
When used as an independent training device	13
During fitness test	14
Other	14
Wearing your OH1	15
When measuring heart rate from your forearm or upper arm	15
Pairing	15
Pair a mobile device with your OH1	15

Pair OH1 with a Polar wrist unit	16
Pair OH1 with Polar Beat	17
Updating the firmware	17
With mobile device or tablet	18
With computer	18
Heart rate training	19
Measuring heart rate with your OH1	19
Start a training session	19
Start a training session as an independent training device	20
Start a training session with a Polar wrist unit	20
Start a training session with Polar Beat	21
Polar Flow App	22
Training data	22
Image sharing	22
Start using the Flow app	23
Polar Flow Web Service	23
Feed	24
Explore	24
Diary	24
Progress	24
Community	25
Programs	25
Syncing	26

Sync with Flow mobile App	26
Sync With Flow Web Service Via FlowSync	27
Battery	29
Charging OH1 battery	29
Caring for your OH1	30
Keep your OH1 clean	30
Take good care of the optical heart rate sensor	31
Storing	31
Service	31
Precautions	32
Interference during training	32
Minimizing risks when training	32
Technical specification	34
OH1	34
Polar FlowSync Software	35
Polar Flow mobile application compatibility	36
Water resistance of Polar products	36
Limited international Polar guarantee	38
Disclaimer	40
Contents	2
Polar OH1 User Manual	8
Introduction	8
Get connected to the Polar ecosystem and get the most out of your OH1 ...	9

Setting up your OH1	10
Choose one option for setup	10
Option A: Set up with your computer via FlowSync	11
Option B: Set up with your mobile device via Flow app	11
Button functions and LEDs	12
Button Functions	13
LED Guide	13
During charging	13
After setting power on	13
When used as a sensor	13
When used as an independent training device	13
During fitness test	14
Other	14
Wearing your OH1	15
When measuring heart rate from your forearm or upper arm	15
Pairing	15
Pair a mobile device with your OH1	15
Pair OH1 with a Polar wrist unit	16
Pair OH1 with Polar Beat	17
Updating the firmware	17
With mobile device or tablet	18
With computer	18
Heart rate training	19

Measuring heart rate with your OH1	19
Start a training session	19
Start a training session as an independent training device	20
Start a training session with a Polar wrist unit	20
Start a training session with Polar Beat	21
Polar Flow App	22
Training data	22
Image sharing	22
Start using the Flow app	23
Polar Flow Web Service	23
Feed	24
Explore	24
Diary	24
Progress	24
Community	25
Programs	25
Syncing	26
Sync with Flow mobile App	26
Sync With Flow Web Service Via FlowSync	27
Battery	29
Charging OH1 battery	29
Caring for your OH1	30
Keep your OH1 clean	30

Take good care of the optical heart rate sensor	31
Storing	31
Service	31
Precautions	32
Interference during training	32
Minimizing risks when training	32
Technical specification	34
OH1	34
Polar FlowSync Software	35
Polar Flow mobile application compatibility	36
Water resistance of Polar products	36
Limited international Polar guarantee	38
Disclaimer	40

Polar OH1 User Manual

This user manual helps you get started with your new OH1. For OH1 video tutorials and FAQs, go to support.polar.com/en/OH1.

Introduction

Congratulations on your new Polar OH1! The Polar OH1 is an optical heart rate sensor that is worn around your forearm or upper arm. It can be used as an independent training device that records and stores data or as a heart rate sensor with a Polar wrist unit. When used as a heart rate sensor, the OH1 sends the heart rate data to your Polar wrist unit.

OH1 is compatible with Polar wrist units using Bluetooth technology as well as with Polar Beat app. It can also be used with Polar Club, Polar GoFit and Polar Team app. In addition, it's compatible with iOS and Android devices that support the standard Bluetooth Heart Rate Profile.



Get connected to the Polar ecosystem and get the most out of your OH1

Get the **Polar Flow app** from the App Store[®] or Google Play[™]. Sync your OH1 with the Flow app after training, and get an instant overview and feedback of your training results and performance.

Sync your training data to the **Polar Flow web service** with the FlowSync software on your computer or via Flow app. In the web service you can plan your training, track your achievements, get guidance and see detailed analysis of your training results. Let all your friends know about your achievements, find fellow exercisers and get motivation from your social training communities. Find all this at flow.polar.com.

Setting up your OH1

We recommend that you charge the battery before you start using your OH1. If the battery is completely empty, it may take a moment for the charging to start. See [Batteries](#) for detailed information on charging the battery.

 *Note that when your OH1 battery has enough power it will advertise itself to all compatible receivers nearby.*

CHOOSE ONE OPTION FOR SETUP

A. Wired computer setup is quicker and you can charge your OH1 at the same time, but you need a computer available. This method requires an internet connection.

B. Mobile setup is convenient if you don't have access to a computer with a USB port, but it might take longer. This method requires an internet connection.

 *Fill in all the physical details required for accurate training data at once, and get the latest firmware for your OH1.*

Option A: Set up with your computer via FlowSync

1 Place the sensor into the USB adapter with the lens facing up so that the contacts on the sensor and the USB adapter meet (picture 1).

2 Plug the USB adapter into your computer USB port (picture 2), and go to flow.polar.com/start and install Polar FlowSync data transfer software to your computer.

3 Sign in with your Polar account or create a new one. We'll walk you through the sign-up and setup within the web service.



During the setup you'll be asked to set where you wear your product and fill in your physical settings. It is important to set these correctly to receive the most accurate data.

After the setup is done, you're ready to go. Have fun!

Option B: Set up with your mobile device via Flow app

Polar OH1 connects to the Polar Flow mobile app wirelessly via Bluetooth, so remember to have Bluetooth turned on in your mobile device.

Check the Polar Flow app compatibility at support.polar.com.

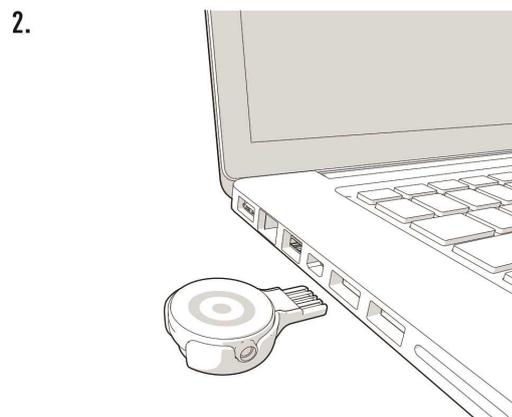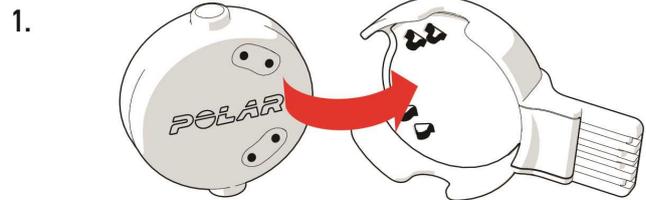

- 1 Download the Polar Flow app onto your mobile device.
- 2 Turn Bluetooth® on, and open Flow app on your mobile device.
- 3 Turn OH1 on by pressing the button until the LED is switched on, Flow app then prompts you to start pairing. Accept the pairing request and follow the on-screen instructions.

During the setup you'll be asked to set where you wear your product and fill in your physical settings. It is important to set these correctly to receive the most accurate data.

After the setup is done, you're ready to go. Have fun!

Button functions and LEDs

OH1 has one button that has different functions depending on the situation of use, and how long it is pressed. The LED on the device indicates different modes. See below what functions the button has in different modes, and what the different colored LEDs mean.

Quick Instructions Inside Armband Holder

The following markings are visible inside the sensor holder in the armband. The markings explain the OH1 basic button functions.

1X = ON (Set power ON: Short button press)

2X = REC (Set training recording ON - Use as an independent training device: Press button twice when OH1 is on)

1X LONG - OFF (Set power OFF: Long button press)

Button Functions

Set power ON:	Short button press
Set training recording ON (Use as an independent training device):	Press button twice when OH1 is on
Set power OFF:	Long button press

LED Guide

DURING CHARGING

Charging:	Yellow LED blinks slowly
Battery full:	Green LED continuously on

AFTER SETTING POWER ON

Battery status normal:	Green LED blinks five times
Battery status low:	Red LED blinks five times

WHEN USED AS A SENSOR

Heart rate not detected:	White LED blinks once every two seconds
Heart rate detected:	Green LED blinks once every two seconds

WHEN USED AS AN INDEPENDENT TRAINING DEVICE

Training recording set on but first time use not done:	Red LED blinks three times
--------------------------------------------------------	----------------------------

Heart rate not detected:	White LED blinks quickly twice
Heart rate detected:	Green LED blinks quickly twice
Battery low:	Green and Red LED alternate every other second
Battery critical:	Red LED blinks quickly

DURING FITNESS TEST

Heart rate not detected:	White LED blinks once every two seconds
Heart rate detected:	Purple LED blinks once every two seconds

OTHER


Connecting, Syncing or Pairing:	Blue LED blinks
Searching or waiting for confirmation:	Blue LED blinks quickly
Updating firmware:	Blue LED continuously on
Error:	Red LED continuously on

Wearing your OH1

When measuring heart rate from your forearm or upper arm

To measure heart rate accurately, you need to wear the OH1 snugly on your forearm or upper arm, not on your wrist.

- 1 Place the sensor into the armband holder with the lens facing up.
- 2 Wear the armband so that the sensor is on the underside of the armband firmly against your skin.
- 3 Wear the OH1 around your forearm or upper arm.

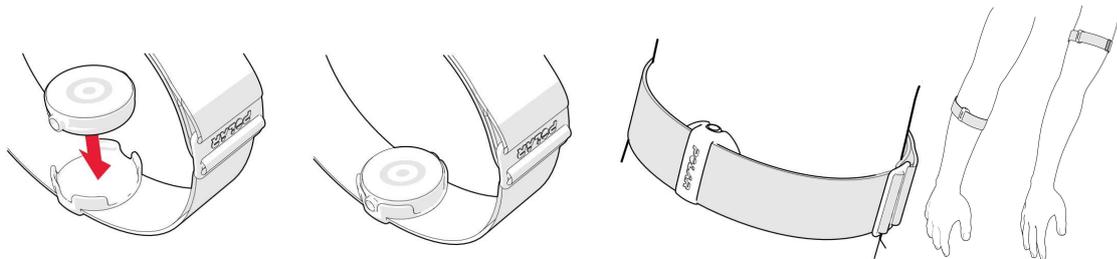

The sensor must be in firm skin contact, but not too tight to prevent blood flow. For most accurate heart rate measurement, we advise you to wear your OH1 for a few minutes prior to starting the heart rate measurement.

Pairing

Pair a mobile device with your OH1

If you've done the setup for your OH1 with a mobile device as described in chapter "Setting up your OH1" on page 10, your OH1 has already been paired

with your mobile device.

If you did the setup with a computer, and would like to use your OH1 with Polar Flow app you need to perform one training session with OH1 as an independent training device before it can be paired with Flow app. See detailed instructions below.

Before pairing make sure:

- You have a Polar account and Flow app.
- Your mobile device has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- You have performed at least one training session with OH1 as an independent training device. For details, see "Start a training session" on page 19

Once all the criteria above is met:

1 Sign in to Flow app with your Polar account.

2 On OH1, press the button until the LED is switched on, and release. OH1 is now on.

3 Flow app automatically prompts you to pair your OH1 with it if it is within Bluetooth range.

 *Your OH1 syncs with the Flow app automatically if your phone is within the Bluetooth range. When your OH1 syncs with Flow app, your training data is also synced automatically via an internet connection to the Flow web service.*

Pair OH1 with a Polar wrist unit

On OH1, press the button until the LED is switched on, and release. OH1 is now on.

Check the user manual of your Polar wrist unit at support.polar.com for specific pairing instructions.

Pair OH1 with Polar Beat

- 1 Download Polar Beat onto your mobile device from the App Store® or Google Play™.
- 2 Make sure your mobile device has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- 3 On your mobile device, open Polar Beat and sign in with your Polar account, which you have created when setting up your OH1 or create a new account if you don't have one.
- 4 On OH1, press the button until the LED is switched on, and release. OH1 is now on.
- 5 On Beat, go to **Settings > HR sensor** and tap **Pair** next to your OH1 under **Found sensor**.

Updating the firmware

You can update the firmware of your OH1 yourself to keep it up to date. You'll be notified via Flow when a new version is available. Firmware updates are performed to improve the functionality of your OH1. They can include improvements to existing features, completely new features or bug fixes. We recommend that you update the firmware of your OH1 every time a new version is available.

 *You won't lose any data due to the firmware update. Before the update begins, the data from your OH1 is synced to the Flow web service.*

With mobile device or tablet

You can update the firmware with your mobile device if you're using the Polar Flow mobile app to sync your training and activity data. The app will let you know if there's an update available and will guide you through it. We recommend that you plug the OH1 into a power source before starting the update to ensure flawless update operation.

 *The wireless firmware update may take up to 20 minutes, depending on your connection.*

With computer

Whenever a new firmware version is available, FlowSync will notify you when you connect the OH1 to your computer. The firmware updates are downloaded via FlowSync.

To update the firmware:

- 1 Place the sensor into the USB adapter with the lens facing up so that the contacts on the sensor and the USB adapter meet.
- 2 Plug the USB adapter into your computer USB port.
- 3 FlowSync starts syncing your data.
- 4 After syncing, you are asked to update the firmware.
- 5 Choose **Yes**. New firmware is installed (this may take up to 10 minutes). Please wait until the firmware update has been finalized before you detach the OH1 from your computer.

Heart rate training

Although there are many subjective clues as to how your body is doing during exercise (perceived exertion, breathing rate, physical sensations), none of them are as reliable as measuring heart rate. It is objective and affected by both internal and external factors—meaning that you will have a dependable measure of your physical state.

Measuring heart rate with your OH1

To measure heart rate accurately you need to wear your OH1 snugly around your forearm or upper arm. The sensor must be in constant touch with your skin, but the armband should not be too tight to prevent blood flow. For most accurate heart rate measurement, we advise you to wear your OH1 for a few minutes prior to starting the heart rate measurement.

If you have tattoos avoid placing the sensor right on them it as it may prevent accurate readings.

Also it's a good idea to warm up the skin if your hands and skin get cold easily. Get the blood going before starting your session!

For detailed instructions on wearing OH1, see "Wearing your OH1" on page 15

Start a training session

Wear the OH1 around your forearm or upper arm, for details see "Wearing your OH1" on page 15

Start a training session as an independent training device

Before using OH1 as an independent training device, it needs to be registered and linked to a Polar Flow account. For details, see "Setting up your OH1" on page 10.

- 1 Switch OH1 on by pressing the button until the LED is switched on and release.
- 2 OH1 is now on, press the button shortly twice to switch recording on.
- 3 When your heart rate is detected, the green LED will blink rapidly, and you can start your session.

After your training session, you can stop the recording by pressing the button until the LED is switched off. Then sync your training session to the Flow app and web service to view the details of your session. See "Syncing" on page 26 for more information.

 When used as an independent training device training sessions are stored under the **Other indoor** Sport Profile. The memory capacity is up to 200 hours of training.

Start a training session with a Polar wrist unit

Before starting, make sure the OH1 is paired with your Polar wrist unit. For details see "Pairing" on page 15

- 1 Switch OH1 on by pressing the button until the LED is switched on and release.
- 2 OH1 is now on, and can be used as a heart rate sensor with a Polar wrist unit.
- 3 When your heart rate is detected, the green LED blinks once every two

seconds.

4 Start the session from your Polar wrist unit.

After your training session, you can stop the recording from your Polar wrist unit. Then sync your training session to the Flow app and web service to view the details of your session. See "Syncing" on page 26 for more information.

i Note that the Polar Fitness Test and Orthostatic Test available on certain Polar wrist units and bike computers cannot be performed with Polar OH1.

i When using OH1 with a Polar wrist unit your training session may in some cases be shown twice in Polar Flow web service and app. This is can happen if the OH1 recording is accidentally switched on when starting your session. The duplicate session can be deleted in the Flow web service and app.

Start a training session with Polar Beat

Before starting, make sure the OH1 is paired with Polar Beat. For details see "Pairing" on page 15

1 Switch OH1 on by pressing the button until the LED is switched on and release.

2 OH1 is now on, and can be used as a heart rate sensor with Polar Beat.

3 When your heart rate is detected, the green LED blinks once every two seconds.

4 Start the session from Polar Beat.

After your training session, you can stop the recording by tapping the stop button in Polar Beat.

Polar Flow App

In the Polar Flow mobile app, you can see an instant visual interpretation of your training data.

Training data

With the Polar Flow app, you can easily access the information of your past and planned training sessions.

Get a quick overview of your training, and analyze every detail of your performance right away. See weekly summaries of your training in the training diary. You can also share the highlights of you training with your friends with the image sharing function.

Image sharing

With Flow app's image sharing function you can share images with your training data on them to most common social media channels, like Facebook and Instagram, with your training data on them. You can either share an existing photo or take a new one and customize it with your training data. If you had GPS recording on during your training session, you can also share a snapshot of your training route.

To see a video, click on the following link:

[Polar Flow app | Sharing training results with a photo](#)

Start using the Flow app

You can "Setting up your OH1" on page 10 using a mobile device and Flow app.

To start using the Flow app, download it from the App Store® or Google Play™ onto your mobile device. Flow App for iOS is compatible with iPhone 4S (or later) and needs Apple's iOS 7.0 (or later). Polar Flow mobile app for Android is compatible with devices running Android 4.3 or later. For support and more information about using Polar Flow app, go to support.polar.com/en/support/Flow_app.

Before taking a new mobile device (smartphone, tablet) into use, it has to be paired with your OH1. See "Pairing" on page 15 for more details.

Your OH1 syncs your training data to the Flow app automatically after your session. If your phone has an internet connection, your activity and training data are also synced automatically to the Flow web service. Flow app is the easiest way to sync your training data from your OH1 with the web service. For information on syncing, see "Syncing" on page 26.

For more information and instructions on Flow app features, visit [Polar Flow app product support page](#).

Polar Flow Web Service

In the Polar Flow web service, you can plan and analyze your training in detail and learn more about your performance. You can also share the highlights of your training with your friends in the Flow community, sign up for your club's classes and get a personalized training program for a running event.

The Polar Flow web service also shows your daily activity goal completion percentage and the details of your activity, and helps you understand how your daily habits and choices affect your well-being.

You can "Setting up your OH1" on page 10 with your computer at flow.polar.com/start. There you are guided to download and install the FlowSync software for syncing data between your OH1 and the web service, and to create a user account for the web service. If you did the setup using a mobile device and Flow app, you can log into the Flow web service with the credentials you created in the setup.

Feed

In **Feed** you can see what you and your friends have been up to lately. Check out the latest training sessions and activity summaries, share your best achievements, comment and like your friends' activities.

Explore

In **Explore** you can browse the map and see other users' shared training sessions with route information. You can also relive other people's routes and see where the highlights happened.

To see a video, click on the following link:

[Polar Flow web service | Explore](#)

Diary

In **Diary** you can see your daily activity, sleep, planned training sessions (training targets), as well as review past training results.

Progress

In **Progress** you can follow your development with reports.

Training reports are a handy way to follow your progress in training over longer periods. In week, month and year reports you can choose the sport for

the report. In custom period, you can choose both the period and the sport. Choose the time period and sport for report from the drop-down lists, and press the wheel icon to choose what data you want to view in the report graph.

With the help of the activity reports, you can follow the long-term trend of your daily activity. You can choose to view either daily, weekly or monthly reports. In the activity report you can also see your best days regarding daily activity, steps, calories and sleep from your chosen time period.

The Running Index report is a tool to help you monitor your long term Running Index development, and estimate your success in running 10K or a half marathon for example.

Community

In the **Flow Groups, Clubs** and **Events** you can find fellow exercisers who train for the same event or in the same health club as you do. Or you can create your own group for the people you want to train with. You can share your exercises and training tips, comment other members' training results and be part of the Polar Community. In Flow Clubs you can view class schedules and sign up for classes. Join in and get motivation from your social training communities!

To see a video, click on the following link:

[Polar Flow Events](#)

Programs

The Polar Running Program is tailored for your goal, based on Polar heart rate zones, taking your personal attributes and training background into account. The program is intelligent, it adapts along the way based on your development. The Polar Running Programs are available for 5 k, 10 k, half marathon and marathon events, and consist of two to five running exercises per week depending on the program. It's super simple!

For support and more information about using the Flow web service, go to, support.polar.com/en/support/flow.

Syncing

You can transfer data from your OH1 to the Polar Flow app wirelessly via the Bluetooth connection. Or, you can sync your OH1 with the Polar Flow web service by using a USB port and the FlowSync software. To be able to sync data between your OH1 and the Flow app you need to have a Polar account. If you want to sync data from your OH1 directly to the web service, in addition to a Polar account, you need the FlowSync software. If you've set up your OH1, you have created a Polar account. If you set up your OH1 using a computer, you have the FlowSync software on your computer.

Remember to sync and keep your data up-to-date between your OH1, the web service and the mobile app wherever you are.

Sync with Flow mobile App

Before syncing make sure:

- You have a Polar account and Flow app.
- Your mobile device has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- You have paired your OH1 with your mobile. For more information, see "Pairing" on page 15.

Sync your data:

1 Sign in to Flow app with your Polar account.

2 On OH1, press the button until the LED is switched on, and release. OH1 is now on.

3 Your OH1 syncs with Flow app automatically if your phone is within Bluetooth range.

 *Your OH1 syncs with the Flow app automatically after you finish a training session if your phone is within the Bluetooth range. When your OH1 syncs with the Flow app, your training data is also synced automatically via an internet connection to the Flow web service.*

For support and more information about using the Polar Flow app, go to support.polar.com/en/support/Flow_app.

Sync With Flow Web Service Via FlowSync

To sync data with the Flow web service you need the FlowSync software. Go to flow.polar.com/start, and download and install it before trying to sync.

1 Place the sensor into the USB adapter with the lens facing up so that the contacts on the sensor and USB adapter meet.

2 Plug the USB adapter into a computer USB port. Make sure FlowSync software is running.

3 The FlowSync window opens on your computer, and the syncing starts.

4 Completed is displayed when you are done.

Every time you plug in your OH1 to your computer, the Polar FlowSync software will transfer your data to the Polar Flow web service and sync any settings you may have changed. If the syncing does not automatically start, start FlowSync from the desktop icon (Windows) or from the applications folder (Mac OS X). Every time a firmware update is available, FlowSync will notify you, and request you to install it.

 *If you change settings in the Flow web service while your OH1 is plugged into your computer, press the synchronize button on FlowSync to transfer to the settings to your OH1.*

For support and more information about using the Flow web service, go to support.polar.com/en/support/flow.

For support and more information about using FlowSync software, go to support.polar.com/en/support/FlowSync.

Battery

At the end of the working life of the product Polar encourages you to minimize possible effects of waste on the environment and human health by following local waste disposal regulations and, where possible, utilizing separate collection of electronic devices. Do not dispose of this product as unsorted municipal waste.

Charging OH1 battery

The OH1 has an internal, rechargeable battery. Rechargeable batteries have a limited number of charge cycles. You can charge and discharge the battery over 300 times before a notable decrease in its capacity. The number of charge cycles also varies according to use and operating conditions.

i *Do not charge the battery in temperatures under 0 °C/+32 °F or over +40 °C/+104 °F or when the charging contacts are wet.*

Use the USB adapter included in the product set to charge it via the USB port on your computer. You can also charge the battery via a wall outlet. When charging via a wall outlet, use a USB power adapter (not included in the product set). If you use a USB power adapter, make sure that the adapter is marked with "output 5Vdc" and that it provides a minimum of 500mA. Only use an adequately safety approved USB power adapter (marked with "LPS", "Limited Power Supply" or "UL listed").


i *Before charging, make sure there's no moisture, hair, dust or dirt on the OH1 or OH1 USB adapter connectors. Gently wipe off any dirt and blow off the dust. Do not use any sharp tools for cleaning to avoid scratching.*

To charge with your computer, just plug your OH1 to your computer, and at the same time, you can have it synced it with FlowSync.


1 Place the sensor into the USB adapter with the lens facing up so that the contacts on the sensor and USB adapter meet (picture 1).

2 Plug the USB adapter into a computer USB port or USB power wall outlet (picture 2).

1.

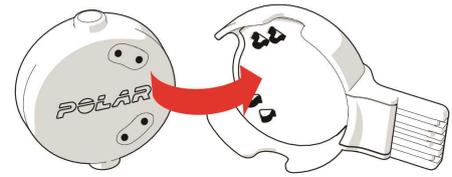

2.

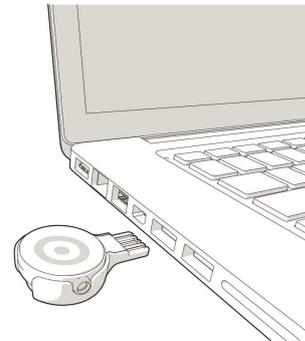

Caring for your OH1

Like any electronic device, the Polar OH1 should be kept clean and treated with care. The instructions below will help you fulfill the guarantee obligations, keep the device in peak condition and avoid any issues in charging or syncing.

Keep your OH1 clean

Wipe any dirt or mud off OH1 after each training session with a soft towel.

Keep the OH1 and OH1 USB adapter charging contacts clean to ensure smooth charging and syncing.

Before charging, make sure there's no moisture, hair, dust or dirt on the OH1 or OH1 USB adapter charging contacts. Gently wipe off any dirt and blow off any dust. Do not use any sharp tools for cleaning to avoid scratching.

Keep the OH1 contacts clean to protect it from oxidation and other possible damage caused by dirt and salt water (e.g. sweat or sea water). **Do not charge the OH1 when the charging contacts are wet or sweaty.**

TAKE GOOD CARE OF THE OPTICAL HEART RATE SENSOR

Keep the optical sensor area clean and scratch-free. However, small scratches should not affect the performance of optical heart rate measurement.

Storing

Keep your training device in a cool and dry place. Do not keep it in a damp environment, in non-breathable material (a plastic bag or a sports bag) nor with conductive material (a wet towel). Do not expose the training device to direct sunlight for extended periods, such as by leaving it in a car. It is recommended to store the training device partially or fully charged. The battery slowly loses its charge when it is stored. If you are going to store the training device for several months, it is recommended to recharge it after a few months. This will prolong the battery lifetime.

Do not leave the device in extreme cold (below -10 °C/14 °F) and heat (above 50 °C/120 °F) or under direct sunlight.

Service

During the two-year guarantee/warranty period we recommend that you have service done by an authorized Polar Service Center only. The warranty does not cover damage or consequential damage caused by service not authorized by Polar Electro. For further information, see Limited International Polar Guarantee.

For contact information and all Polar Service Center addresses, visit support.polar.com and country-specific websites.

Precautions

The Polar OH1 is designed to measure heart rate. No other use is intended or implied.

The training device should not be used for obtaining environmental measurements that require professional or industrial precision.

We recommend that once in a while you wash the device and the armband to avoid any skin problems from a dirty armband.

Interference during training

Electromagnetic Interference and Training Equipment

Disturbance may occur near electrical devices. Also WLAN base stations may cause interference when training with the training device. To avoid erratic reading or misbehavior, move away from possible sources of disturbance.

Training equipment with electronic or electrical components such as LED displays, motors and electrical brakes may cause interfering stray signals.

If the training device still does not work with the training equipment, it may be electrically too noisy for wireless heart rate measurement. For further information, see www.polar.com/support.

Minimizing risks when training

Training may include some risk. Before beginning a regular training program, it is recommended that you answer the following questions concerning your health status. If you answer yes to any of these questions, we recommend that you consult a doctor before starting any training program.

- Have you been physically inactive for the past 5 years?
- Do you have high blood pressure or high blood cholesterol?

- Are you taking any blood pressure or heart medication?
- Do you have a history of breathing problems?
- Do you have symptoms of any disease?
- Are you recovering from a serious illness or medical treatment?
- Do you use a pacemaker or other implanted electronic device?
- Do you smoke?
- Are you pregnant?

Note that in addition to training intensity, medications for heart conditions, blood pressure, psychological conditions, asthma, breathing, etc., as well as some energy drinks, alcohol, and nicotine may also affect heart rate.

It is important to be sensitive to your body's responses during training. **If you feel unexpected pain or excessive fatigue when training, it is recommended that you stop the training or continue at a lighter intensity.**

Note! If you are using a pacemaker, you can use Polar products. In theory interference to pacemaker caused by Polar products should not be possible. In practice no reports exist to suggest anyone ever having experienced interference. We cannot however issue an official guarantee on our products' suitability with all pacemakers or other implanted devices due to the variety of devices available. If you have any doubts, or if you experience any unusual sensations while using Polar products, please consult your physician or contact the implanted electronic device manufacturer to determine safety in your case.

If you are allergic to any substance that comes into contact with your skin or if you suspect an allergic reaction due to using the product, check the listed materials in Technical Specifications.

 *The combined impact of moisture and intense abrasion may cause color to come off the heart rate sensor's surface, possibly staining clothes. If you use perfume, suntan/sunscreen lotion or insect repellent on your skin, you must ensure that it does not come into contact with the training device or the heart rate sensor. Please avoid clothing with colors that might transfer onto the training device (especially training devices with light/bright colors) when worn together.*

 This product is not a toy. Do not allow children or pets to play with this product. This product contains small components that can be a choking hazard.

Technical specification

OH1

Operating time:	Up to 12 hours of continuous training
Battery type:	45 mAh Li-pol rechargeable battery
Memory capacity:	Up to 200 hours training
Operating temperature:	-10 °C to +50 °C / 14 °F to 122 °F
OH1 sensor materials:	ABS, ABS+GF, PMMA, SUS 316 (Stainless steel)

Armband materials:	SUS 304 (Stainless steel) PA coated, Polyester elastane (inside: chloroprene rubber), Polyester, PA
USB adapter materials:	PC+ABS, SUS 301 (Stainless steel) Gold plated
Water resistance:	30 m (suitable for bathing and swimming)

Uses wireless Bluetooth® technology.

Polar FlowSync Software

To use FlowSync software you need a computer with Microsoft Windows or Mac OS X operating system with an internet connection and a free USB port.

FlowSync is compatible with the following operating systems:

Computer operating system	32-bit	64-bit
Windows XP	X	
Windows 7	X	X
Windows 8	X	X
Windows 8.1	X	X
Windows 10	X	X
Mac OS X 10.6	X	X
Mac OS X 10.7		X
Mac OS X 10.8		X
Mac OS X 10.9		X

Computer operating system	32-bit	64-bit
Mac OS X 10.10		X
Mac OS X 10.11		X
Mac OS X 10.12		X

Polar Flow mobile application compatibility

- iPhone 4S or later
- Android 4.3 or later

Water resistance of Polar products

In the watch industry, water resistance is generally indicated as meters, which means the static water pressure of that depth. Polar uses this same indication system. Water resistance of Polar products is tested according to International Standard **ISO 22810** or **IEC60529**. Every Polar device that has water resistance indication is tested before the delivery to stand water pressure.

Polar products are divided into four different categories according to their water resistance. Check the back of your Polar product for the water resistance category, and compare it to the chart below. Please note that these definitions do not necessarily apply to products of other manufacturers.

When performing any underwater activity, the dynamic pressure generated by moving in water is greater than the static pressure. This means that moving the product under water subjects it to a greater pressure than if the product were stationary.

Marking on the back of	Wash splashes,	Bathing and swim-	Skin diving	SCUBA diving	Water resistant characteristics

the product	sweat, raindrops etc.	swimming	with snorkel (no air tanks)	(with air tanks)	
Water resistant IPX7	OK	-	-	-	Do not wash with a pressure washer. Protected against splashes, raindrops etc. Reference standard: IEC60529.
Water resistant IPX8	OK	OK	-	-	Minimum for bathing and swimming. Reference standard: IEC60529.
Water resistant Water resistant 20/30/50 meters Suitable for swimming	OK	OK	-	-	Minimum for bathing and swimming. Reference standard: ISO22810.
Water resistant 100 meters	OK	OK	OK	-	For frequent use in water but not SCUBA diving. Reference standard: ISO22810.

Limited international Polar guarantee

- This guarantee does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract.
- This limited Polar international guarantee is issued by Polar Electro Inc. for consumers who have purchased this product in the USA or Canada. This limited Polar international guarantee is issued by Polar Electro Oy for consumers who have purchased this product in other countries.
- Polar Electro Oy/Polar Electro Inc. guarantees the original consumer/purchaser of this device that the product will be free from defects in material or workmanship for two (2) years from the date of purchase.
- The receipt of the original purchase is your proof of purchase!
- The guarantee does not cover the battery, normal wear and tear, damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, armband, elastic strap and Polar apparel.
- The guarantee does not cover any damage/s, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.
- Items purchased second hand are not covered by the two (2) year warranty, unless otherwise stipulated by local law.

- During the guarantee period, the product will be either repaired or replaced at any of the authorized Polar Service Centers regardless of the country of purchase.

Guarantee with respect to any product will be limited to countries where the product has been initially marketed.



This product is compliant with Directives 2014/53/EU and 2011/65/EU. The relevant Declaration of Conformity and other regulatory information for each product are available at www.polar.com/en/regulatory_information.

The radio equipment operates 2.402 - 2.480 GHz ISM frequency band(s) and 2.0 mW maximum power.



This crossed out wheeled bin marking shows that Polar products are electronic devices and are in the scope of Directive 2012/19/EU of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE) and batteries and accumulators used in products are in the scope of Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators. These products and batteries/accumulators inside Polar products should thus be disposed of separately in EU countries. Polar encourages you to minimize possible effects of waste on the environment and human health also outside the European Union by following local waste disposal regulations and, where possible, utilize separate collection of electronic devices for products, and battery and accumulator collection for batteries and accumulators.

Manufactured by Polar Electro Oy, Professorintie 5, FI-90440 KEMPELE, Tel +358 8 5202 100, Fax +358 8 5202 300, www.polar.com.

Polar Electro Oy is an ISO 9001:2008 certified company.

© 2017 Polar Electro Oy, FI-90440 KEMPELE, Finland. All rights reserved. No part of this manual may be used or reproduced in any form or by any means without prior written permission of Polar Electro Oy.

The names and logos in this user manual or in the package of this product are trademarks of Polar Electro Oy. The names and logos marked with a ® symbol in this user manual or in the package of this product are registered trademarks of Polar Electro Oy. Windows is a registered trademark of Microsoft Corporation and Mac OS is a registered trademark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polar Electro Oy is under license.

Disclaimer

- The material in this manual is for informational purposes only. The products it describes are subject to change without prior notice, due to the manufacturer's continuous development program.
- Polar Electro Inc./Polar Electro Oy makes no representations or warranties with respect to this manual or with respect to the products described herein.
- Polar Electro Inc./Polar Electro Oy shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or

special, arising out of, or related to the use of this material or the products described herein.

1.0 EN 07/2017