

Single Beer Kegeerator/Beverage Cooler

NS-BK1TBK8



Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	2
Important Safety Instructions	3
WARNING	3
Grounding requirement	5
Features	6
Package contents	6
Kegerator parts	8
Locating your kegerator	9
Before using your kegerator	9
Finding a suitable location	9
Providing a proper power supply	9
Assembling your kegerator	10
Installing the casters (optional)	10
Attaching the guard rail	11
Installing the draft arm assembly	11
Installing the CO2 regulator and tank	12
Attaching the CO2 tank	13
Installing and setting up a beer keg	14
Using your kegerator	16
Setting the temperature	16
Dispensing Beer	17
Maintaining your kegerator	19
Automatic defrosting	19
Replacing a keg	20
Replacing the CO2 tank	20
Storing your kegerator	20
Moving your kegerator	21
Converting your beer dispenser to a beverage refrigerator	21
Troubleshooting	22
Beer quality	22
Cooler	23
Specifications	24
ONE-YEAR LIMITED WARRANTY - INSIGNIA	25

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-BK1TBK8 represents the state of the art in kegerator design and is designed for reliable and trouble-free performance.

Important Safety Instructions



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your kegerator/beverage cooler.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your kegerator/beverage cooler.

WARNING

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this appliance near water.
- 6 Clean only with damp cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- 11 Do not attempt to modify or extend the power cord of this appliance.
- 12 Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- 13 Make sure that the available AC power matches the voltage requirements of this appliance.

- 14 Do not handle the plug with wet hands. This could result in an electric shock.
- 15 Unplug the power cord by holding the plug, never by pulling the cord.
- 16 Do not turn the appliance on or off by plugging or unplugging the power cord.
- 17 Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 18 To reduce the risk of fire or electric shock, do not expose this appliance to rain, moisture, dripping, or splashing, and no objects filled with liquids should be placed on top of it.
- 19 Do not use extension cords or ungrounded (two prong) adapters.
- 20 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 21 Children should be supervised to ensure that they do not play with the appliance.
- 22 If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- 23 Take off the doors. Leave the shelves in place so that children may not easily climb inside.



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.

- 1 **WARNING**—Keep ventilation openings in the kegerator/beverage cooler clear of obstruction.
- 2 **WARNING**—Do not damage the refrigerant tubing when handling, moving, or using the kegerator/beverage cooler.
- 3 **WARNING**—Do not use electrical appliances inside the storage compartment of the kegerator/beverage cooler, unless they are of the type recommended by the manufacturer.



- 4 WARNING–DANGER**—Never allow children to play with, operate, or crawl inside the kegeator/beverage cooler.
- Risk of child entrapment. Before you throw away your old kegeator/beverage cooler:
- 1) Take off the doors
 - 2) Leave the shelves in place so that children may not easily climb inside
- 5** Unplug the kegeator/beverage cooler before performing user maintenance on it.
- 6** This kegeator/beverage cooler can be used by children age 8 years and older and persons with reduced physical or mental capabilities or lack of experience and knowledge if they are given supervision or instruction concerning the use of the kegeator/beverage cooler in a safe way and understand the hazards involved. Children should not play with the kegeator/beverage cooler. Cleaning and maintenance should not be performed by children without supervision.
- 7** If a component part is damaged, it must be replaced by the manufacturer, its service agent, or similar qualified persons in order to avoid a hazard.
- 8** Follow local regulations regarding disposal of the kegeator/beverage cooler due to flammable refrigerant and gas. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- 9** This kegeator/beverage cooler is intended to be used in household and similar environments.
- 10** Do not store or use gasoline or any flammable liquids inside or in the vicinity of this kegeator/beverage cooler.
- 11** Do not use an extension cord with this kegeator/beverage cooler. If the power cord is too short, have a qualified electrician install an outlet near the kegeator/beverage cooler. Use of an extension cord can negatively affect the kegeator/beverage cooler's performance.

Grounding requirement

This kegeator/beverage cooler must be grounded. This kegeator/beverage cooler is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the kegeator/beverage cooler is properly grounded.

Features


- 5.7 cu. ft. holds a variety of keg sizes
- Converts between refrigerator and beverage cooler
- Black door looks stylish with any decor
- Electronic control for ideal temperature
- Two wire shelves for additional storage
- Locking wheels provide mobility and stability

Package contents

Cabinet parts



Wire shelf

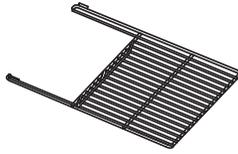

Wire half-shelf




Drip tray (2 pieces)



Locking casters (2)



Casters (2)

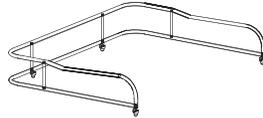
Metal washers (2)
for locking caster
wheels

Guard rail

CO₂ parts

5 lb. CO₂ tank (shipped empty)

Note: See your local beer keg provider, air/gas or welding supplier, or sporting goods store to fill your CO₂ tank.

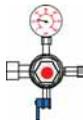CO₂ regulatorCO₂ gas line

Hose clamp

CO₂ tank retainer
(comes installed)CO₂ back tank retainer (for
optional tank mount on
the back.)Bolt and nut for
tank retainer

Keg parts



Draft arm assembly



Beer tap handle



Beer gasket



Sankey keg coupler
(D-type)



Metal wrench
(for cleaning)




Extra valve washers


You'll need

- Adjustable wrench
- Phillips screwdriver
- Pair of pliers/clamp crimper
- Full keg of beer (See ["Installing and setting up a beer keg"](#) on page 14 for compatibility information.)
- Fill the included CO₂ tank with CO₂ (See your local beer keg provider, air/gas or welding supplier, or sporting goods store to fill your CO₂ tank.)

Inside dimensions

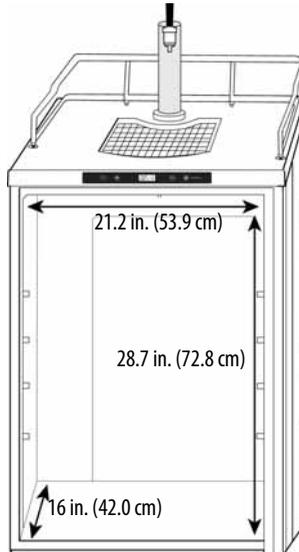

Kegeator parts

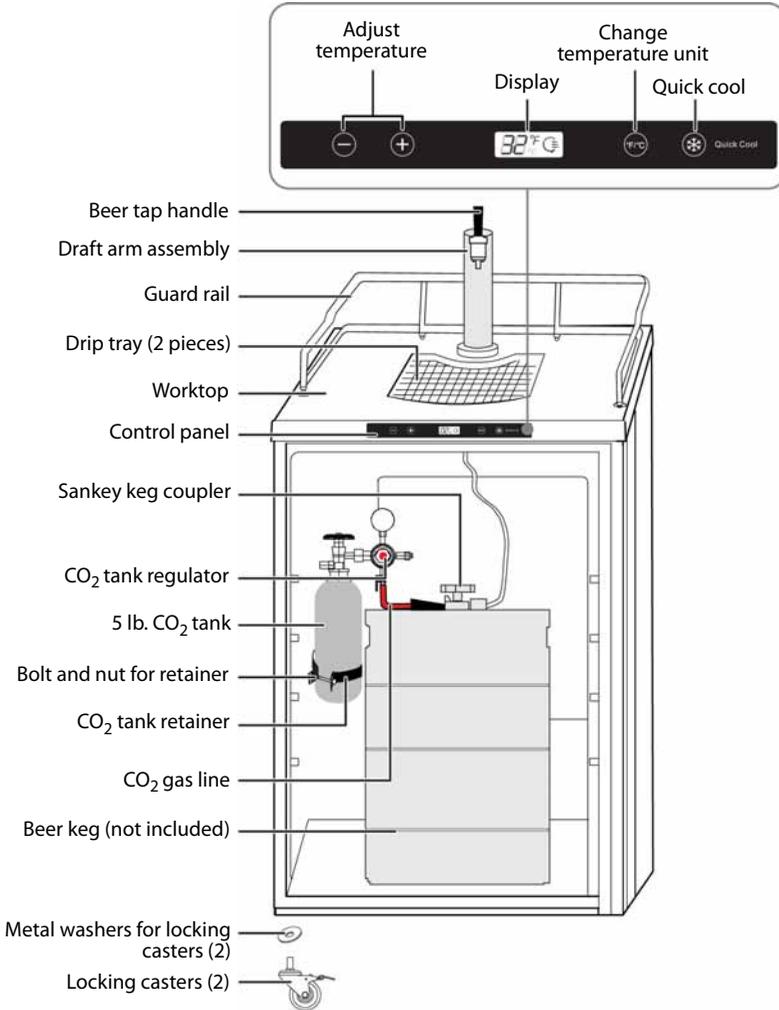

Locating your kegerator

Before using your kegerator

- Let the kegerator stand upright for approximately eight hours before connecting it to power. This reduces the possibility of a malfunction in the cooling system from improper handling during transportation.
- Check to make sure that all accessories listed/shown are included with your kegerator. If any accessories or parts are missing or not in good condition, contact customer service for assistance.
- Clean the interior surface with lukewarm water using a soft cloth.

Finding a suitable location


- This kegerator is designed to be free standing only, and should not be recessed or built-in.
- Place your kegerator on a floor that is strong enough to support the kegerator when it is fully loaded.
- Allow three inches of space between the back and sides of the kegerator and any surrounding walls. This allows for proper air ventilation. If you install the casters, lock them. If not, adjust the leveling feet to keep the kegerator level.
- Locate the kegerator away from direct sunlight and sources of heat (stove, heater, radiator, and so on). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Ambient temperature below 50°F (10°C) or above 85°F (29.4°C) will hinder the performance of this kegerator. This kegerator is not designed for use in a garage or any other outside installation.
- Avoid locating the kegerator in moist areas.

Providing a proper power supply


Check your local power source. This kegerator requires a 110V-120V, 60 Hz power supply.

Use a receptacle that accepts the grounding prong. The power cord is equipped with a 3-prong (grounding) plug that mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this kegerator.

Using a 3-prong plug and outlet

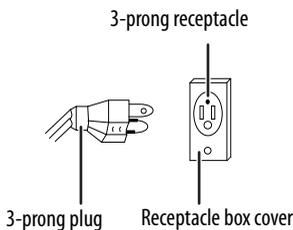

Using a grounding adapter

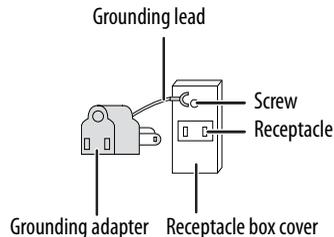


Notes

- The kegerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.
- We strongly recommend that you do not use an extension cord. However, if you must use an extension cord, it is absolutely essential that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.
- Never unplug your kegerator by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.

Assembling your kegerator

Installing the casters (optional)


- 1 Remove all contents from the kegerator, then tip it onto its side on a soft surface to protect it from scratches.
- 2 Unscrew and remove the black front feet. Keep them in a safe place in case you want to use the feet later.
- 3 Attach the two metal washers (included) to the locking casters to prevent scratching the cabinet, then install the two locking casters in the front positions on the bottom of the kegerator (closest to the door).
- 4 Install the other two casters in the rear positions on the bottom of the kegerator.

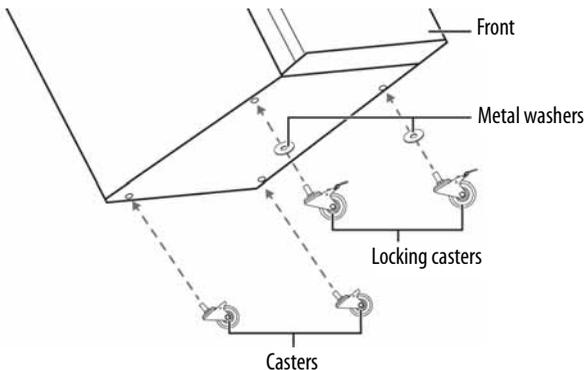

- 5 With all four casters tightened evenly, stand the unit in the upright position.
- 6 Step on the front of the locking casters to lock the kegerator into place or step on the back to unlock the kegerator.


Attaching the guard rail

- Insert the guard rail into the holes on the top of the kegerator.

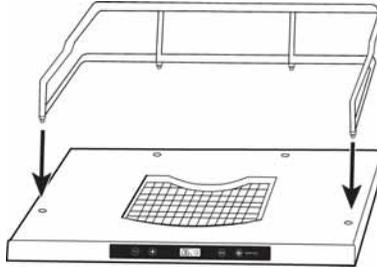

Installing the draft arm assembly

- 1 Remove the cabinet plug from the top of the kegerator.
- 2 Align the beer gasket with the holes on the top of the cabinet.
- 3 Pass both the wing nut and the beer tube (both are attached to the draft arm assembly) through the hole on the worktop until the draft arm assembly is resting on the top of the cabinet.
- 4 Rotate the draft arm 60 degrees until the tap is facing the front. It may take some force.
- 5 Attach the black plastic beer tap handle to the top of the faucet, tightening it by hand until it's secure. Hold the silver ring snug so it does not move.

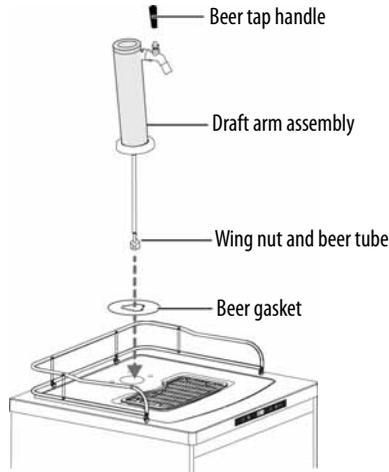

Note

If there is a small drip after you pour a beverage, you may have tightened the beer tap handle too much. If so, unscrew the silver snug ring one turn, then retighten the beer tap handle.

Installing the CO₂ regulator and tank


Before installing the CO₂ regulator and tank, it's very important that you review this list of safety tips.

WARNING

Before installing the CO₂ regulator and tank, it's very important that you review this list of safety tips:


- **ALWAYS** connect the CO₂ tank to a regulator. Failure to do so could result in explosion with possible death or injury when the tank valve is opened.
- **NEVER** connect the CO₂ tank directly to the beer keg.
- **ALWAYS** follow correct procedures when tanks are changed.
- **ALWAYS** secure the tank in an upright position.
- **NEVER** drop or throw a CO₂ tank.
- **ALWAYS** keep a CO₂ tank away from heat. Store extra tanks in a cool place (preferably 70°F). Securely fasten with a chain in an upright position when storing.
- **ALWAYS** ventilate and leave the area immediately if CO₂ leakage has occurred.
- **ALWAYS** check the D.O.T. test date on the tank neck before installation. If the tank is over five (5) years old, do not use it. Return the tank to the gas supplier.
- **NEVER** connect a product container unless there are two (2) safeties in the pressure system:
 - The CO₂ regulator is unpressurized.
 - The product coupler and gas line are unpressurized.

- 1 Feed the hose clamp over one end of the CO₂ gas line.
- 2 Attach that end to the gas line connector on the CO₂ regulator.

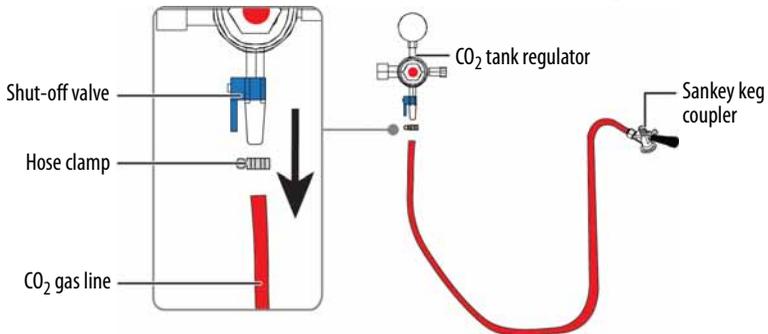

- 3 Tighten the clamp to prevent leaks. Leave about ½ inch between the top of the clamp and the end of the hose. You may need to squeeze with a pliers or crimper.

- 4 Attach the CO₂ regulator to the CO₂ tank by screwing the regulator nut onto the tank valve and tightening with an adjustable wrench.

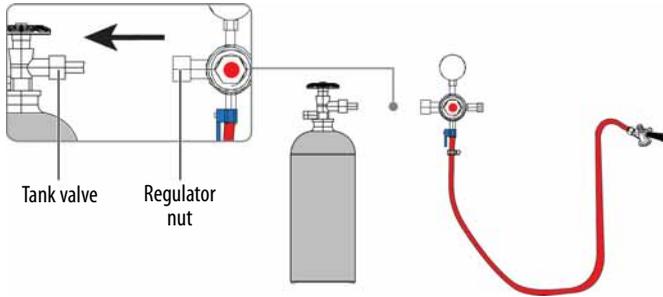

Attaching the CO₂ tank


You can install the CO₂ tank inside the kegerator for a cleaner look (Option A) or on the back if you need more space inside your kegerator (Option B).

Option A : Inside the kegerator

Slide the tank through the retainer and secure it with the provided bolt and nut. Position the tank so you can read the gauge and have easy access to the shut-off valve.

Option B: On the back of your kegerator

- 1 Align the four holes on the CO₂ tank retainer with the four screws on the back of the kegerator.
- 2 Place the CO₂ tank in the retainer.
- 3 Feed the gas line hose through the hole in the back of the unit and connect to the regulator as you did in "[Installing the CO₂ regulator and tank](#)" on page 12.

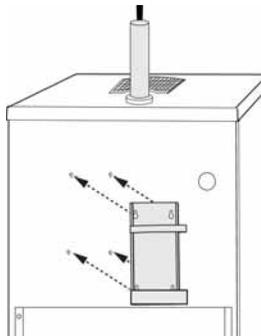


Installing and setting up a beer keg

This kegerator accepts almost all brand name kegs. Here's what will fit in your kegerator:


BARREL SIZE	1/2	1/4 (short, pony)	1/4 (slim)	1/6	1/8
GALLONS	15.5	7.8	7.8	5.2	4.0
12 oz GLASSES	164	82	82	55	41

Installing the keg coupler


- 1 Insert the sankey keg coupler into the neck of the beer keg and turn it clockwise to lock it into position. Make sure that the washer is in the connector on the top of the sankey keg coupler.

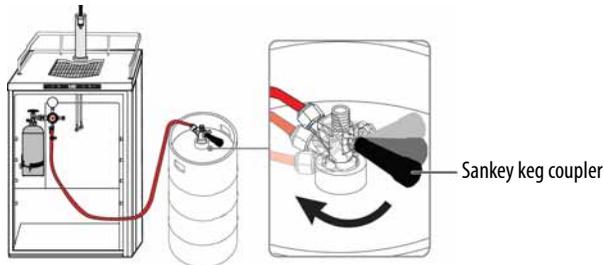

- 2 Insert the beer tube into the top of the sankey keg coupler, then tighten the wing nut.

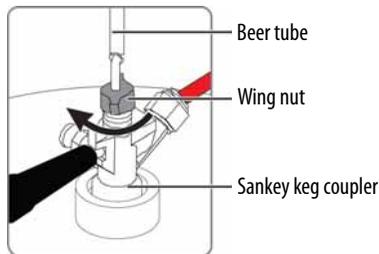

- 3 Pull the black handle on the sankey keg coupler and press it downward until it locks into position. The keg is now tapped.

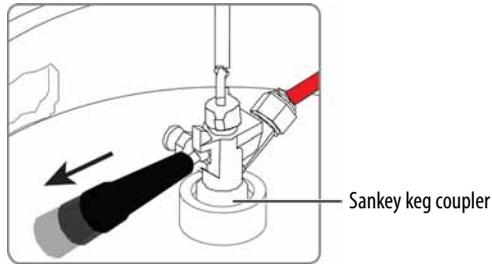


Note

If beer comes up through the top of the wing nut, remove the wing nut, reposition the washer, then reattach the wingnut.


- 4 Insert the keg into the kegerator.

Adjusting the CO₂ regulator

- 1 Make sure that the shut-off valve is closed (sideways if closed, down if open), then slowly turn the main valve on the CO₂ tank counter-clockwise until it is fully open.

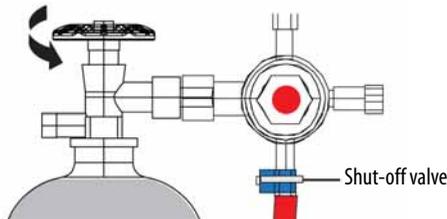


- 2 Open the shut-off valve to allow gas to flow into the keg.

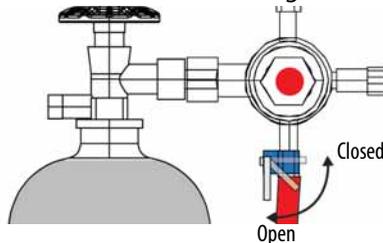

- 3 Release the adjustment lock nut, behind the regulator screw, by turning it clockwise about 5-7 turns.

- Turn the regulator screw clockwise to increase pressure. The needle on the gauge starts to climb. Set the gauge to 10-12 PSI.

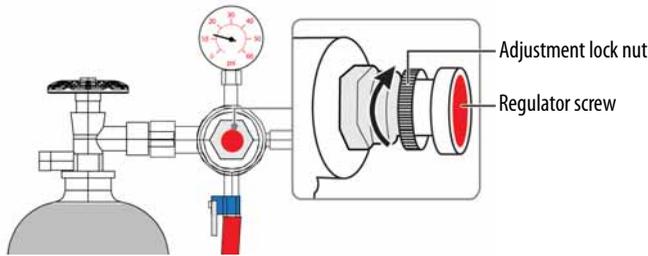

- When the tank is at the correct pressure, tighten the adjustment lock nut by turning it counter-clockwise.
- Allow several minutes for the keg to pressurize. The gauge may show a drop in pressure while this happens. Adjust as needed.

Note

Listen for a hissing sound at all connections to determine if there are any leaks.

- Plug the kegerator into a 120V, 60Hz, 15A grounded outlet.

Using your kegerator

Setting the temperature

- Press the °F/°C button to switch between Fahrenheit or Celsius.



- Press - to adjust the temperature to 32°F (0°C), then let the kegerator cool for 48 hours.



- 3 After the kegerator is fully cooled, press - or + to adjust to the temperature you want. The kegerator may take a few hours to stabilize after adjusting the temperature.

Notes

- To change the thermostat setting, adjust it by one increment at a time. Allow several hours for the temperature to stabilize between adjustments.
- The kegerator's temperature range 32°-50°F (0°-10°C). See "Using different glasses for different beers" on page 18 for information about the best temperature for your beer type.
- If the kegerator is unplugged or loses power, wait three to five minutes before restarting it. If you attempt to restart before this time delay, the kegerator will not start.
- To quickly cool your kegerator, press **Quick Cool**. Quick cool mode stays on for 24 hours or until you press - or + to adjust the temperature.

Dispensing Beer

Proper foam should leave a tight, creamy head, and the head on the average glass should be 3/4" to 1" high.

- 1 Hold the glass at a 45° angle.
- 2 Grasp the handle at the bottom and open the tap quickly.
- 3 Once your glass is half-full, gradually bring the glass upright, and aim for the middle to start forming the head. Slowly lower the glass as you approach your finish to improve the head even more.
- 4 When your glass is full, close the tap quickly.



Preventing bad beer

Problem	Possible Causes	Solution
	Improper regulator setting	Make sure that the (CO ₂) pressure is between 10 and 12 PSI.
	Pressure build up	Activate the pressure relief valve located on the sankey keg coupler for three seconds.
	Warm beer	Make sure the temperature is between 34°F and 38°F.
	Improper pour	Open the tap quickly and completely.

Problem	Possible Causes	Solution
Flat beer. No head. 	Greasy glasses	Wash glasses thoroughly, then air dry. Rinse in fresh cold water just before serving.
	Improper pour	Open the tap quickly and completely.
	Not enough pressure	Increase the pressure or refill the CO ₂ tank if empty.
Abnormal beer taste and/or smell. 	System requires cleaning	See " Maintaining your kegerator " on page 19.
	Old beer.	Buy a new keg.

Using different glasses for different beers

You wouldn't believe how much a proper glass and temperature will change the taste of your beer.

Lagers
(35-40 °F)



Often labeled simply as "beer." Examples include Budweiser, Stella Artois, Beck's, Corona, Heineken, and Foster's.

Stouts
(50°F)



Dark beers made using roasted malt or barley. Examples include porters and Guinness.

Ales
(45-50°F)



Includes brown ales (such as Newcastle), golden ales, pale ales (IPA), mild ale, and barley wines.

Craft Beers
(38-41°F)



Includes craft, micro, and nano brewery beers, often only available regionally or locally.

Maintaining your kegerator

Your kegerator is designed for year-round use with only minimal cleaning and maintenance.

When you first receive it, wipe the case with a mild detergent and warm water, then wipe dry with a dry cloth. Do this periodically to keep your kegerator looking new.

Caution

To prevent damage to the finish, do not use:

- Gasoline, benzene, thinner, or other similar solvents.
- Abrasive cleaners.

Cleaning the interior of your kegerator:

- 1 Turn off the kegerator and unplug it from the wall outlet.
- 2 Remove the keg and all beverages.
- 3 Wash the inside with a damp warm cloth soaked in a solution of one quart of lukewarm water to two tablespoons of baking soda solution.
- 4 Wash the shelves and metal plate with a mild detergent solution.
- 5 Wring excess water out of the sponge or cloth when cleaning around the controls or any electrical parts.
- 6 Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- 7 Be sure to keep the door gasket (seal) clean to keep the unit running efficiently.
- 8 Dry the interior and exterior with a soft cloth.

Cleaning the beer components

To prevent a build-up of yeast and mold in the beer lines, and to prevent a bad taste, clean your beer components when you replace a keg.

- 1 Remove the keg coupler and thoroughly rinse it in warm water.
- 2 Use the included wrench to remove the faucet on the draft arm assembly. Insert the tip of the wrench into one of the holes on the faucet, rotate it, then thoroughly rinse the faucet in warm water.
- 3 Clean the beer lines using either a hand pump cleaning kit or a cleaning can (both sold separately).

Automatic defrosting

There is no need to defrost your kegerator. The defrost water collects at the back of your cooler and passes through a drain outlet into a tray located above the compressor where it evaporates.

Replacing a keg

- 1 Turn the kegerator off and disconnect power from the wall outlet.
- 2 Close the main valve on the CO₂ tank.
- 3 Close the shut-off valve on the CO₂ regulator.
- 4 Pull the black handle on the keg coupler and press it upward to close the connection between the beer keg and the keg coupler.
- 5 Pull on the tap handle to help drain beer from the lines.
- 6 Disconnect the beer line and CO₂ gas line from the keg coupler.
- 7 Put the beer line in a bucket to drain the remaining beer from the line.
- 8 Remove the beer keg.
- 9 Remove the keg coupler from the keg.
- 10 Follow the steps in "[Installing the keg coupler](#)" to insert a new keg.

Replacing the CO₂ tank

- 1 Turn the kegerator off and disconnect power from the wall outlet.
- 2 Close the main valve on the CO₂ tank.
- 3 Close the shut-off valve on the CO₂ regulator.
- 4 Disconnect CO₂ gas line from the keg coupler.
- 5 Remove the CO₂ tank.
- 6 Follow the steps in "[Installing the CO₂ regulator and tank](#)" to insert a new tank.

Storing your kegerator

If you will be away from your kegerator for more than three weeks:

- 1 Turn off the kegerator and unplug it from the wall outlet.
- 2 Remove the keg and all beverages.
- 3 Clean and dry the interior of the kegerator.
- 4 Leave the door open slightly to avoid possible formation of condensation, mold, or odor.

Caution

Use extreme caution with children. The unit should not be accessible to child's play.

Moving your kegeator

- 1 Turn off the kegeator and unplug it from the wall outlet.
- 2 Remove the keg and beverages.
- 3 Securely tape down all loose items inside your kegeator.
- 4 Tape the door shut.
Be sure the kegeator stays in the upright position during transportation and protect the exterior with a blanket or similar padding.

Converting your beer dispenser to a beverage refrigerator

- 1 Follow the steps in "[Replacing a keg](#)" on page 20 and "[Replacing the CO2 tank](#)" on page 20.
- 2 Remove the draft arm assembly and pull the beer line thru the top of the cabinet.
- 3 Replace the top cabinet plug.
- 4 Remove the guard rail and cover the guard rail installation holes with the plugs provided.
- 5 Install the two wire shelves.
- 6 Adjust the temperature as desired.

Troubleshooting

Beer quality

Problem	Possible cause	Possible solution
Excess formation of foam "head." Beer is all foam, or too much foam and not enough liquid beer.	Recent keg agitation.	If the keg has recently been moved, let it stand a minimum of two hours before tapping.
	Improper regulator setting.	Verify that the (CO ₂) pressure is reading between 10 and 12 PSI.
	The internal temperature of the kegerator is too warm.	Make sure that the kegerator is cooling between the high 30s to mid 40s. If the beer keg has been exposed to a warm environment for an extended period, give it sufficient time to cool before attempting to draw beer.
	Pressure build up.	Activate the pressure relief valve located on the keg coupler for three seconds.
Flat beer - no formation of foam. The foamy head disappears quickly and the beer lacks its usual zestful brewery fresh flavor.	Improper draw technique.	See " Dispensing Beer " on page 17.
	Improper regulator setting.	Make sure that the (CO ₂) pressure is reading between 10 and 12 PSI.
	Glassware is not clean enough.	Residue on glassware in the form of oils quickly dissolves the formation of foam. Make sure that the glassware is clean.
	Dispensing hose too long.	All recommended temperatures and gauge settings are calculated for a five foot hose. Use a shorter hose.
No beer flow from the beer faucet.	Low/Empty CO ₂ tank.	Make sure that the CO ₂ tank has pressure.
	Closed CO ₂ valve and/or shutoff valve.	Make sure that both the CO ₂ tank and regulator shutoff valve are open.
	Empty beer keg.	Replace beer keg.
	Line or dispenser obstructions.	Verify that there are no kinks or obstructions in either the air line or the dispenser line and that neither are frozen.
	Improper connections(s).	Make sure that all connections are secure and all seals are in place and in good condition.
Sputtering draw.	System requires cleaning.	See " Maintaining your kegerator " on page 19.
	Keg tap installed incorrectly.	Check seal between the keg the faucet.
	Obstructions in the line or dispenser.	Verify that there are no obstructions in either the air line or dispenser line and that neither are frozen.
	Improper draw technique.	See " Dispensing Beer " on page 17.
Faucet dripping.	Handle not fully returned to close position.	After every pour, make sure that the handle is returned to the off position.
	Faucet requires cleaning.	See " Maintaining your kegerator " on page 19.
Rapid CO ₂ tank discharge.	Improper connection causing an air line leak.	Make sure that all lines are properly connected and/or check air line for possible leaks.
Difficulty manipulating faucet handle.	Faucet requires cleaning.	See " Maintaining your kegerator " on page 19.
	Damaged faucet handle.	Remove the faucet handle and connector nuts and inspect for possible damage.

Problem	Possible cause	Possible solution
Abnormal beer taste and/or smell.	System requires cleaning.	See “ Maintaining your kegerator ” on page 19.
	System contamination.	Check hoses for possible air leaks.
	The beer has exceeded its shelf life.	Replace the beer keg with a fresh one.

Cooler

Caution

Do not try to repair your kegerator yourself. Doing so invalidates the warranty.

You can solve many common beer dispenser problems easily, saving yourself the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the service center.

Problem	Possible cause	Possible solution
The kegerator does not operate.	The kegerator is unplugged.	Make sure that the kegerator is plugged in and that the plug is pushed completely into the outlet.
	The fuse on the circuit is blown or the circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the circuit breaker.
	Power failure.	If a power failure occurs, the kegerator turns off. Wait until the power is restored, then turn it on again.
The cooler door does not close completely.	The door was not properly installed.	Make sure that the door was properly installed.
	The shelf is out of position.	Adjust the shelf properly.
	The door gaskets are dirty.	Clean the door gaskets.
	The cooler is not level.	Level the cooler with the leveling feet.
The cooler is not cold enough.	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	You have just added a large amount of warm beverage to the cooler.	Allow time for the new beverage to cool, then check again.
	The temperature control is set too warm.	Set the control to a colder setting.

Problem	Possible cause	Possible solution
The cooler turns on and off frequently.	The room temperature is hotter than normal.	Make sure that the door was properly installed.
	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	The door gaskets do not seal properly.	Clean the door gaskets.
	The temperature control is set too warm.	Set the control to a colder setting.
The kegerator makes unusual noises or vibrates.	The kegerator may not be level on the floor.	Level the kegerator with the leveling feet.
	The body of the kegerator is touching a wall.	Move the kegerator out from the wall.
	<ul style="list-style-type: none"> A rattling noise may be heard. This is caused by the flow of refrigerent in the kegerator. As each cooling cycle ends, you may hear gurgling sounds. Contraction and expansion of the inside walls may cause popping or crackling noises. 	This is normal.
Moisture is building up in the interior of the cooler.	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	The cooler is in a location that is very humid.	Move the cooler to a dryer location.
	The bottles in the cooler are not packaged properly.	Rearrange the bottles in the cooler to make sure that they are sealed.

Specifications

Dimensions (HxWxD)	33.7 x 23.6 x 23.6 in. (85.5 x 60.0 x 60.0 cm)
Weight	101.4 lbs. (46 kg)
Power requirements	115V~60Hz
Current	0.86 A
Power consumption (annual)	310 kwh

ONE-YEAR LIMITED WARRANTY - INSIGNIA

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca, and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of refrigerator or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence

- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2017 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2017 Best Buy. All rights reserved.

Made in China.

V1 ENG
16-1097