


INSIGNIA™

USER GUIDE

115-Can Beverage Cooler

NS-BC115SS26L

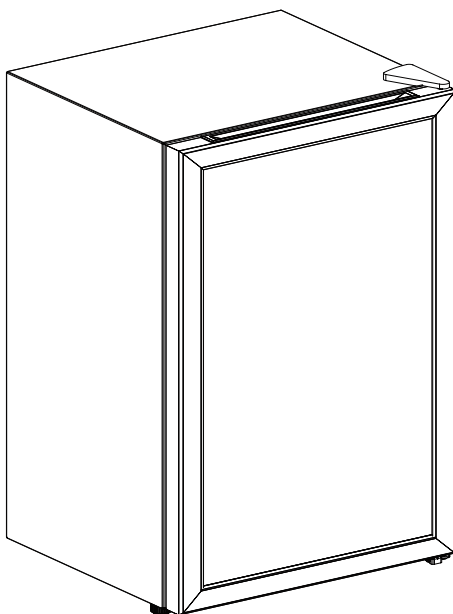

Before using your new product, please read these instructions to prevent any damage.

INSIGNIA™

Contents

IMPORTANT SAFETY INSTRUCTIONS	3
Features	5
Package contents	5
Components	6
Control and display panel	7
Setting up your beverage cooler	7
Before using your cooler	7
Finding a suitable location	7
Leveling your cooler	8
Reversing the door	8
Grounding requirement	11
Connecting to power	11
Using your beverage cooler	11
Turning on your cooler	11
Using the adjustable shelves	12
Arranging your beverages	12
Filling your beverage cooler	13
Maintaining your beverage cooler	13
Cleaning the interior of your cooler	13
Defrosting your cooler	14
Storing your cooler	14
Moving your beverage cooler	14
Tips on saving energy	14
Troubleshooting	15
Specifications	18
ONE-YEAR LIMITED WARRANTY	19

IMPORTANT SAFETY INSTRUCTIONS



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your cooler.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your cooler.

WARNING

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this appliance near water.
- 6 Clean only with a damp cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched, particularly at plugs, outlets, and the point where they exit from the appliance.
- 11 Do not use extension cords or ungrounded (two-prong) adapters.
- 12 Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- 13 Make sure that the available AC power matches the voltage requirements of this appliance.
- 14 Do not handle the plug with wet hands. This could result in an electric shock.
- 15 Unplug the power cord by holding the plug, never by pulling the cord.

- 16 Do not turn the appliance on or off by plugging or unplugging the power cord.
- 17 Turn off the appliance before unplugging it.
- 18 Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as when the power-supply cord or plug is damaged, when liquid has been spilled or objects have fallen into the appliance, or when the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 19 To reduce the risk of fire or electric shock, do not expose this appliance to rain, moisture, dripping, or splashing, and do not place objects filled with liquids on top of it.



WARNING

•This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices, and other working environments; farm houses and by clients in hotels, motels, and other residential type environments; bed and breakfast type environments; catering, and similar non-retail applications.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- **WARNING:** Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartment of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** Please abandon the cooler according to local regulators for it uses flammable blowing gas and refrigerant.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not use extension cords or ungrounded two-prong adapters.



WARNING: risk of fire/
flammable materials

- **WARNING:** Risk of child entrapment. Before you throw away your old cooler:
 - Take off the door.
 - Leave the shelves in place so that children may not easily climb inside.
- The cooler must be disconnected from the source of electrical supply before attempting the installation of an accessory.
- Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.
- **WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- To prevent a child from being entrapped, keep out of reach of children and not in the vicinity of the cooler. (Suitable for products with locks)

Features


- 115-can, 3.3 cu. ft. (0.09 cu m) capacity holds your favorite drinks
- 34–50° F (1–10° C) temperature range keeps your drinks cold
- Three removable glass shelves give you additional storage options
- White interior lighting helps you find your drinks even in a dark room
- Reversible door and adjustable legs offer flexible placement options
- Timeless stainless steel finish matches any décor

*Interior cooler temperature may vary up to 4° F from displayed temperature.


Package contents

- 115-Can Beverage Cooler
- *User Guide*

Components

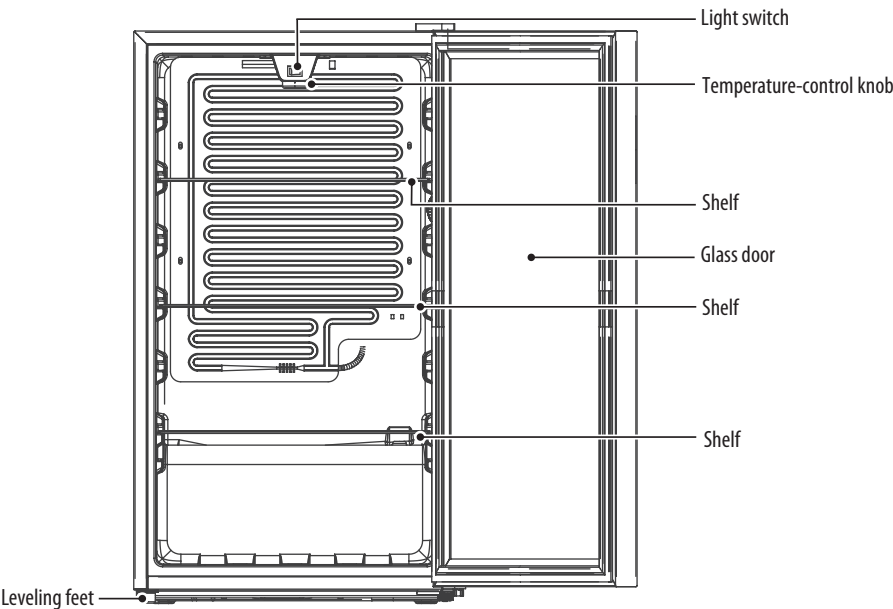

Control and display panel

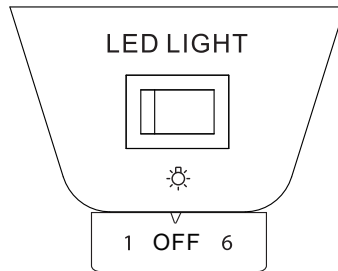

The temperature inside the beverage cooler is adjusted by the temperature control knob. "1, 2, 3, 4, 5, 6, OFF" on the knob does not represent a specific temperature value. The smaller the number, the higher the temperature inside the beverage cooler; the higher the number, the lower the temperature inside the beverage cooler. "OFF" indicates that the compressor has stopped working. The lamp can be adjusted by a light switch.

(The picture above is only for reference, The actual configuration will depend on the physical product or statement by the distributor.)

Setting up your beverage cooler


Before using your cooler

- Remove the exterior and interior packaging.
- Let your cooler stand upright for approximately half an hour before connecting it to power. This reduces the possibility of a malfunction in the cooling system from incorrect handling during transportation.
- Clean the interior surface with a damp, warm cloth.

Finding a suitable location

- Your cooler is designed to be free standing only, and it should not be recessed or built into a countertop or wall.
- Place your cooler on a floor, countertop, or cabinet that is strong enough to support your cooler when it is fully loaded.
- Allow 4 in. (10 cm) of space on all sides of your cooler to allow for correct air ventilation.
- Place your cooler away from direct sunlight and sources of heat (such as a stove, heater, or radiator). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Ambient temperature below 50° F (10° C) or above 85° F (29.4° C) hinders the performance of your cooler. Your cooler is not designed for use in a garage or any other outside location.

- Avoid placing your cooler in moist areas.
- Your cooler is not designed to be installed in an RV or used with an inverter.
- Do not stack your cooler.
- For your cooler to operate normally, avoid placing it in areas with high magnetic fields or high humidity.

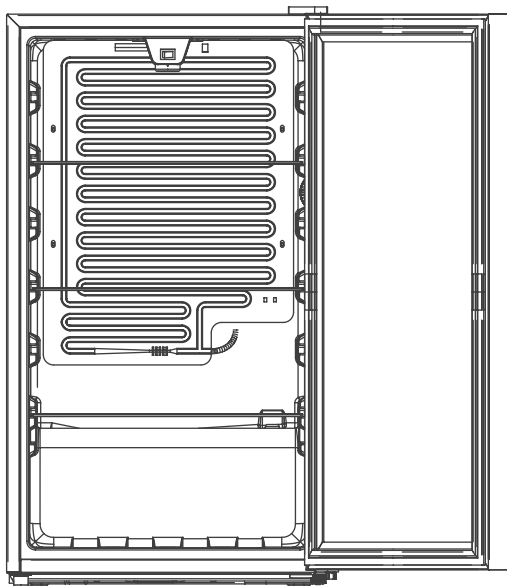

Leveling your cooler

- Your cooler must be level in order to function correctly. If your cooler is not leveled during installation, the door may not close or seal correctly, causing cooling, frost, or moisture problems.
- To level your cooler, you may turn either leveling foot clockwise to raise that side of your cooler or turn it counter-clockwise to lower that side.


Reversing the door

You need a Phillips screwdriver and an 8 mm socket wrench. Have someone available to assist you in the process. Make sure that you keep all of the parts you remove to reuse them later.


CAUTION: Do not lay your cooler completely flat as that could damage the coolant system.

- 1 Make sure that your cooler is unplugged and empty.
- 2 Adjust the leveling feet to their highest position.
- 3 Use a blade to remove the rivets.
- 4 Use a blade to remove the hinge cover, then use an 8 mm socket wrench to remove the hinge bolts.


- 5 Remove the upper hinge.

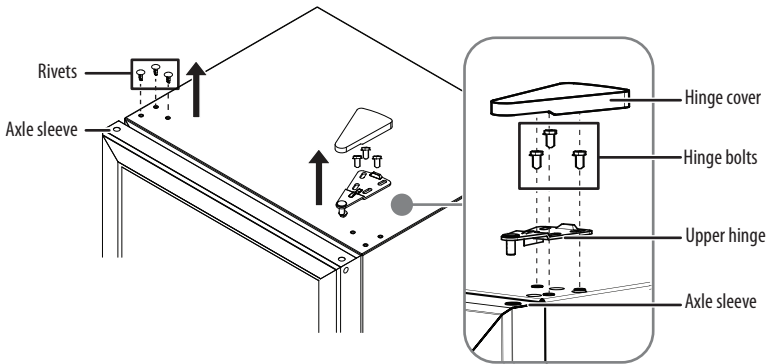


- 6 Remove the door from your cooler.

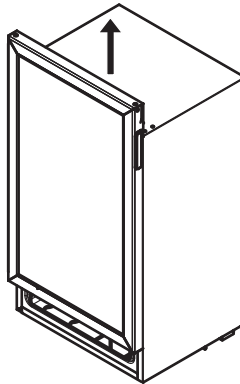


- 7 Use a Phillips screwdriver to remove the door stopper screws, remove the door stopper, and then reinstall on the other side.

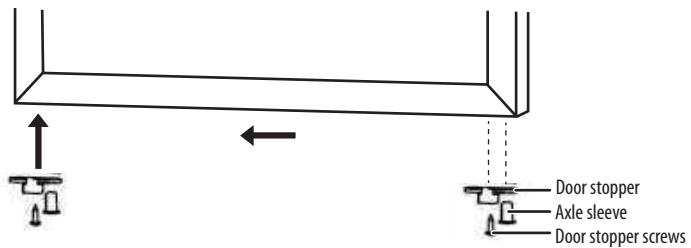


- 8 Use an 8 mm socket wrench to remove the hinge bolts, then remove the lower hinge and the leveling foot.

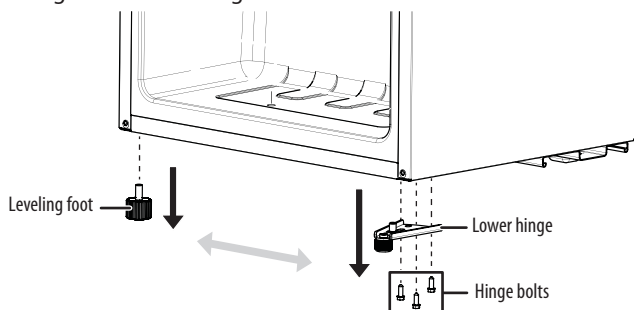

- 9 Attach the lower hinge and leveling feet to the opposite sides of your cooler.

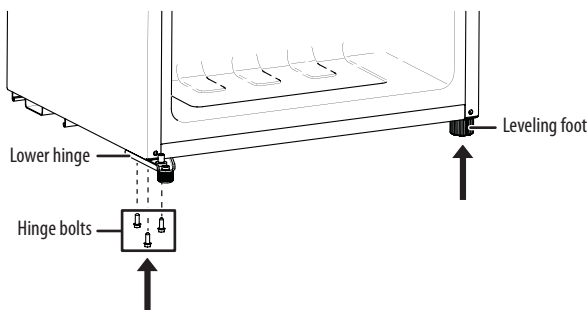

- 10 Replace the glass door, then reinstall the upper hinge. Make sure that you align the door and check the tightness of the door gasket.

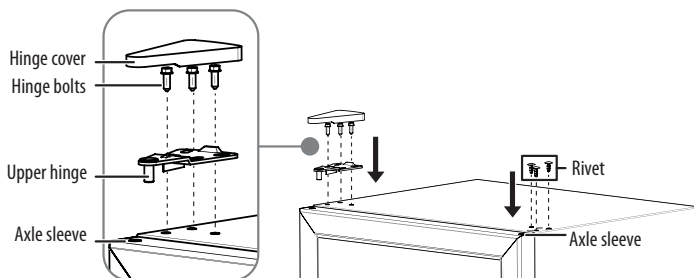

- 11 Adjust the leveling feet to level your cooler.

Grounding requirement

Your cooler must be grounded. Your cooler is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is correctly installed and grounded.

Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether your cooler is correctly grounded.

WARNINGS:

- Incorrect use of the grounding plug can result in a risk of electric shock.
- Do not, under any circumstances, cut or remove the third ground prong from the supplied power cord.

Connecting to power

- Plug your cooler into a dedicated, correctly installed, grounded wall outlet. Your cooler should be operated on a separate electrical circuit from other operating appliances.

CAUTION: Your cooler is not designed to be installed in an RV or used with an inverter.

- Plug in and run your cooler for three to four hours before making any temperature adjustments and before adding beverages. This allows your cooler to reach a stable temperature.

Notes:

- Check your local power source. Your cooler requires a 110V–120V, 60Hz power supply.
 - Use a receptacle that accepts the grounding prong. The power cord is equipped with a 3-prong (grounding) plug which plugs into a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from your cooler.
 - To prolong the service life of the compressor, wait for at least five minutes before restarting your cooler after a power failure.
- Do not use an extension cord with your cooler. If the power cord is too short, have a qualified electrician install an outlet near your cooler. Use of an extension cord can negatively affect your cooler's performance.

Using your beverage cooler

Turning on your cooler

After transportation, please let the cooler stay upright for more than 2 hours before plug in, otherwise it will lead to a decrease in cooling capacity or a damage to the beverage cooler.

Clean up the inner side and let the cooler cooling for more than 1.5 hours before put into use for first time.

In the process of compressor work, water droplets or frost will be formed on the back wall of the refrigerated compartment, which is a normal phenomenon.

After a period of time, the frost will melt into water and flow into the water tray to evaporate away.

Using the adjustable shelves

- All of the shelves have tabs to engage the cabinet on both sides.
- Any of the shelves can be removed to accommodate larger beverages.

To remove a shelf:

- 1 Remove all beverages from the shelves.
- 2 Lift the shelf upward and then gently pull out the shelf.

To replace a shelf:

- Place the sides of the shelf back onto the supporting guides in the cabinet and push back until the shelf tabs slide into place.


CAUTION: Make sure that the tabs are firmly engaged in the supporting guides before storing any beverages.

Arranging your beverages

In order to maintain good air circulation in your cooler, do not let the beverages touch the back of your cooler.

Filling your beverage cooler

The following illustrations are provided to show the best way to fill your cooler for maximum storage:

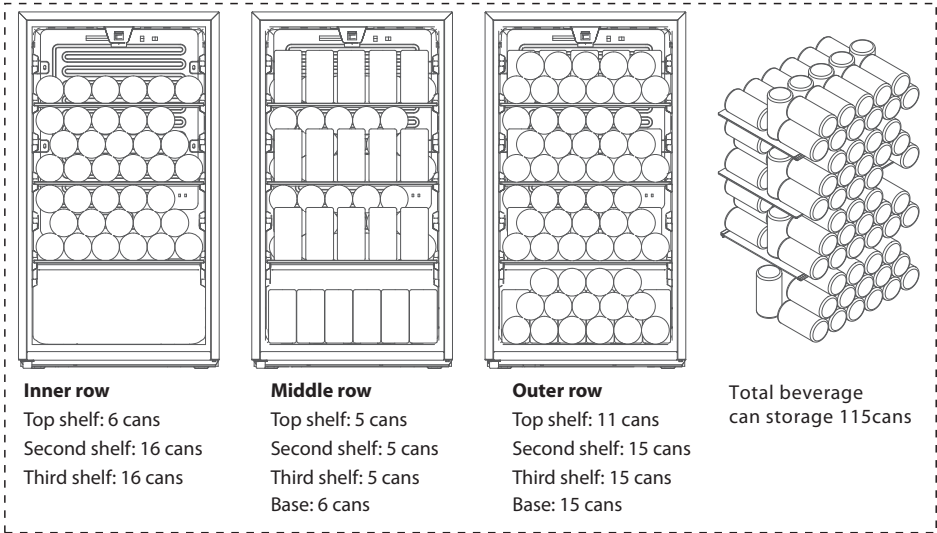

Maintaining your beverage cooler

Your cooler is designed for year-round use with only minimal cleaning and maintenance.

When you first receive it, wipe the cabinet with a mild detergent and warm water, then wipe dry with a dry cloth. Do this periodically to keep your cooler looking new.

CAUTION: To prevent damage to the finish, do not use:

- Gasoline, benzine, thinner, or other similar solvents
- Abrasive cleaners

Cleaning the interior of your cooler

- 1 Turn off your cooler and unplug it from the wall outlet.
- 2 Remove all beverages.
- 3 Wash the interior with a damp, warm cloth.

Note: We recommend that you soak your cloth in a baking soda solution before washing the interior. Mix one quart of warm water and two tablespoons of backing soda.

- 4 Clean the door gasket (seal) so the door closes correctly.
- 5 Dry the interior and exterior with a soft cloth.

Defrosting your cooler

The ice build-up on the inner back wall of your cooler is automatically defrosted in a compressor-off cycle.

When you set the knob to OFF setting, the compressor and circulation fan stops running while defrosting is in process.

Defrost water drains out of your cooler, passing through the drain outlet in the inner back wall into a drain pan located above the compressor. The water evaporates from the drain pan on its own.

Storing your cooler

- 1 Turn off your cooler and unplug it from the wall outlet.
- 2 Remove all beverages.
- 3 Clean your cooler.
- 4 Leave the door open slightly to avoid possible formation of condensation, mold, or odor.

WARNING: Make sure that children do not have access to your beverage cooler. If the door accidentally closes while a child is inside your cooler, the child may suffocate.

Moving your beverage cooler

Note: Make sure that your cooler stays upright during transportation.

- 1 Turn off your cooler and unplug it from the wall outlet.
- 2 Remove all beverages.
- 3 Securely tape down all loose items inside your cooler.
- 4 Tape the door shut.

Tips on saving energy

- Locate your cooler in the coolest area of the room, away from heat-producing appliances or heating ducts, and out of direct sunlight.
- Do not overload your cooler. It forces the compressor to run longer.
- Do not open the door too often, especially if the weather is hot. Close the door as soon as possible to prevent cool air from escaping.
- Make sure that the door seals completely to keep your cooler running efficiently.
- Make sure that your cooler is sufficiently ventilated, with adequate air circulation behind it.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
My beverage cooler does not operate.	Your beverage cooler is unplugged.	Make sure that your beverage cooler is plugged in and that the plug is pushed completely into the outlet.
	The fuse on the circuit is blown or the circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the circuit breaker.
	Power failure.	If a power failure occurs, your beverage cooler turns off. Wait until the power is restored, then turn it on again.
	Your power source has the incorrect voltage.	Make sure that your power source has the correct voltage (115V).
The cooler door does not close completely.	The shelf is out of position.	Adjust the shelf correctly.
	The door gaskets are dirty.	Clean the door gaskets.
	Your cooler is not level.	Level your cooler with the leveling feet.
	The door gasket does not seal.	<ul style="list-style-type: none"> • Make sure that the door gasket is clean. • Try heating then cooling the seal. You can use an electric hair dryer to heat the seal.
My cooler is not cold enough.	The door has been opened too often or was not closed correctly.	Make sure that the door is closed correctly.
	You have just added a large amount of warm beverages to your cooler.	Allow time for the new beverages to cool, then check again.
	The temperature control is set too warm.	Set the control to a colder setting.
	Your beverage cooler may not have enough clearance from the walls or ceiling.	See Finding a suitable location on page Z.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
My beverage cooler makes unusual noises or vibrates.	Your cooler is not level.	Level your beverage cooler with the leveling feet.
	The body of your beverage cooler is touching a wall.	Move your beverage cooler out from the wall.
	<ul style="list-style-type: none"> A rattling noise may be heard. This is caused by the flow of refrigerant in your beverage cooler. As each cooling cycle ends, you may hear gurgling sounds. Contraction and expansion of the inside walls may cause popping or crackling noises. 	This is normal.
	Items inside or on top of the beverage cooler may be rattling.	<ul style="list-style-type: none"> Remove any items from the top of your beverage cooler. Make sure that the shelves are installed correctly.
Moisture is building up in the interior of my cooler.	The door has been opened too often or was not closed correctly.	Make sure that the door is closed correctly.
	Your cooler is in a location that is very humid.	Move your cooler to a dryer location.
My cooler turns on and off frequently.	The room temperature is hotter than normal.	Cool the room or move your beverage cooler to a cooler place.
	The door has been opened too often or was not closed correctly.	Make sure that the door is closed correctly.
	The door gaskets do not seal correctly.	Clean the door gaskets.
	The temperature control is set too warm.	Set the control to a colder setting.
The humidity level in my cooler is too low.	The door has been opened too often or was not closed correctly.	Make sure that the door is closed correctly.
	Your cooler is in a location that is too hot.	Move your cooler to a cooler location.
	Relative humidity is too low.	Place a cup of water inside your cooler to raise the humidity.
Moisture is building up on the exterior of my cooler.	Cold air from inside your cooler may be leaking.	<ul style="list-style-type: none"> Make sure that the door is closed properly. Make sure that the door and gasket are properly aligned.
	Weather is hot and humid (this is normal).	Move your cooler to a dryer location.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The display shows an error code and an alarm sounds.	An error has occurred.	See Error codes on page 15.
Moisture is building up on the exterior of your cooler.	Cold air from inside your cooler may be leaking.	<ul style="list-style-type: none"> • Make sure that the door is closed properly. • Make sure that the door and gasket are properly aligned.
	The weather is hot and humid.	<ul style="list-style-type: none"> • This is normal. • Move your cooler to a dryer location.
The beverage cooler compartment has a bad odor.	The inside of your cooler needs to be cleaned.	Clean the inside of your beverage cooler. See Maintaining your beverage cooler on page 13.
The beverage cooler door is hard to open.	When you open the beverage cooler door, warm air rushes inside. When you close the door, the warm air rushes to the condenser which causes a vacuum. This causes the door to be hard to open for about 10 to 15 seconds after closing.	This is normal. If the door is hard to open at other times, try rubbing paraffin wax or petroleum jelly along the edges of the entire gasket. Paraffin wax is used for canning and is safe for use around food.
The compressor runs for a long time or turns on and off frequently.	The room temperature is high.	<ul style="list-style-type: none"> • Lower the room temperature. • Move your beverage cooler to a cooler location.
	You just added a large amount of beverages.	Wait for the beverages to cool, then check again.
	You open and close the door frequently.	Keep the door closed.
	The door gasket is dirty.	Clean the gasket. See Maintaining your beverage cooler on page 13.
	Your beverage cooler has been disconnected for a period of time.	Wait for your beverage cooler to cool (about two to three hours) before adding beverages.
The outside of my beverage cooler is hot.	The temperature is set too low.	Raise the beverage cooler's temperature.
	Heat dissipation from the condenser may make the outside feel hot.	<p>This is normal and happens if:</p> <ul style="list-style-type: none"> • The room temperature is high. • You have too many items in your beverage cooler. • You open and close the door excessively.

Specifications

Dimensions (H × W × D)	33.3 × 18.5 × 17.3 in. (84.5 × 47.0 × 44.0 cm)
Weight	60.8 lbs. (27.6 kg)
Capacity	3.3 cu. ft. (0.09 cu. m) 115 cans
Power requirements	115V~60Hz
Current	1A
Ambient operating temperature	50°–110° F (10°–43° C)
Cooler temperature range	34°–50° F (1°–10° C) Note: Interior cooler temperature may vary up to 4° F from displayed temperature.
Refrigerant type	R600a
Noise level (dB)	40 dB
Annual energy usage	289 kWh/year
Power cord length	5.4 ft. (1.65 m)

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product or the date of delivery (if later than the date of purchase). Your purchase date is printed on the receipt you received with the Product. In the event that Authorized Partner ceases to sell the covered Insignia branded product, this warranty shall terminate for that product and there shall be no repair or replacement of the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna

- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2025 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2025 Best Buy. All rights reserved.

V1 ENGLISH
25-0052