


INSIGNIA™

USER GUIDE

# Compact Refrigerator

**NS-CF25BK5/NS-CF25BK5-C/NS-CF25WH5**

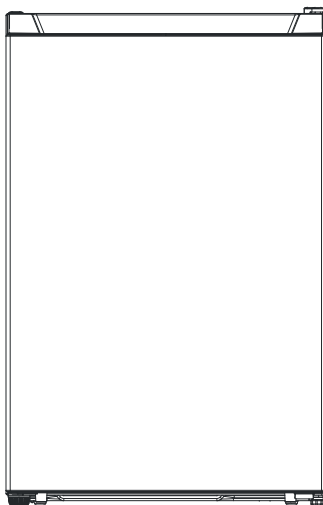

Before using your new product, please read these instructions to prevent any damage.

## Contents

Introduction .....	2
IMPORTANT SAFETY INSTRUCTIONS .....	3
Features .....	5
Package contents .....	5
Refrigerator parts .....	5
Setting up your refrigerator .....	6
Before using your refrigerator .....	6
Finding a suitable location .....	6
Leveling your refrigerator .....	6
Providing a proper power supply .....	7
Setting the thermostat .....	7
Reversing the door position .....	8
Maintaining your refrigerator .....	11
Cleaning your refrigerator .....	11
Defrosting your refrigerator .....	11
Shutting down your refrigerator .....	12
Moving your refrigerator .....	12
Tips on saving energy .....	12
Troubleshooting .....	13
Specifications .....	16
Disposal of the appliance .....	17
ONE-YEAR LIMITED WARRANTY - INSIGNIA .....	18

## Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-CF25BK5, NS-CF25BK5-C, or NS-CF25WH5 represents the state of the art in refrigerator design and is designed for reliable and trouble-free performance.

# IMPORTANT SAFETY INSTRUCTIONS

- For your safety and correct usage, please read these instructions carefully before using your new appliance to avoid unnecessary mistakes and accidents. Please ensure that all people using this appliance are familiar with its operation and safety features. Keep these instructions in a safe place for future reference and be sure that they are kept with the appliance in the event that it is moved or sold, so that everyone using it through its life will be properly informed on its correct usage and safety. The manufacturer is not responsible for damages caused by misuse. The appliance is for indoor and domestic use only.

## Electrical Safety

- The appliance must be plugged into its own dedicated 115V, 60Hz, AC-only electrical outlet. The power cord of the appliance is equipped with a three-prong grounding plug for your protection against electrical shock hazards. It must be plugged directly into a properly grounded three-prong receptacle. The receptacle must be installed in accordance with local codes and ordinances. Consult a qualified electrician. Avoid connecting the refrigerator to a Ground Fault Interrupter (GFI) circuit. Do not use an extension cord or adapter plug.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- Never unplug the refrigerator by pulling on the power cord. Always grip the plug firmly, and pull straight out from the receptacle to prevent damaging the power cord.
- Unplug the refrigerator before cleaning to avoid electrical shock.
- Performance may be affected if the voltage varies by 10% or more. Such damage is not covered under your warranty.
- Do not plug the unit into an electrical outlet controlled by a wall switch or pull cord to prevent the refrigerator from being turned off accidentally.



## Fire Hazard

The appliance contains a small quantity of refrigerant (R600a) which is environmentally friendly but potentially flammable in the refrigerant circuit.

## Safety for children and others who are vulnerable

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children to avoid risk of suffocation.
- If you are discarding your old appliance, pull the plug out of the socket, and cut the power cord (as close to the appliance as you can). Cut off the main plug and discard. Break off any old locks or latches as a safeguard and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.

## General safety and daily use

- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices, and other working environments
  - farm houses and by clients in hotels, motels, and other residential type environments

- bed and breakfast environments
- catering and similar non-retail applications
- Do not store flammable gases or liquids inside the refrigerator. There is a risk of an explosion.
- Do not operate any electrical appliances within the appliance (e.g. electric ice cream makers, mixers, etc.).
- When unplugging, always pull the plug from the outlet. Do not pull on the cord.
- Do not place hot items near the plastic components of this appliance.
- Do not place food products directly against the air outlet on the rear wall.
- Frozen food must not be refrozen after it has been thawed out.
- Store pre-packaged frozen food in accordance with the frozen food manufacturer's instructions.
- The appliance's manufacturer storage recommendations should be strictly adhered to. Refer to the relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Ice lollies (Popsicles) can cause frost burns if consumed straight from the freezer compartment.
- Do not place food directly against the air outlet inside the refrigerator.
- Do not place the appliance in direct sunlight.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

### Proper disposal of the refrigerator

Child entrapment and suffocation are not only problems of the past. Junked or abandoned refrigerators are still dangerous - even if they are sitting "for just a few days". If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

**WARNING: Risk of child entrapment. Before you throw away your old refrigerator or freezer:**

- Remove the doors.
- Leave the shelves in place so that children may not easily climb inside.
- Have the refrigerant removed by a qualified service technician.

Also see [Disposal of the appliance](#) on page 17.

# READ ALL INSTRUCTIONS BEFORE USING


## Features

- 3 glass shelves and in-door storage provide plenty of options
- Mechanical dial lets you choose from 3 temperature settings
- Reversible door hinge adjusts the fridge to your space
- Recessed handle makes for a smooth, clean look

## Package contents

- 2.5 cu. ft. compact refrigerator
- *User Guide*

## Refrigerator parts

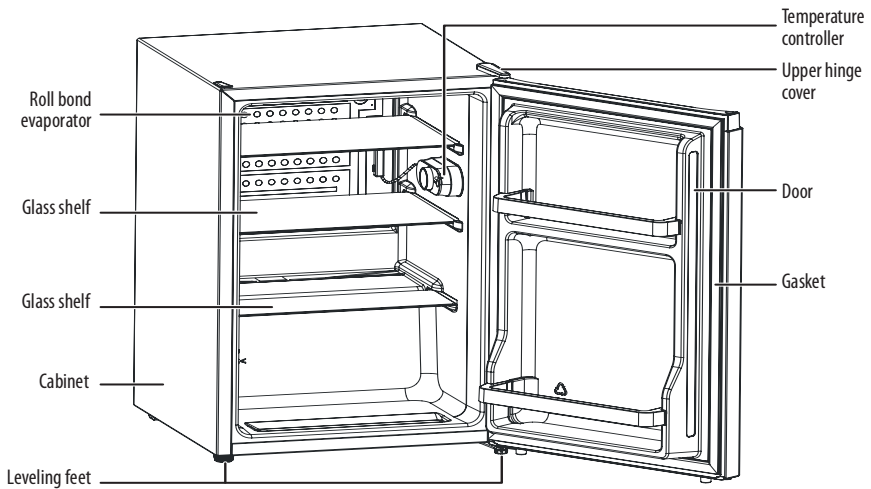

## Setting up your refrigerator

**WARNING:**

- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

**CAUTION:** Flammable refrigerant used! When handling, moving, and using of your refrigerator, avoid damaging the refrigerant tubing, which may increase the risk of a leak.

### Before using your refrigerator

- Remove the exterior and interior packing.



**WARNING:** The foam pad above the compressor is only suitable for transport and must be removed before use.

- Let your refrigerator stand upright for approximately two hours before connecting it to power. This reduces the possibility of a malfunction in the cooling system from improper handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth. See [“Cleaning your refrigerator”](#) on page 11 for more information.

### Finding a suitable location

- This refrigerator is designed to be free standing only, and should not be recessed or built-in.
- Place your refrigerator on a floor that is strong enough to support your refrigerator when it is fully loaded.
- Allow at least 3 in. (7.5 cm) of space between the wall and the back of your refrigerator, 4 in. (10 cm) at the sides and top, and a clear space at the front to open the doors. This allows for proper air ventilation.

**WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

- Place your refrigerator away from direct sunlight and sources of heat (stove, heater, radiator, and so on). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Ambient temperature below 55° F (12.8° C) or above 110° F (43.3° C) will hinder the performance of your refrigerator. This refrigerator is not designed for use in a garage or any other outside installation.
- Avoid placing your refrigerator in wet or moist areas.


### Leveling your refrigerator

- It is very important for your refrigerator to be level in order to function properly. If your refrigerator is not leveled during installation, the doors may not close or seal properly, causing cooling, frost, or moisture problems. Also, if the ground is uneven, the door will rub against the ground.


## Providing a proper power supply

Check your local power source. This refrigerator requires a 115V AC at 60Hz power supply. Use a receptacle that accepts the grounding prong. The power cord is equipped with a three-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this refrigerator.

Using a 3-prong plug and outlet

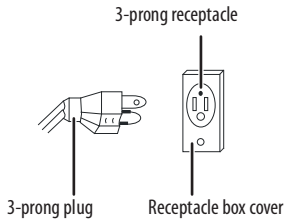

Using a grounding adapter

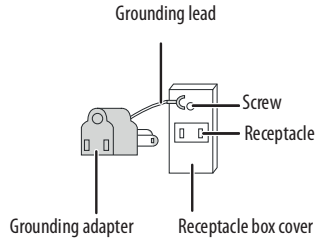


### Notes:

- Your refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.
- Never unplug your refrigerator by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.

## Setting the thermostat

Adjust the thermostat to set your refrigerator's temperature from 32° to 50° F (0° to 10° C).

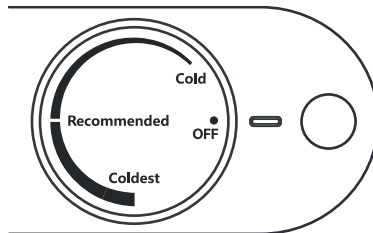

- 1 The first time you turn your refrigerator on, adjust the temperature setting to **"Recommended"** and let your refrigerator cool completely before putting food in. You can adjust it to a warmer or cooler setting, as needed.
- 2 Rotate the thermostat to adjust the temperature:
  - **OFF:** Turns your refrigerator off
  - **Cold:** Warmest temperature setting
  - **Recommended:** Moderate temperature - recommended
  - **Coldest:** Coldest temperature setting

**Notes:**

- The recommended temperature setting is **"Recommended."**
- Though your refrigerator is energy efficient, it is more efficient at lower temperature settings.
- Keep soda cans away from the refrigerator wall because the cans could freeze at the coldest temperature setting.
- If the thermostat is set to **"Coldest"** when the ambient temperature is high (such as on hot summer days), the compressor may run continuously. To properly defrost, the compressor needs to turn on and off periodically. Therefore, we advise you to set the refrigerator to a more moderate setting.

## Reversing the door position

You can change the side that the door opens on from the right side (as shipped) to the left side.

**You will need:** An 8 mm (5/16") socket driver, Phillips screwdriver, and a putty knife or flathead screwdriver



8 mm socket driver



Phillips screwdriver




Putty knife

OR



Flathead screwdriver


- Make sure that your refrigerator is unplugged and empty.
  - Have someone available to assist you in the process.
  - Keep all of the parts you remove to reuse them later.
- 1 Lay your refrigerator on its back to gain access to the base. You should rest your refrigerator on soft foam packaging or similar material to avoid damage to the cooling pipes on the back of your refrigerator.
  - 2 Open your refrigerator door and remove all the shelves inside the door.
  - 3 Remove the upper hinge cover with a putty knife or flathead screwdriver.
  - 4 Using a Phillips screwdriver, remove the two screws that hold the upper hinge to the right side of the cabinet top.

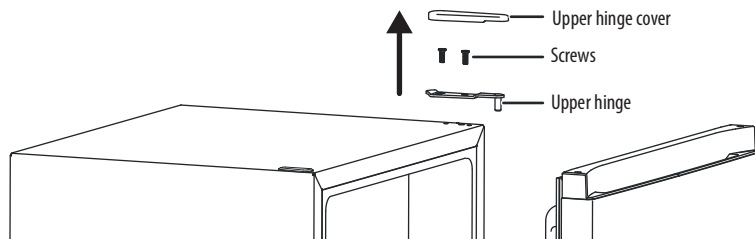


- 5 Carefully lift the door off and place it on a padded surface to prevent scratches,




- 6 Remove the screw securing the door stopper on the right side of the door and (using the same screw) install the stopper on the left side of the door.

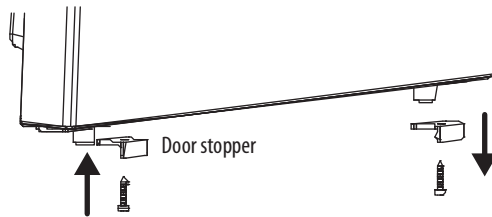


- 7 Remove the screw hole cover and push it firmly into the uncovered hole on the right side of your refrigerator.

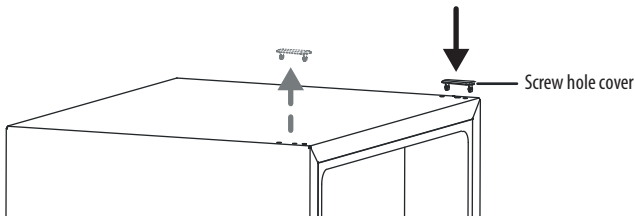


- 8 Using a Phillips screwdriver, remove the two screws that hold the lower hinge to the right side of the cabinet.

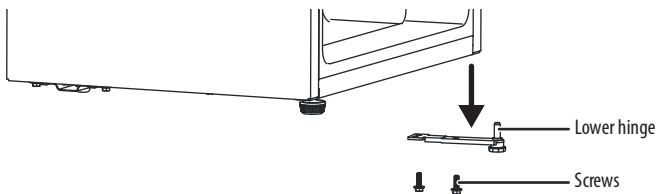


- 9 Remove the foot and transfer it to the right side of the cabinet.

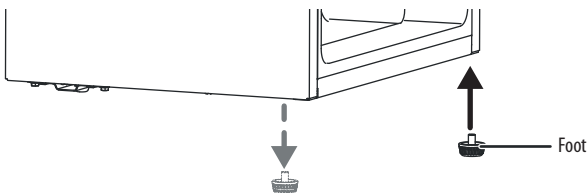


- 10 Loosely secure the lower hinge, but do not fully tighten the bolts until the door is in the closed position and leveled. Make sure that the space between door and the refrigerator body is approximately 7/16 in. (11 mm).

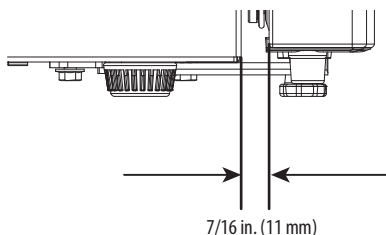


- 11 Replace the door, making sure the pin enters the bushing at the lower frame hole.

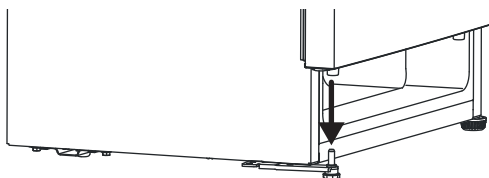

- 12 Secure the upper hinge (removed in step 4) to the left side of your refrigerator. Make sure that the pin enters the hole on the upper frame.

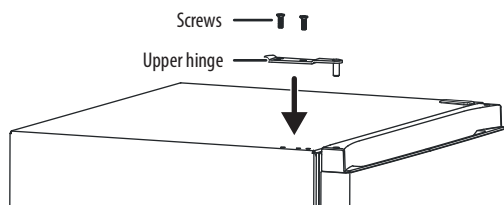

- 13 Replace the upper hinge cover (removed in step 3).

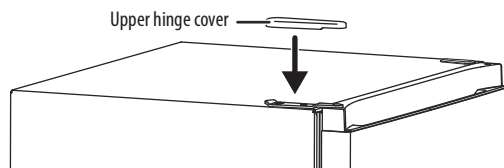

- 14 Lift your refrigerator upright again.

**CAUTION:** Let your refrigerator stand upright for approximately two hours before connecting it to power. This reduces the possibility of a malfunction in the cooling system.

- 15 Open the door and attach all shelves.

## Maintaining your refrigerator

Your refrigerator is designed for year-round use with only minimal cleaning and maintenance.

When you first receive it, wipe the case with a mild detergent and warm water, then wipe dry with a dry cloth. Do this periodically to keep your refrigerator looking new.

### Cleaning your refrigerator

For hygienic reasons, the inside of your refrigerator and its accessories should be cleaned every two months.

**WARNING:** Danger of electric shock.

- 1 Turn off your refrigerator and unplug it from the wall outlet.
- 2 Remove all food and store in a cool place.
- 3 Wash your refrigerator's interior and exterior with mild detergent and warm water, then wipe dry.

**WARNING:** Flammable refrigerant used. Do not damage the refrigerant circuit.

- 4 Wipe the door gasket (seal) clean to keep the unit running efficiently.
- 5 Once a year, carefully clean the condenser on the back of your refrigerator with a soft brush or vacuum cleaner to remove dust and debris that increases energy usage.
- 6 Check the water drain hole on the back wall inside your refrigerator compartment. If it's blocked, clear the drain hole with something like a pipe cleaner. Be careful not to damage the cabinet with sharp objects.
- 7 Dry the interior and exterior with a soft cloth.
- 8 Plug in the refrigerator's power cord and turn it back on.

**Caution:**

- Do not use harsh or abrasive cleaners.
- Do not use gasoline, benzine, thinner, or other similar solvents.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, and cleansers that contain acetic acid. Do not allow such substances to come into contact with appliance parts.
- Do not use razor blades or other sharp instruments, which can scratch the appliance surface when removing adhesive labels. Any glue left from the tape can be removed with a mixture of warm water and mild detergent, or touch the residue with the sticky side of tape already removed. Do not remove the serial plate.
- Do not clean your refrigerator with a steam cleaner. Moisture could accumulate in electrical components and hot vapors can damage plastic parts.

### Defrosting your refrigerator

Turn the temperature control knob to "**OFF**", then let the refrigerator defrost until there's no moisture on the evaporator. The evaporator is a hole at the back of the refrigerator in the middle of the third shelf. See "[Features](#)" on [page 5](#).

**CAUTION:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

## Shutting down your refrigerator

To prepare your refrigerator for long term storage or a long vacation:

- 1 Turn off your refrigerator and unplug it from the wall outlet.
- 2 Remove all food.
- 3 Clean and dry your refrigerator.
- 4 Leave the door open slightly to avoid possible formation of condensation, mold, or odor.

**WARNING:** Use extreme caution with children. The unit should not be accessible to child's play.

## Moving your refrigerator

- 1 Turn off your refrigerator and unplug it from the wall outlet.
- 2 Remove all food.
- 3 Securely tape down all loose items inside your refrigerator.
- 4 Tape the doors shut. Make sure that your refrigerator stays in the upright position during transportation.

## Tips on saving energy

- Do not open and close the door too often or leave the door open any longer than necessary.
- Do not set the temperature any colder than necessary.
- The illustration on page 5 shows the most energy efficient arrangement of shelves in your refrigerator. If you change this arrangement, you may sacrifice efficiency.
- Do not exceed the recommended storage period for your food.
- Locate your refrigerator in the coolest area of the room, away from heat producing appliances or heating ducts and out of the direct sunlight.
- Let hot foods cool before placing them in your refrigerator.
- Overloading your refrigerator forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil.
- Wrap foods properly and wipe containers dry before placing them in your refrigerator. This cuts down on frost build-up inside your refrigerator.
- Organize and label food to reduce door openings and extended searches.

## Troubleshooting

**Note:** Minor malfunctions may be caused by a fault that you can rectify yourself, using the following instructions. Do not perform any other work on your refrigerator if this troubleshooting table does not fix the problem.

**CAUTION:** Do not try to repair your refrigerator yourself. Doing so invalidates the warranty. Repairs should only be performed by qualified service personnel. Improper repairs can result in significant hazards for the user. If your refrigerator requires repair, contact your dealer or your local service center.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
My refrigerator does not operate.	Your refrigerator is turned off.	Make sure that the thermostat knob is not set to "0". If it is, change the setting to a higher number.
	Your refrigerator is unplugged.	Make sure that your refrigerator is plugged in and that the plug is pushed completely into the outlet.
	The fuse for the refrigerator circuit is blown or the breaker has tripped.	Make sure that the fuse is good or the circuit breaker is turned on.
	Power failure.	If a power failure occurs, your refrigerator turns off. Wait until the power is restored.
	The electrical outlet is defective.	Make sure that the electrical outlet is "live." If not, have an electrician correct the problem.
Food in my refrigerator compartment is not cold.	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	You have just added a large amount of food to your refrigerator.	Allow time for the new food to cool, then check again. Let hot foods cool before placing them inside your refrigerator.
	The thermostat is set too warm.	Adjust the thermostat to a colder setting.
	The door gasket does not seal properly.	Clean the gasket.
	Your refrigerator has recently been disconnected for a period of time.	Allow up to four hours for your refrigerator to cool completely.
	Your refrigerator is too close to a heat source.	See <a href="#">Finding a suitable location</a> on page 6.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The compressor turns on and off frequently or runs continuously.	The door has been opened too often or was not closed properly. The door seal may be dirty.	Make sure that the door is closed properly. Clean the door seal if necessary.
	The room temperature is hotter than normal.	This is normal, under the circumstances. Because the compressor needs to turn off occasionally to defrost, make sure not to set your refrigerator's temperature too low. If your refrigerator frosts too much, try a warmer temperature setting.
	A large amount of food was recently added to your refrigerator.	This is normal, under the circumstances. Let hot food cool before placing it inside your refrigerator.
	The thermostat is set too cold.	Set the thermostat to a warmer temperature.
	Your refrigerator does not have the correct clearances.	Leave at least 3 in. (7.5 cm) of space between the wall and the back of your refrigerator, and 4 in. (10 cm) at the sides and top for heat dissipation.
	Your refrigerator has recently been disconnected for a period of time.	Allow up to four hours for your refrigerator to cool down completely.
Food in my refrigerator compartment is freezing.	The thermostat is set too cold.	Set the thermostat to a warmer setting.
My refrigerator makes unusual noises or vibrations.	Your refrigerator may not be level on the floor.	Level your refrigerator with the leveling foot.
	The body of your refrigerator is touching a wall.	Move your refrigerator out from the wall.
	The compressor buzzes during operation (louder when turning on or off).	This is normal.
	The refrigerant is creaking or moaning.	This is a normal noise as the refrigerant passes through the cooling system.
	Accessories are misplaced.	Make sure that your refrigerator accessories are placed properly.
	The sound of ice cracking is caused by thermal expansion and cold contraction.	This is normal. You can manually adjust the thermostat to "0," then adjust to the appropriate setting until there is no water beading on the evaporator.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Moisture is building up in the interior of my refrigerator.	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	Your refrigerator is in a location that is very humid.	Move your refrigerator to a dryer location.
	The food in your refrigerator is not packaged properly.	Repackage the food in your refrigerator to make sure that it is sealed.
Moisture is building up on the exterior of my refrigerator.	The door may be slightly open.	Make sure that the door closes completely.
	The humidity is high.	This is normal. Just wipe the condensation with a clean towel.
My refrigerator door does not close completely.	Food packages are interfering with the door.	Move the food packages or remove some food.
	The shelves are out of position.	Adjust the shelves properly.
	The door gaskets are dirty.	Clean the door gaskets.
	Your refrigerator is not level.	Level your refrigerator with the leveling foot.
The exterior of my refrigerator is warm.	In the insulated walls of your refrigerator there is a heat exchanger coil. This produces heat.	This is normal. The longer your refrigerator runs the warmer the sides and top will get.
	The ambient temperature is too high.	Move your refrigerator to a cooler location.
	Too much food is being stored.	Remove some food from your refrigerator.
	Your refrigerator does not have the correct clearances.	Leave at least 3 in. (7.5 cm) of space between the wall and the back of your refrigerator, and 4 in. (10 cm) at the sides and top for heat dissipation.
The drip tray overflows.	There is too much food in your refrigerator, or the stored food contains too much water, causing heavy defrosting.	Remove excess food from your refrigerator.
	The doors are not properly closed.	Make sure that the door closes completely.
The door gasket (seal) is not tight.	The gasket is dirty.	Clean the door gaskets.
	Your refrigerator is not level.	Use the front leveling feet to level your refrigerator.
	The door seal (gasket) is aging.	Replace the door gasket.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
My refrigerator has a bad odor.	Odorous foods are not wrapped properly.	Make sure that you seal your food properly.
	Food is rotting.	Remove rotten food from your refrigerator.
	Your refrigerator is dirty.	Clean your refrigerator.
The compressor does not start immediately after changing the temperature setting.	This is normal.	The compressor will start after a set period of time.

Specifications

Dimensions (H × W × D)	27 5/16 × 17 1/2 × 18 1/2 in. (69.3 × 44.5 × 47 cm)
Weight	35.3 lbs. (16 kg)
Capacity	2.5 cu. ft. (.07 cu. m)
Temperature range	32° to 50° F (0° to 10° C)
Ambient temperature range	55° to 110° F (12.8° to 43.3° C)
Power cord length	61 in. (1.55 m)
Noise	40dB (A)
Power requirements	115V AC at 60Hz
Current	1A
Power consumption (annual)	230kWh/year
Refrigerant type	R600a
Garage ready	No
Energy Star certified	Yes



## Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.



**WARNING:** Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or a fire hazard. Make sure that the refrigerant tubing is not damaged prior to proper disposal.

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposing of this appliance:

- 1 Unplug it.
- 2 Cut off and discard the power cord.

## ONE-YEAR LIMITED WARRANTY - INSIGNIA

### Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

### How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

### Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

### What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance

- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2024 Best Buy. All rights reserved.

INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2024 Best Buy. All rights reserved.

V1 ENGLISH  
24-0287