

WiFi Connected Chest Freezer (12.2, 14.1, or 17.6 Cu.Ft.)

NS-CZ12XWH7/NS-CZ14XWH7/NS-CZ18XWH7



Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	2
Important Safety Instructions.....	3
Grounding requirement.....	5
Features	5
Package contents	5
Exterior (NS-CZ14WH7 shown)	6
Touch pad controls	6
Setting up your freezer	7
Before using your freezer.....	7
Finding a suitable location	7
Leveling your freezer.....	7
Providing a proper power supply	8
Using your freezer.....	8
Locking and unlocking the control panel	9
Quick Freezing foods.....	9
Switching between Fahrenheit and Celsius	9
Connecting your freezer to WiFi (optional)	10
Using the Insignia Connect app	11
Defrosting your freezer.....	12
Maintaining your freezer	13
Storing your freezer	13
Moving your freezer.....	13
Tips on saving energy	14
Understanding Alerts	14
High Temp Alert	14
Door Open Alert	15
How do I reset WiFi on my freezer?.....	15
Troubleshooting	15
General.....	16
WiFi, app, and control panel.....	17
Specifications	18
ONE-YEAR LIMITED WARRANTY	19

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-CZ12XWH7, NS-CZ14XWH7, or NS-CZ18XWH7 represents the state of the art in chest freezer design and is designed for reliable and trouble-free performance.

Important Safety Instructions



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your freezer.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your freezer.

WARNING

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this appliance near water.
- 6 Clean only with damp cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- 11 Do not attempt to modify or extend the power cord of this appliance.
- 12 Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- 13 Make sure that the available AC power matches the voltage requirements of this appliance.

- 14 Do not handle the plug with wet hands. This could result in an electric shock.
- 15 Unplug the power cord by holding the plug, never by pulling the cord.
- 16 Do not turn the appliance on or off by plugging or unplugging the power cord.
- 17 Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 18 To reduce the risk of fire or electric shock, do not expose this appliance to rain, moisture, dripping, or splashing, and no objects filled with liquids should be placed on top of it.



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.

- 1 **WARNING**—Keep ventilation openings, in both the freezer and the built-in structure, clear of obstruction.
- 2 **WARNING**—Do not touch the interior of the freezer with wet hands. This could result in frost bite.
- 3 **WARNING**—Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 4 **WARNING**—Do not damage the refrigerant circuit.
- 5 **WARNING**—Do not damage the refrigerant tubing when handling, moving, or using the freezer.
- 6 **WARNING—DANGER**—Never allow children to play with, operate, or crawl inside the freezer.
Risk of child entrapment. Before you throw away your old freezer, remove the lid.
- 7 Unplug the freezer before carrying out user maintenance on it.
- 8 This freezer can be used by children age eight years and older and persons with reduced physical or mental capabilities or lack of experience and knowledge if they are given supervision or instruction concerning the use of the freezer in a safe way and understand the hazards involved. Children should not play with the freezer. Cleaning and maintenance should not be performed by children without supervision.

- 9** If a component part is damaged, it must be replaced by the manufacturer, its service agent, or similar qualified persons in order to avoid a hazard.
- 10** Please dispose of the freezer according to local regulations as the freezer contains flammable gas and refrigerant.
- 11** Follow local regulations regarding disposal of the freezer due to flammable refrigerant and gas. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- 12** This freezer is intended to be used in household and similar environments.
- 13** Do not store or use gasoline or any flammable liquids inside or in the vicinity of this freezer.
- 14** Do not use extension cords or ungrounded (two-prong) adapters with this freezer. If the power cord is too short, have a qualified electrician install an outlet near the freezer. Use of an extension cord can negatively affect the freezer's performance.

Grounding requirement

This freezer must be grounded. This freezer is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the freezer is properly grounded.


Features

Package contents


- 12.2, 14.1, or 17.6 cubic foot chest freezer
- Storage basket
- *Quick Setup Guide*

INSIGNIA™

Exterior (NS-CZ14WH7 shown)

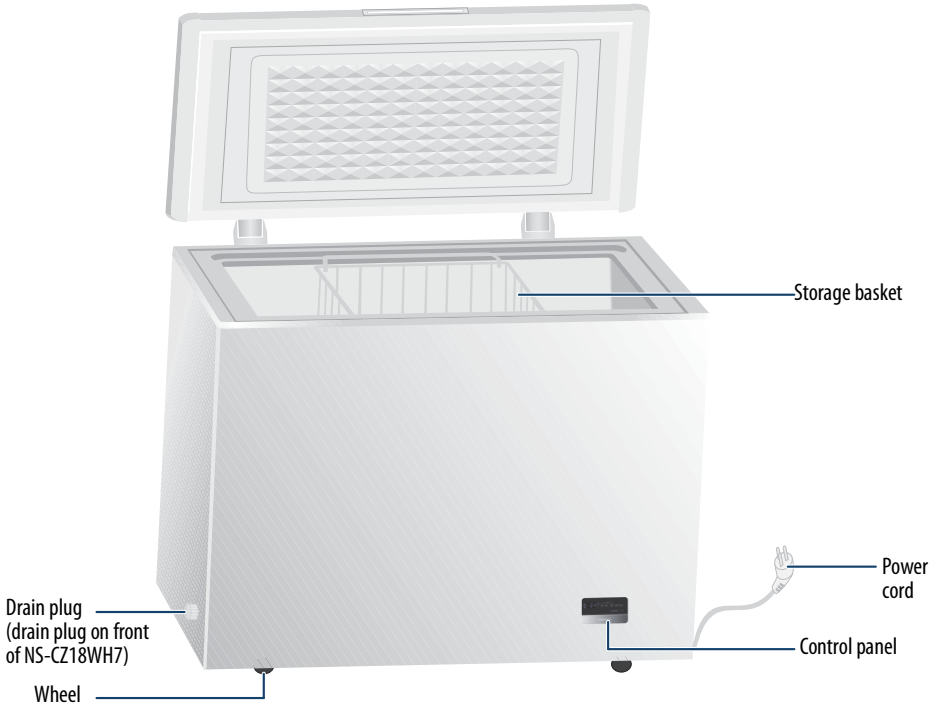

Touch pad controls

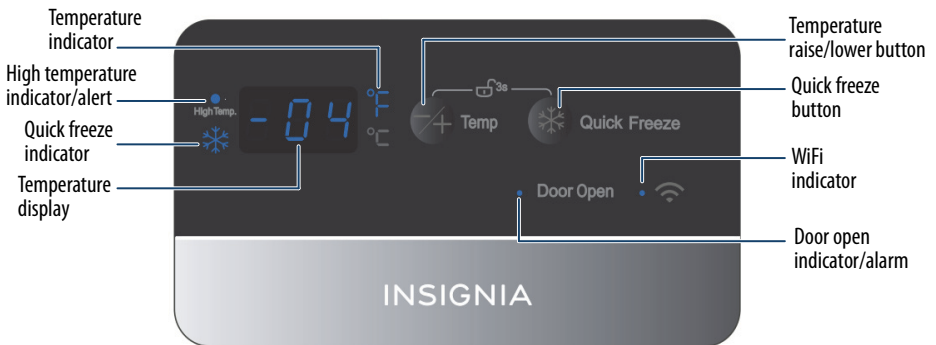

Setting up your freezer

Before using your freezer

- Remove the exterior and interior packing, especially the foam packing between the outside condenser and the cabinet.
- Let the freezer stand upright for approximately two hours before connecting it to power. This reduces the possibility of a malfunction in the cooling system from improper handling during transportation.
- Wash the inside with a damp, warm cloth and a baking soda solution (two tablespoons in a quart of water), then wipe dry with a dry cloth. Do this periodically to keep your freezer looking new.
- For proper operation, it's very important that you level the freezer using the leveling feet. If this is not done, the door may not close or seal properly, causing cooling, frost, and moisture problems. Turn the leveling feet clockwise to raise that side of the freezer or counterclockwise to lower that side. The leveling feet are easier to adjust if you have someone push against the top of the freezer to take some weight off.
- When moving your freezer, do not tilt it beyond 45° from upright.

Finding a suitable location

- Place your freezer on a floor that is strong enough to support the freezer when it is fully loaded.
- This freezer is designed to be free standing only, and should not be recessed or built-in.
- Allow 7.9 inches (20 cm) of space between the sides of the freezer and the walls, 3.9 inches (10 cm) between the back of the freezer and the wall. This allows for proper air ventilation. Adjust the feet to keep the freezer level.
- If you locate the freezer next to a fixed wall, allow sufficient space on the hinge side for the door to swing open.
- Locate the freezer away from direct sunlight and sources of heat, such as a stove, heater, or radiator. Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extremely cold temperatures may also prevent the freezer from performing properly.
- Avoid locating the freezer in moist areas.
- If your freezer is located too far from your WiFi router, the signal may be too weak for a good connection. In such cases, a WiFi range extender will improve connectivity.

Leveling your freezer

- It is very important for the freezer to be level. If the freezer is not leveled during installation, the door may not close or seal properly, causing cooling, frost, or moisture problems.

- To level your freezer, rotate the leveling feet clockwise (to raise) the freezer or counter-clockwise (to lower).

Note


Have someone push against the top of the freezer to help take some weight off the leveling foot, making it easier to adjust.

Providing a proper power supply


Check your local power source. This freezer requires a 115V, 60Hz power supply.

Use a receptacle that accepts the grounding prong. The power cord is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this freezer. We recommend that the freezer be plugged into an electrical circuit serving only this appliance and that the circuit cannot be turned off with a switch or pull-chain.

Using a 3-prong plug and outlet

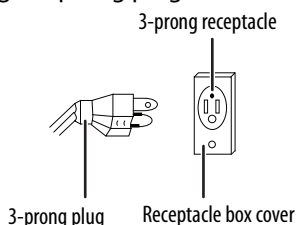

Using a grounding adapter

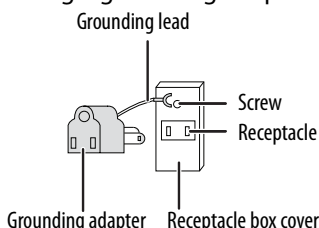

Using your freezer

The storage life of frozen foods varies and the recommended storage time should not be exceeded.

Place frozen food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow these instructions regarding storage times.

Pre-packed, commercially frozen food should be stored in accordance with the frozen food manufacturer's instructions for a three star frozen food storage compartment or home freezer.

- 1 Plug in your freezer. Wait for 30 minutes, then open the freezer door to determine if the freezer is working properly.
- 2 Press the +/- and **Quick Freeze** buttons at the same time for three seconds on the control panel touch pad to unlock the control panel, then press +/- to set the temperature inside the freezer. The temperature loops to the maximum setting when the minimum setting is reached.

The default temperature is 0° F (-18° C). The temperature range is 10° F ~-11° F (-12° C ~-24° C).

Notes

- If the freezer is unplugged or loses power, you must wait three to five minutes before restarting it. The freezer will not start if you attempt to restart it sooner.
- Large amounts of food lower the cooling efficiency of the freezer.
- If you choose to change the thermostat setting, adjust the thermostat control by one increment at a time. Allow several hours for the temperature to stabilize between adjustments.
- Do not put bottled food or drinks in the freezer.

Locking and unlocking the control panel

To prevent accidental activation, the control panel automatically locks after 30 seconds of inactivity. To use the control panel, you must unlock it first.

Press and hold the +/- and **Quick Freeze** buttons at the same time for three seconds to lock the control panel. The lock icon turns on. Press again for another three seconds to unlock it. The lock icon turns off.

Quick Freezing foods

The quick freeze mode lowers the temperature below the normal operating temperature to quickly freeze foods. Press the **Quick Freeze** button to enter quick freeze mode. The blue snowflake turns on. You can only use the control panel to quick freeze foods. You cannot use the Insignia Connect App.

The quick freeze mode turns off after three hours, if the temperature falls below -13° F (-25° C). If the temperature does not fall below -13° F (-25° C), the quick freeze mode turns off after 24 hours. You can press the button a second time to exit quick freeze mode.

Switching between Fahrenheit and Celsius

Using the Control Panel on the freezer

- 1 Press and hold +/- and **Quick Freeze** for three seconds to unlock the control panel.
- 2 Press and hold +/- for three seconds to switch settings.

Using the App

- Tap **Edit**, then tap the slider next to **Temperature Unit** to switch settings.

Connecting your freezer to WiFi (optional)

Download the Insignia Connect app from the Apple App Store or Google Play Store to use additional features, such as open-door and temperature alerts. App download is optional – your freezer works normally without it!

- 1 Make sure that your mobile device is connected to your preferred WiFi network.
- 2 Download and open the free Insignia Connect Device app from the App Store or Google Play. (Apple: iOS 9 or later, Android: 6.0.1 Marshmallow or later).




- 3 Log in or sign up for a Best Buy or Insignia Connect Device account.
- 4 On your freezer, press and hold the +/- and **Quick Freeze** buttons for three seconds to unlock the control panel.
- 5 Press and hold the **Quick Freeze** button for five seconds until you see "0" on the control panel.
- 6 Press +/- once. "AP" is displayed.
- 7 In the app, tap **Set Up Device**, then follow the on-screen directions to complete setup.

Note


- You may need to repeat steps 4-6 to put the freezer back into AP mode if the app cannot find your freezer.
- Your freezer uses the 2.4 GHz WiFi spectrum. If your router provides both 2.4 GHz and 5 GHz bands, select the network corresponding to the 2.4 GHz band.

Using the Insignia Connect app

When you open the app on your smartphone, the following screen is displayed.

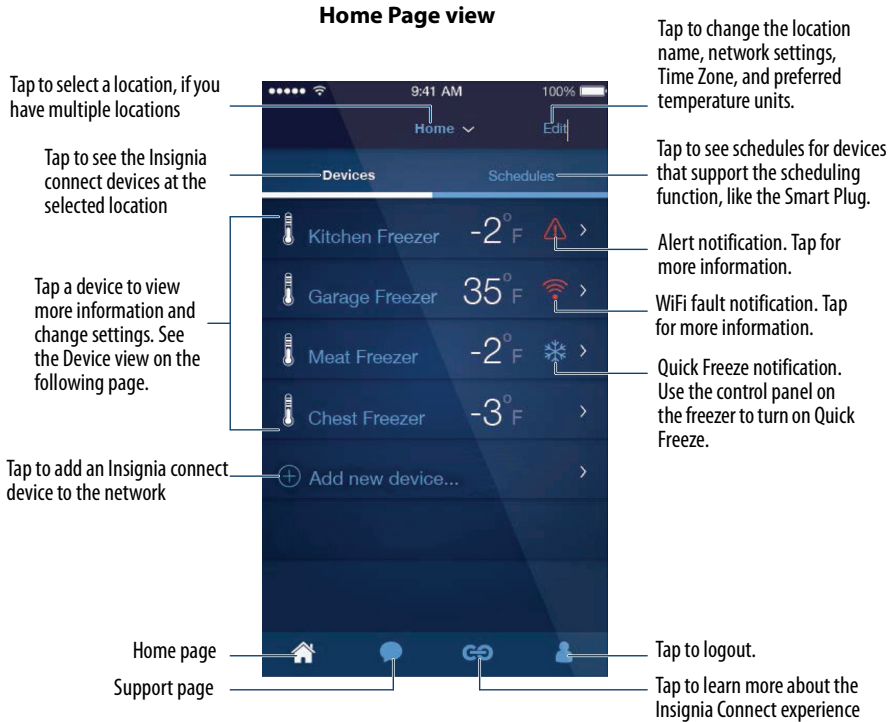

Device view

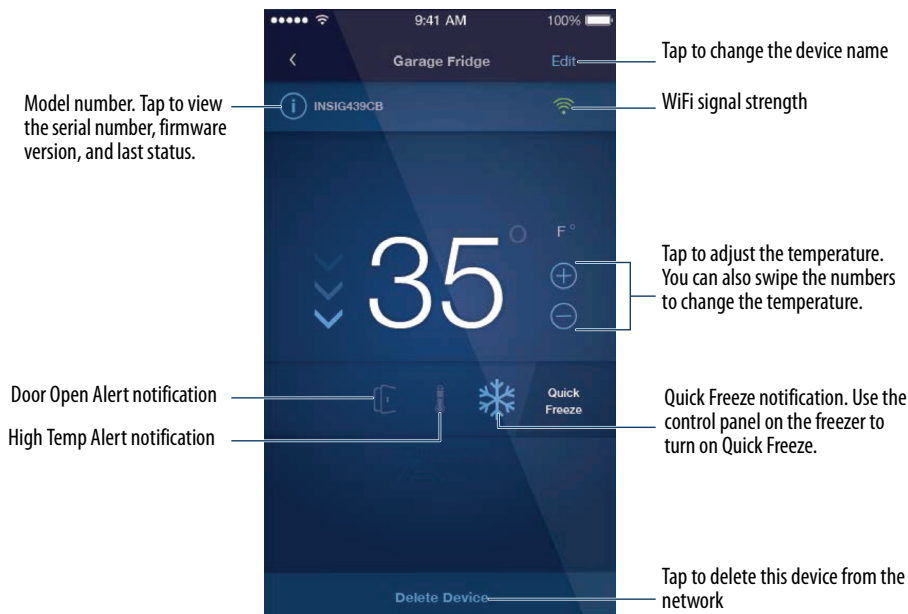

Defrosting your freezer

For your freezer to operate most efficiently and with minimum energy consumption, it should be defrosted when the frost on the freezer walls is in excess of .12 to .20 inches (3 to 5 mm) thick. To minimize food spoilage, choose a time when your stock of frozen food is low.

The instructions regarding the care of frozen foods should be followed when defrosting the freezer. Defrosting usually takes a few hours. Leaving the door open helps speed the process.

Cautions

- Do not use boiling water to defrost your freezer because it may damage the plastic parts. You can use warm water to speed up the process.
- Never use a sharp or metallic instrument to remove frost as it may damage the cooling coils and will void the warranty.

- 1 Remove the frozen food from your freezer and place it in a refrigerator or cooler to protect the food.
- 2 Unplug the power cord from the wall outlet.
- 3 When your freezer has defrosted, clean the interior of the freezer.

- 4 Reset the thermostat to the desired setting, then allow the freezer to cool for one hour.
- 5 Return the food to the freezer.

Maintaining your freezer

Your freezer is designed for year-round use with only minimal cleaning and maintenance. We recommend that you do the following every time you defrost it to keep your freezer running odor free and efficiently:

Caution

To prevent damage to the finish, do not use gasoline, benzine, thinner, or other solvents, and do not use abrasive cleaners.

- 1 Unplug your freezer from the wall outlet.
- 2 Remove all food.
- 3 Wash the inside with a damp warm cloth soaked in a solution of one quart of lukewarm water to two tablespoons of baking soda solution.
- 4 Dry the interior and exterior with a soft cloth.
- 5 Be sure to keep the door gasket (seal) clean to keep the unit running efficiently.

Storing your freezer

- 1 Unplug your freezer from the wall outlet.
- 2 Remove all food.
- 3 Clean the freezer.
- 4 Leave the door open slightly to avoid possible formation of condensation, mold, or odor.

Caution

Use extreme caution with children. The unit should not be accessible to child's play.

Moving your freezer

- 1 Unplug your freezer from the wall outlet.
- 2 Remove all food.
- 3 Securely tape down all loose items inside your freezer.
- 4 Tape the door shut.
Be sure the freezer does not tilt more than 45° from the upright position during transportation.

Tips on saving energy

- Locate your freezer in the coolest area of the room, away from heat producing appliances or heating ducts and out of the direct sunlight.
- Let hot foods cool to room temperature before placing them in the freezer. Overloading the freezer forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil.
- Wrap foods properly and wipe containers dry before placing them in the freezer. This cuts down on frost build-up inside the freezer.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Understanding Alerts

A notification appears on your smartphone when an alert is triggered.

High Temp Alert

The freezer is having trouble maintaining a cold temperature. You will get this alert if the inside temperature is over 18° F (-8° C) for 36 hours. The LED on the control panel turns on. If the temperature returns to a normal range, the alert turns off. You can also press any button to turn it off. Here are some possible causes:

- The room is too warm. For example, the freezer is in a garage in the summer next to a car with a hot engine.
- The ventilation openings are blocked or dusty.
- There is too much frost build up.
- There are door seal gaps.

Temp Out of Range Alert

The freezer is having trouble maintaining its temperature. You will get this alert if internal temperature is at least 12.6° F (7° C) different from the temperature you set, 42 hours after you shut the door. If the temperature returns to a normal range, the alert turns off. You can also press any button to turn it off. Here are some possible causes:

- The room is too warm or cold. Adjust the room temperature.
- The ventilation openings are blocked or dusty.
- There is too much frost build up.
- There are door seal gaps.

Door Open Alert

If the door is open for more than five minutes, the door open alert is activated. Close the door to turn off the alert and check to make sure that nothing is blocking the door, preventing it from closing. Also, check to make sure that the freezer is level. An unlevel freezer may prevent the door from closing properly.

How do I reset WiFi on my freezer?

- 1 Press and hold the **-/+** and **Quick Freeze** buttons for three seconds to unlock the control panel.
- 2 Press and hold the **Quick Freeze** button for five seconds until you see "0" on the control panel.
- 3 Press **+/-** once. "AP" is displayed.
- 4 In the app, tap **Set Up Device**, then follow the on-screen directions to complete setup.

How do I reset my freezer to factory defaults?

- 1 Press and hold **-/+** and **Quick Freeze** for three seconds to unlock the control panel.
- 2 Press and hold the **Quick Freeze** button for five seconds until you see "0" on the control panel.
- 3 Press **-/+** until "2" is displayed.
- 4 Press and hold **-/+** and **Quick Freeze**. All of the indicators turn on for three seconds. If the compressor is running, it pauses for five minutes, then restarts.

Troubleshooting

Caution

Do not try to repair your freezer yourself. Doing so invalidates the warranty.

Fault indication

If a fault is detected, the display shows one of the following codes. If a fault is indicated, call for service:

Fault code	E2	E7
Description	Temperature sensor fault	Ambient Temperature sensor fault

General

Problem	Possible cause	Possible solution
I got an alert		See "Understanding Alerts" on page 14.
The freezer does not operate	The freezer is unplugged.	Make sure that the freezer is plugged in and that the plug is pushed completely into the outlet.
	The fuse on the circuit is blown or the circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the circuit breaker.
	Power failure.	If a power failure occurs, the freezer turns off. Wait until the power is restored.
The freezer door does not close completely	Food packages are interfering with the door.	Move the food packages or remove some food.
	The door gaskets are dirty.	Clean the door gaskets.
	The freezer may not be level.	Level the freezer.
Food in the freezer is not cold	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	You have just added a large amount of food to the freezer.	Allow time for the new food to cool, then check again.
	The door is not closed completely.	Check the door gasket and food distribution and make sure that the door closes completely.
	The freezer has recently been disconnected for a period of time.	Allow time for the freezer to cool before adding food. Four hours are required for the freezer to cool down completely.
	The thermostat is set too warm.	Set the thermostat to a colder setting.
The freezer makes unusual noises or vibrations	The freezer may not be level on the floor.	Level the freezer with the leveling feet.
	The body of the freezer is touching a wall.	Move the freezer out from the wall.
	Metal parts undergo expansion and contraction.	This is normal.
	Refrigerant is circulating throughout the system.	This is normal.
Moisture is building up in the interior of the freezer	The door has been opened too often or was not closed properly.	Make sure that the door is closed properly.
	The freezer is in a location that is very humid.	Move the freezer to a dryer location.
	The weather is hot and humid.	This is normal.

Problem	Possible cause	Possible solution
The compressor turns on and off frequently	The room temperature is hotter than normal.	This is normal.
	You have just added a large amount of food to the freezer.	Allow time for the new food to cool, then check again.
	The door is not closed completely or was opened too often.	Check the door gasket and food distribution and make sure that the door closes completely.
	The freezer has recently been disconnected for a period of time.	Allow time for the freezer to cool before adding food. Four hours are required for the freezer to cool down completely.
	The thermostat was not set correctly.	Set the thermostat to the correct setting.

WiFi, app, and control panel

Problem	Possible cause	Possible solution
My mobile device cannot connect to WiFi		<ul style="list-style-type: none"> • Check the WiFi settings on your mobile device to make sure that WiFi is turned on. • Make sure that you selected the right network and entered the correct password. • Make sure that your router/modem is on and that you are within range of it. • Turn your mobile device off, then back on. • Reset your router/modem.
The control panel of the freezer is unresponsive	The control panel is locked.	Press and hold the +/- and Quick Freeze buttons for three seconds to unlock the control panel.
I could not find the Insignia app in the app market		The Insignia app is available for smartphones that run iOS 9 or later, or Android: 6.0.1 Marshmallow or later.
The Insignia app is successfully connected to my freezer, but does not run	Possible connection problems.	<ul style="list-style-type: none"> • Exit and restart the Insignia app or reboot your router. • Unplug your freezer and plug it back in after one minute.
The freezer won't connect to WiFi		<ul style="list-style-type: none"> • Make sure that you selected the right network and entered the correct password. • Make sure Caps Lock is not on. • Make sure your router/modem is on and that you are within range of it. • Reset your router/modem.

Problem	Possible cause	Possible solution
The app cannot find the freezer		<ul style="list-style-type: none"> • Make sure that your freezer is connected to a working power outlet. • Make sure that the blue light next to the WiFi symbol is on. If it is off, go to "How do I reset WiFi on my freezer?" on page 15. • Make sure that your network is working properly. • Make sure that your router/modem is on and that you are within range of it.
I got an alert that I have a weak signal		<ul style="list-style-type: none"> • Make sure that your router/modem is on. • Your router may be too far away or may be obstructed. Adjust the router's antennas or move the router (if possible). You may need to purchase a range extender to boost the signal.

Specifications

Dimensions (WxDxH)	12.2 Cu.ft. -- 49.4 x 27.1 x 34.1 in (125.4 x 68.7 x 86.5 cm) 14.1 Cu.ft. -- 56.1 x 27.1 x 34.1 in (142.4 x 68.7 x 86.5 cm) 17.6 Cu.ft. -- 64.6 x 28.4 x 34.5 in (164 x 72 x 87.5 cm)
Weight	12.2 Cu.ft. -- Gross weight: 121.3 lbs (55kg) Net weight: 103.6 lbs (47kg) 14.1 Cu.ft. -- Gross weight: 141.1 lbs (64kg) Net weight: 114.6 lbs (52kg) 17.6 Cu.ft. -- Gross weight: 165.3 lbs (75kg) Net weight: 141.1 lbs (64kg)
Power requirements	110-125 V~60Hz
Current	12.2 Cu.ft. -- 0.8A 14.1 Cu.ft. -- 1.2A 17.6 Cu.ft. -- 1.6A
Power consumption (annual)	12.2 Cu.ft. --264kWh/year 14.1 Cu.ft. --288kWh/year 17.6 Cu.ft. --333kWh/year

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca, and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of refrigerator or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse

- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2016 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2016 Best Buy. All rights reserved.
Made in China.

V1 ENGLISH
16-0448